

PUMPKIN DOOR KNOCKER

Wall Mounting & Operating Instructions:

1. Remove your existing picture from your wall.
2. Replace the demo batteries with 3 brand new "AA" alkaline batteries. (remove 'TRY ME' wire if applicable)
3. Hang Pumpkin Door Knocker™ on the nail. Check to make sure your nail is securely inserted into the wall before hanging up Pumpkin Door Knocker™.
4. Turn switch (located on the back) to the 'ON' position.
5. Clap or make a loud sound to activate Pumpkin Door Knocker™ in sound activation mode. To activate in motion mode, simply walk past Pumpkin Door Knocker™.
6. Leave the switch in the 'OFF' position when not in use to preserve the life of the battery.

For use with an Overdoor/Wreath Hanger:

1. Hang the overdoor/wreath hanger over the top of your door.
2. Insert the hanger hook into the opening on the back of the Pumpkin Door Knocker™.

SAFETY WARNING: This item is not a toy. For decoration purposes only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. NOT intended for use by children 14 years of age and younger.

ALL NEW MATERIALS: PLASTIC, METAL, FOAM

SURFACE WASHABLE ONLY.



FOR DEMONSTRATION PURPOSES ONLY.

PUMPKIN DOOR KNOCKER™ is a trademark of Tekky Toys. Copyright 2013 Tekky Toys. All Rights Reserved. MADE IN CHINA



SPIRITHALLOWEEN.COM

