



ELECTRIC CANDY BOWL™

AGES
15+

**FILL WITH CANDY* FOR A SCARY SURPRISE!
YOUR "FIENDS" WILL REALLY GET A CHARGE
OUT OF THE ELECTRIC CANDY BOWL™!**

MOTION ACTIVATED

OPERATING INSTRUCTIONS

**KEEP ALL PLASTIC AND WIRE PARTS
AWAY FROM CHILDREN**

1. Using a small Philips/crosshead screwdriver, remove screw on bottom of BOWL to insert 3 brand new "AA" alkaline batteries into the battery compartment. Replace cover and screw.
2. Fill BOWL with Halloween candy*.
3. Place switch on bottom of BOWL to the "ON" position to operate in motion activation mode.
4. Reach into the ELECTRIC CANDY BOWL™...if you dare! Any motion inside the BOWL will activate the scary sequence!

NOTE: Keep switch in the "OFF" position when not in use.

*Candy not included

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

SURFACE WASHABLE ONLY.

All new materials: plastic.

Item #59107. ELECTRIC CANDY BOWL™

is a trademark of Tekky.

Copyright © 2021 Tekky. All Rights Reserved.

Manufactured for: Tekky, Orland Park, IL 60467 USA


MADE IN CHINA

TekkyDesign.com

BAA BATTERIES REQUIRED
(not included)

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Batteries are harmful if swallowed, so keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

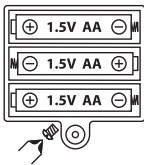

WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.