

2 Heads are deader than 1 Cindy and Sally debate your demise! Crazy supernatural sounds! Evil glowing LED eyes!

MOTION ACTIVATED

OPERATING INSTRUCTIONS KEEP ALL PLASTIC AND WIRE PARTS AWAY

FROM CHILDREN

- 1. Carefully remove and discard the "Try Me" wire and packaging.
- 2. Insert 3 brand new "AAA" alkaline batteries into the battery compartment located inside back of dress.
- 3. Place switch on the module to the "ON" position.
- 4. Wave your hand in front of FREAKSHOW 2-HEADED COFFIN DOLL™ to activate scary sequence! NOTE: Keep the switch in the "OFF" position when not in use

FOR INDOOR LISE SURFACE WASHABI F ONLY All new materials: plastic, fabric, wire,

TekkvDesign.com

BATTERY INSTRUCTIONS AND CAUTIONS

"AAA" 1.5V 1.5V 5

"AAA"

- · Battery installation and removal should be performed by an adult.
- · Remove batteries when not in use.
- · Use only batteries recommended in the instructions
- · Do not mix new and used batteries.
- · Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- · Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- · Remove all exhausted batteries.
- · Rechargeable batteries are only to be charged under adult supervision.
- · Rechargeable batteries are to be removed from the item before being charged.
- · Non-rechargeable batteries are not to be recharged.
- . The supply terminals are not to be short-circuited.
- · Always dispose of exhausted batteries properly.
- . Do NOT dispose of batteries in fire, they may leak or explode.

↑ WARNING! CHOKING HAZARD—Small Parts. This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.



Item #58680 FREAKSHOW 2-HEADED COFFIN DOLL™ is a trademark of Tekky. Copyright @ 2020 Tekky. All Rights Reserved.



Manufactured for and distributed by: Tekky, Orland Park, IL 60467 USA MADE IN CHINA