

ICE SCREAM CLOWN™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

ESTIMATED ASSEMBLY TIME SEVEN MINUTES.


PARTS

1.




HEAD AND BODY

2.

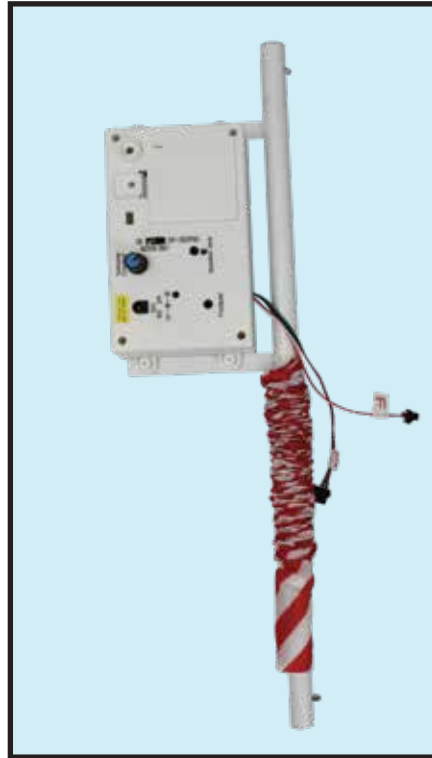


UPPER POLE AND
MODULE

3.

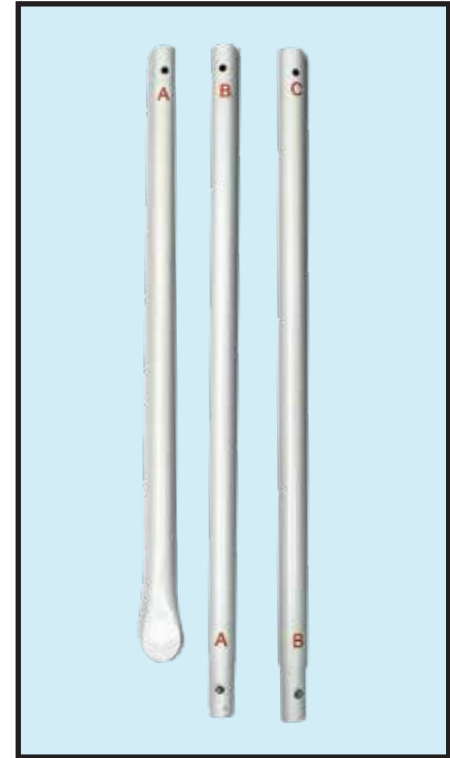


LOWER POLES

ASSEMBLY

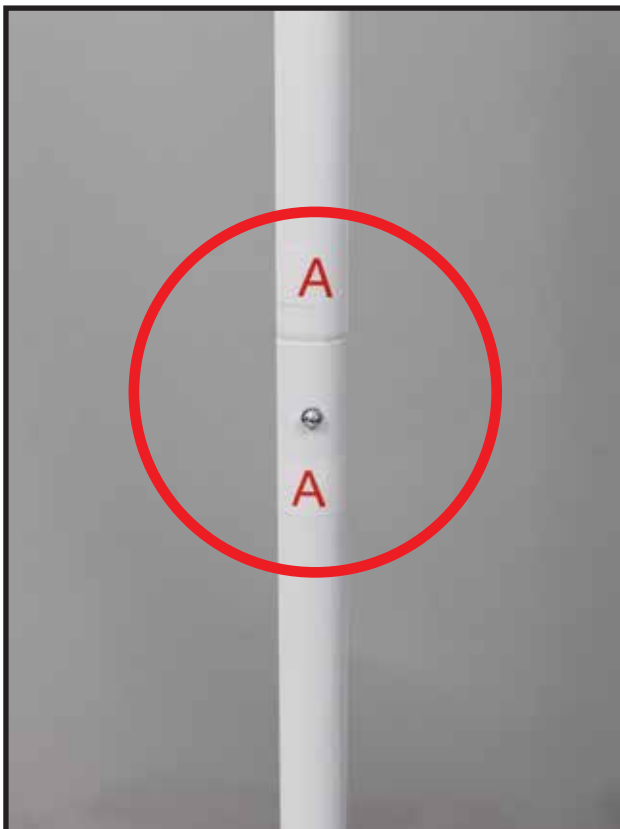


1. Snap lock the bottom POLE (with stake) to the LOWER POLE labeled A.

MATCH A TO A

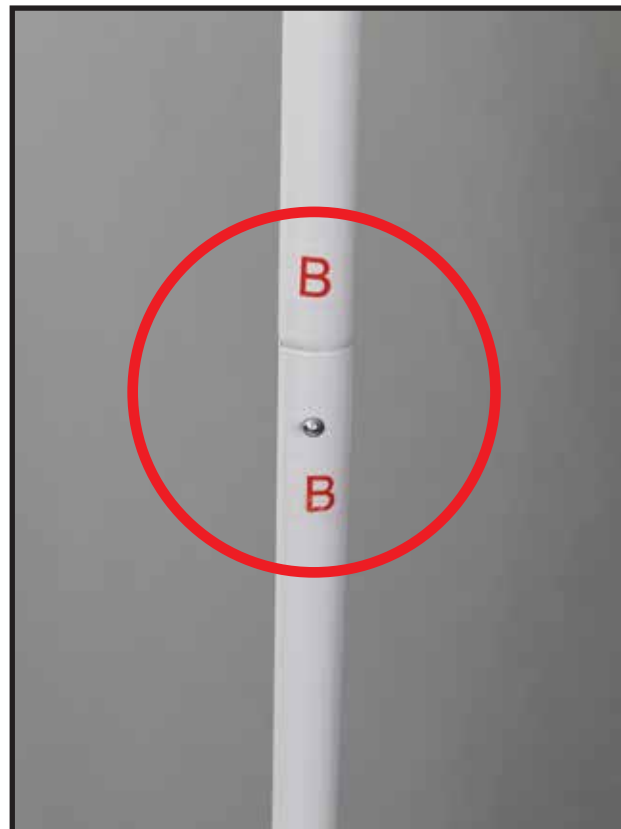


2. Snap lock the LOWER POLE labeled A to the LOWER POLE labeled B.

MATCH B TO B

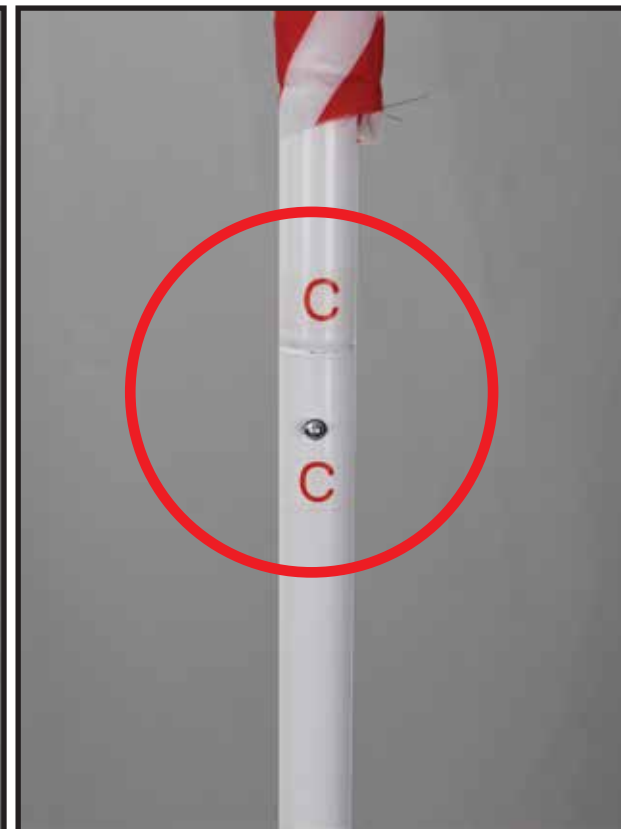


3. Snap lock the LOWER POLES to the UPPER POLE AND MODULE labeled C.

MATCH C TO C

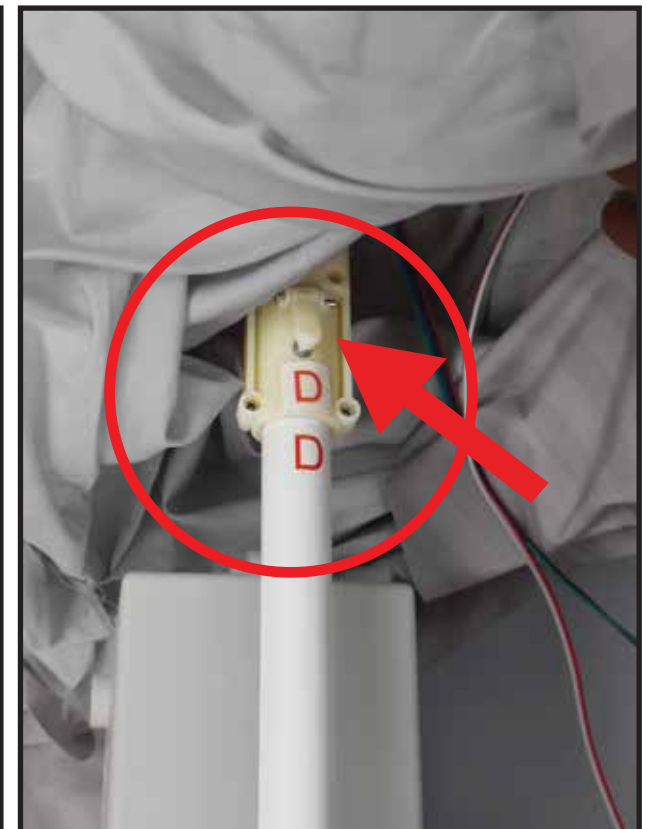


4. Snap lock the UPPER POLE AND MODULE to the HEAD AND BODY. Push ball snap lock release lever to disassemble poles.

MATCH D TO D

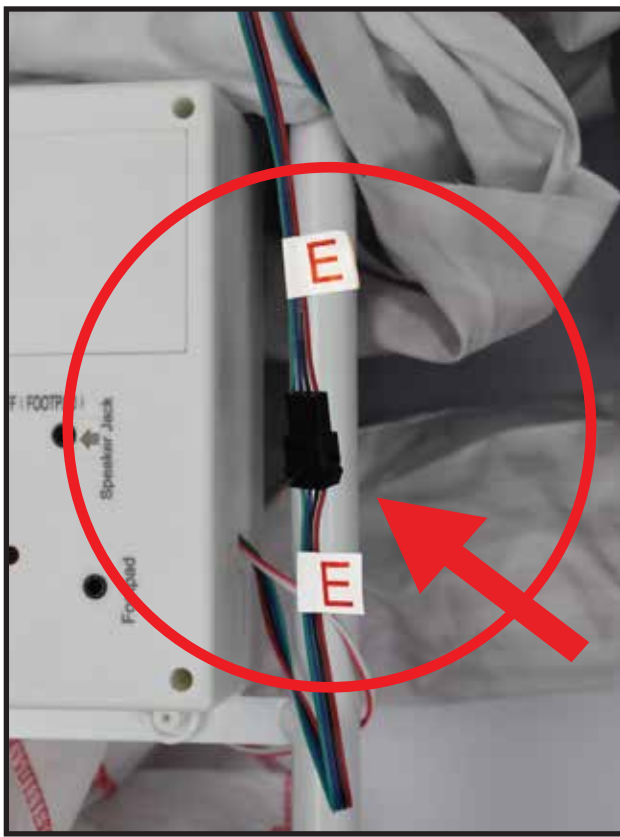


5. Connect the wire bundle on the CONTROL BOX to the wire bundle on the HEAD AND BODY.

MATCH E TO E

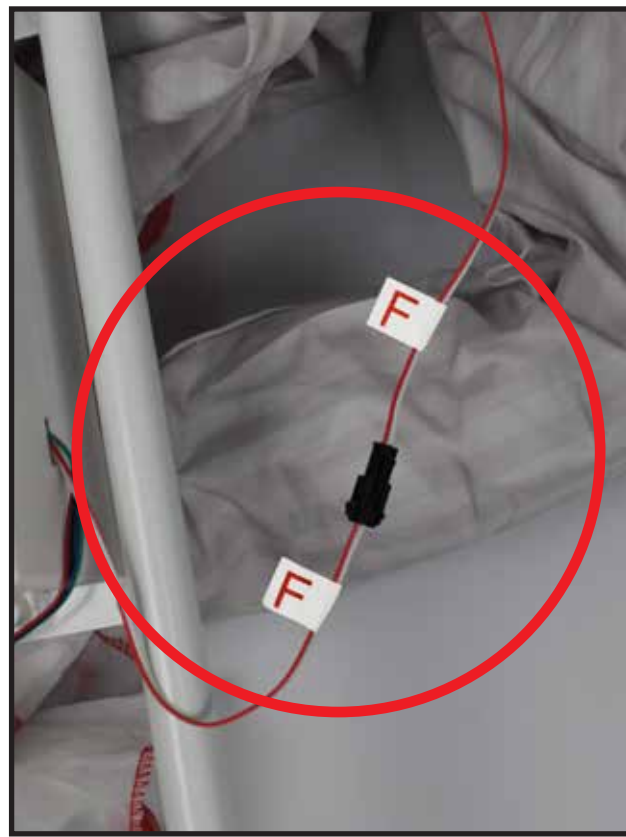

6. Connect the wire bundle on the CONTROL BOX to the wire bundle on the HEAD AND BODY.

MATCH F TO F

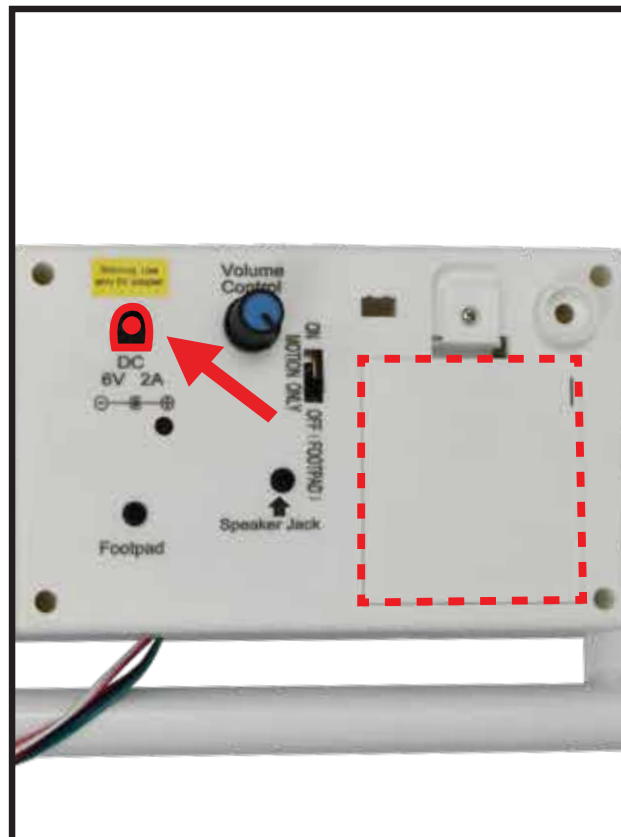

7. Insert 4 AA batteries (not included) or 6V 2A adapter (not included) into the CONTROL BOX. Move the switch to the ON position. Make a loud sound (clap) or move in front of the item to activate. Turn the item off when not in use. Remove 6V 2A adapter when using batteries.



8. Using two hands firmly push the staked pole into the ground. Lower the striped fabric to complete your setup.

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the CONTROL BOX.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!
* Footpads and adapters are sold separately and can be purchased at www.tekkyaccessories.com




OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



Battery Diagram

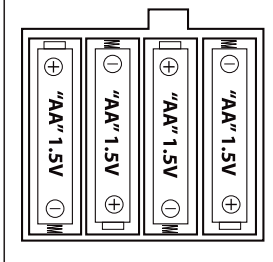

BATTERY INSTRUCTIONS AND CAUTIONS


Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



SMART PHONE SCAN SETUP VIDEO

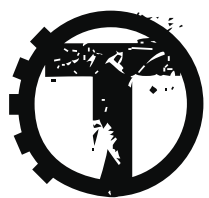

visit us at tekkydesign.com
Requires 6V 2A ADAPTER (not included) or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

ICE SCREAM CLOWN™
is a trademark of Tekky.
Copyright © 2022 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.