

# RISING WOMAN™

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

ESTIMATED ASSEMBLY TIME SEVEN MINUTES.


### PARTS

1.



BODY

2.

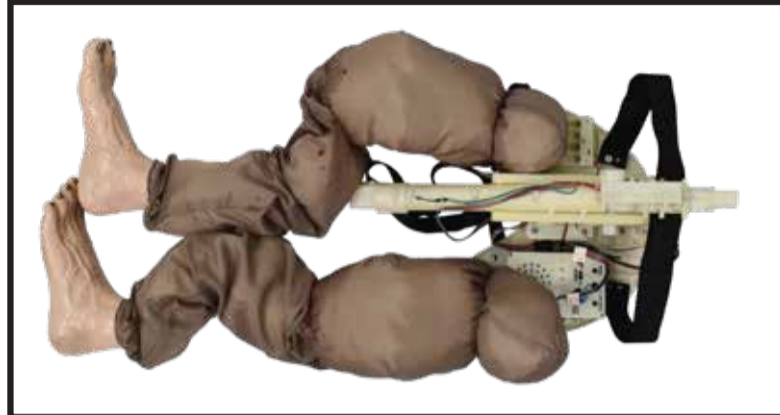





BASE, LEGS, AND CENTER POLE

3.



6V 2A ADAPTER

### ASSEMBLY

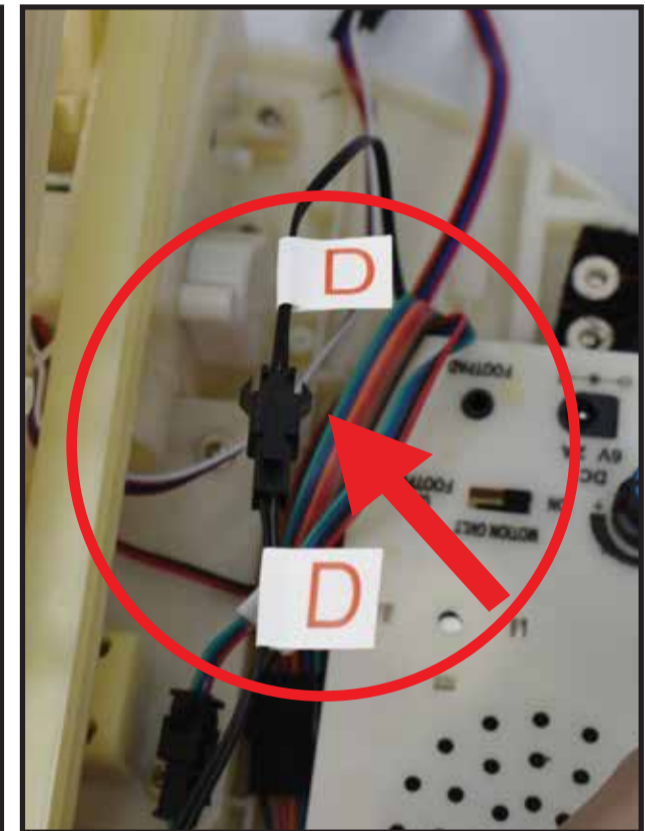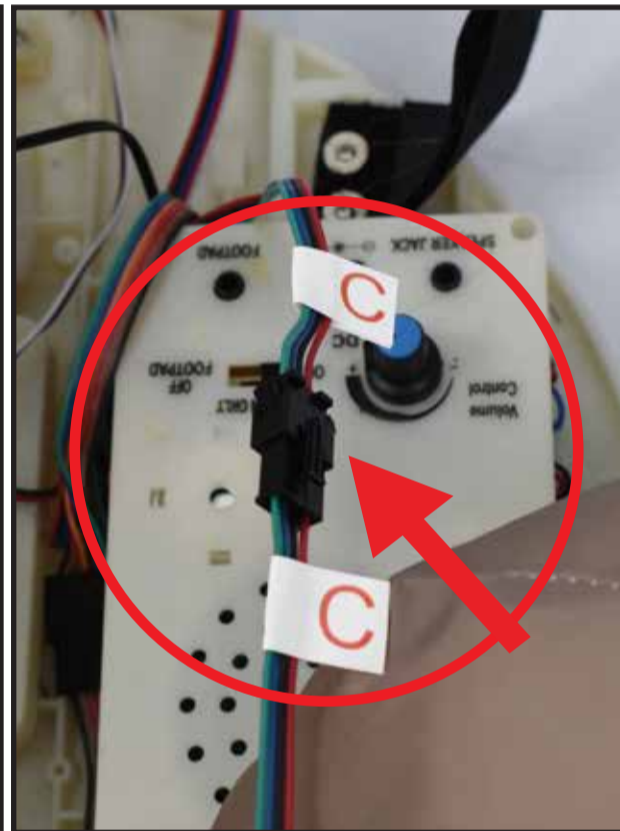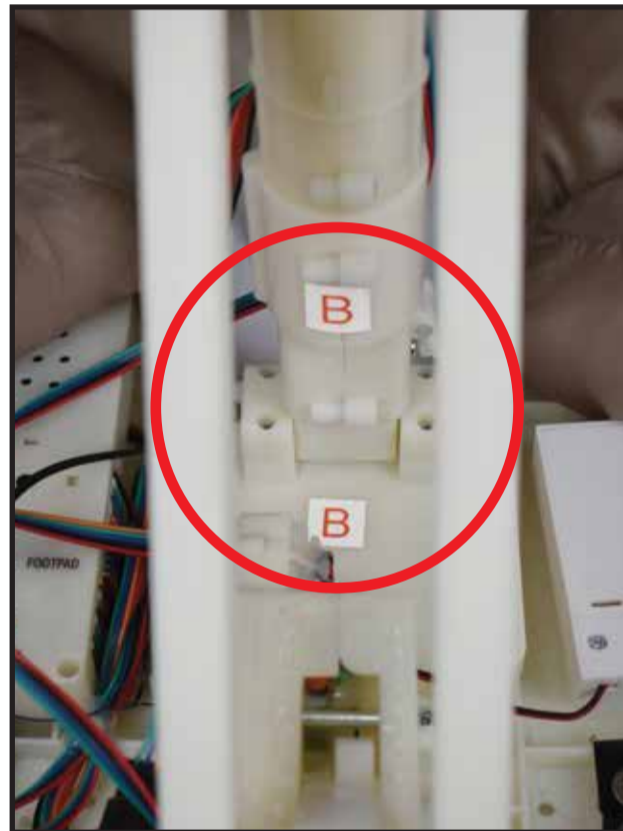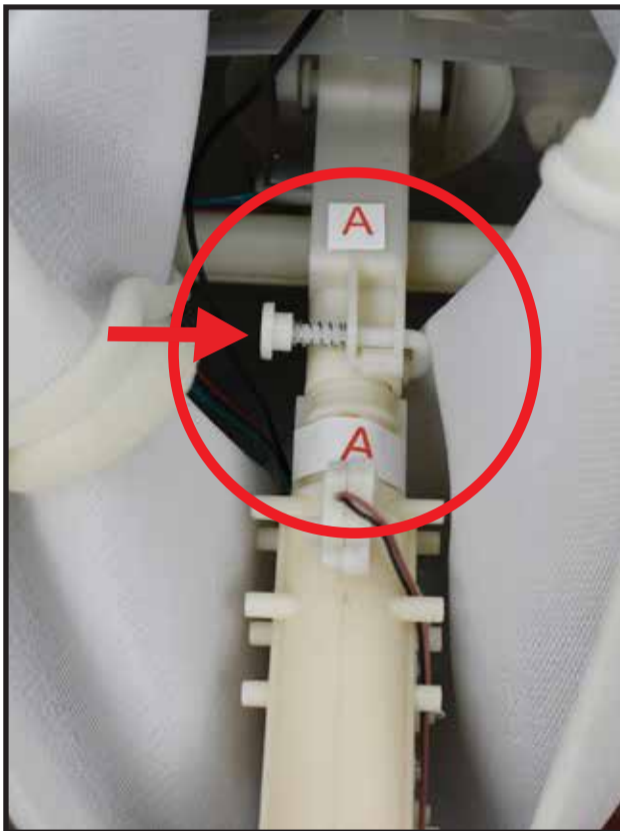

1. Push the spring lock located under the shoulders on the BODY. Insert the CENTER POLE located on the BASE AND LEGS into the BODY. Release the spring lock to secure.

MATCH A TO A

2. Snap lock the bottom of the CENTER POLE into the BASE.

MATCH B TO B

3. Connect the wire bundle from the CONTROL BOX to the wire bundle from the BODY.

MATCH C TO C

4. Connect the wire bundle from the CONTROL BOX to the wire bundle from the BODY.

MATCH D TO D



5. Seat the assembled BODY and BASE on a sturdy chair (not included).

Make sure the four hook and loop fastener straps are hanging freely on both sides of the chair.



6. Pulling both of the hook and loop straps tightly, secure both of the hook and loop fasteners underneath the chair.


The chair must be stable, on a flat surface, and both sets of straps secured tightly for optimal operation.

The BASE must be level and secured TIGHT. The item cannot tip in the chair or it will not function properly.



7. Place the foot flat on the floor and secure the hook and loop fasteners under the dress fabric to the LEGS.

Depending on the height of your chair, attach lower to shorten, or higher to lengthen the LEGS to the optimal height.

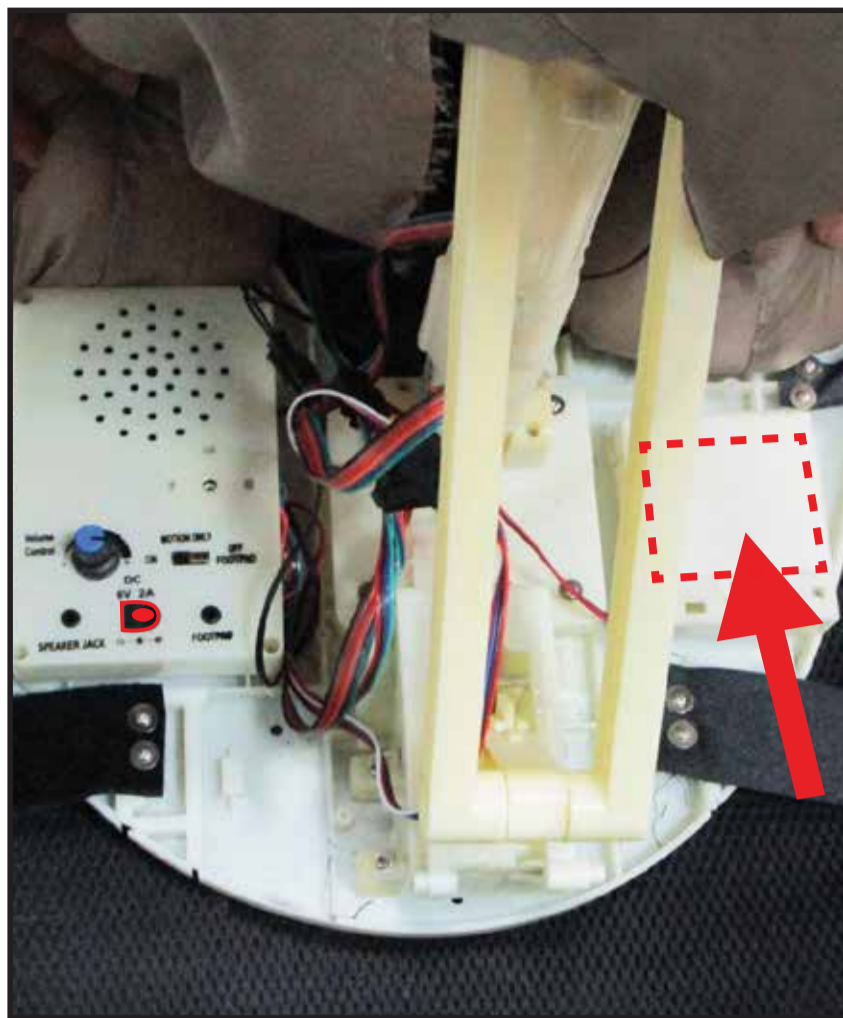

8. Insert 4 AA batteries (not included) or 6V 2A adapter (included) into the control box. Move the switch to the on position. Make a loud sound (clap) or move in front of the item to activate. Turn the item off when not in use. Remove 6V 2A adapter when using batteries.

### OPTIONAL FOOTPAD SET UP

**FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.**

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the MODULE.
  2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
  3. Step on the FOOTPAD to activate the scary sequence!
- \* Footpads are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)




### OPTIONAL EXTERNAL SPEAKER SET UP

**EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.**

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the MODULE.
2. Use volume knob on external speaker to control volume levels.



#### Battery Diagram

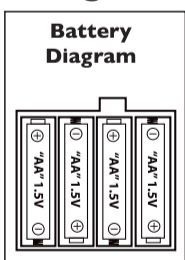

#### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.**

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

#### SMART PHONE SCAN SETUP VIDEO



visit us at [tekkydesign.com](http://tekkydesign.com)  
 Requires 6V 2A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS:  
 METAL, FOAM, PLASTIC, POLYESTER  
 Surface washable only.

RISING WOMAN™ is a trademark of Tekky. Copyright © 2022 Tekky. All Rights Reserved. MADE IN CHINA



**DO NOT RETURN THIS ITEM TO THE STORE!**  
 If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.