


INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

1.) Insert FOOT into back of BASE as shown in illustration 1.


Note: Press to make sure FOOT snaps fully into BASE.
To remove FOOT, insert screwdriver into holes on bottom to release locks and pull.

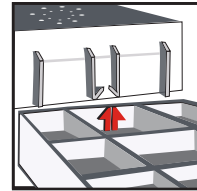

(ILLUSTRATION #1)

2.) Connect Poles together and insert into receptacle on Base.

(See illustration 2)
Note: Adjust and align the snap lock with the indentation inside the pole.

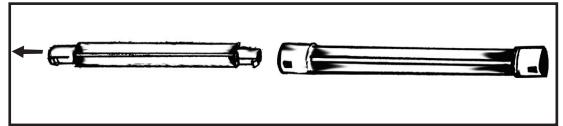


(ILLUSTRATION #2)

3.) Install fresh, new alkaline batteries (3 "AA") into battery compartment located on top of BASE.

4.) Place the Reaper Head with Fabric on top of the pole.


(See illustration 3)
Note: Adjust and align the snap lock with the indentation inside the pole.

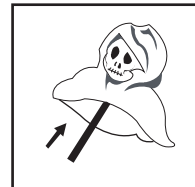

(ILLUSTRATION #3)

5.) Drape Fabric down over Pole and Base.

(See illustration 4)
Note: Completely cover the rectangular base to enhance the appearance of the Reaper.

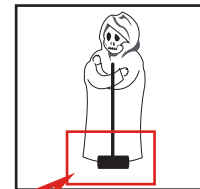


(ILLUSTRATION #4)

6.) Slide switch on BASE to the ON position to use in Sound Activation mode.

Note: Clap or make a loud sound to activate.

7.) Attach velcro on back of fabric to velcro on FOOT. Attach velcro on front of fabric to velcro on front of BASE.

Hint: If needed, place weight on rear FOOT to increase stability as in illustration 5.

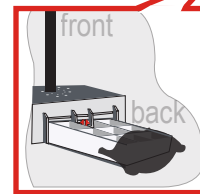

(ILLUSTRATION #5)

If you hear a constant "clicking" sound and this item does not function properly, it means that there is an obstruction preventing the pole from lowering fully (for example: rock, bush, incline, etc.). The clicking sound does not mean that it is broken, just remove any obstruction and the item should function normally.

Outdoor Warnings: For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
Spring activated motion may cause injury if instructions are not followed correctly.
Stay clear of item while operating.



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to www.tekkytoys.com for assistance.

Requires 3 'AA' Batteries
Surface washable only.
ALL NEW MATERIALS:
PLASTIC, POLYESTER,
POLYESTER FIBER

RISING FROM THE GRAVE and
RISING FROM THE GRAVE REAPER
are trademarks of Tekky Toys.
Copyright © 2007 Tekky Toys.
All Rights Reserved.