

WILD WITCH!

Setting up and operating your WILD WITCH is easy!
In a few minutes you'll be ready to SCARE
anyone who dares cross the path of the Wild Witch!

Set up and Operating Instructions:

1. Locate **Part 1** (Shoulders/Head/Costume) and **Part 2** (Top Pole). Attach these 2 parts together and twist to lock so that the arrows labeled 'A' line up (refer to PHOTO A, and PHOTO B)
2. Locate **Part 3** (Module) and attach to **Part 2**. Twist to lock so that the arrows labeled 'B' line up. (Refer to PHOTO C)
3. Locate **Part 4** (Bottom Pole) and attach to **Part 3**. Twist to lock so that the arrows labeled C line up. (Refer to PHOTO D)
4. Locate STAND and attach to **Part 4**. Twist to lock so that the arrows labeled D line up. (Refer to PHOTO E)
5. Insert large, black-fabric circle between pole and stand so that it totally covers the stand. PHOTO F is of the fully assembled stand.
6. Locate **Part 5** (wire connectors) and plug together as shown in PHOTO G.
7. Pull COSTUME down over stand and insert feet into pockets on fabric. (Refer to PHOTO H)
8. Insert four (4) brand-new, fresh alkaline 'AA' batteries into battery compartment on **Part 3** (Module).
9. To operate, turn switch to ON position and make a loud sound (this item is SOUND ACTIVATED).

HINTS: Bend arms to pose Witch until shoulder movement gives you the best effect. Shape the witch hat to your liking for more of a realistic look. If your witch is having problems rising up and down, check to make sure the wire (PART 5) is not catching on any part.



Photo A



Photo B



Photo C

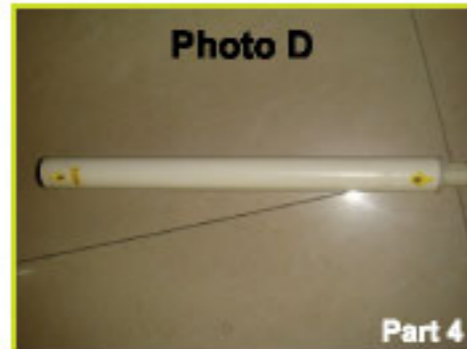


Photo D



Photo E



Photo F

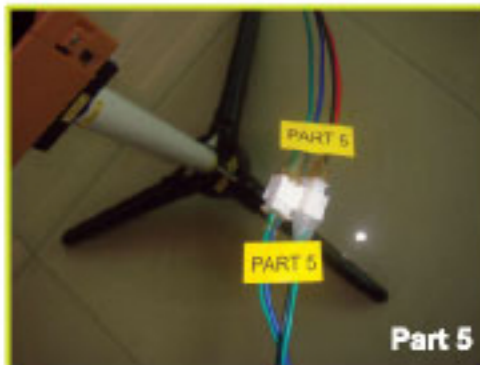


Photo G



Photo H

WILD WITCH
is a trademark of Tekky Toys.
Copyright © 2008 Tekky Toys.
All Rights Reserved.

FILLING: ALL NEW MATERIALS.
SURFACE WASHABLE ONLY.
Requires 4AA Batteries.
MADE IN CHINA.

Warnings:

This item is not a toy. For decoration purposes only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. NOT intended for use by children 13 years of age and younger.

Do NOT operate this item until you have completely finished assembly. For best overall performance, please shut off WILD WITCH when not in use to conserve battery power. This item is NOT intended for outdoor use. *** No weight should be placed on the item. ***



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkytoys.com.



Create your own Halloween scene with all of
Tekky Toys' animated products!
visit: www.tekkytoys.com



ITEM #56513
WILD WITCH



Manufactured for and distributed by
Tekky Toys, Orland Park, IL, USA.