

**RING BELL FOR
FUNERAL SERVICE!
SOUND ACTIVATED**

**GHOSTLY
ANIMATION
AND SCARY
SOUND
EFFECTS**



OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.


1. Use a small Phillips/crosshead screwdriver to open the battery compartment located on bottom of the HAUNTED CALL BELL™.
 2. Place three brand new "AA" alkaline batteries into the battery compartment and replace battery compartment cover.
 3. Place switch on bottom of item to the "ON" position.
 4. Make a loud sound (clap) to activate the scary, silly sequence!
- NOTE: Keep switch in the "OFF" position when not in use.

HAUNTED CALL BELL™

INCLUDES ONE (1) HAUNTED CALL BELL™ DECORATION. DISPLAY ON LEVEL SURFACE. ALL NEW MATERIALS: PLASTIC. SURFACE WASHABLE ONLY. INDOOR USE. ACTUAL ITEM MAY VARY FROM PHOTOGRAPHS AND/OR ILLUSTRATIONS ON PACKAGE.

ITEM #58812. HAUNTED CALL BELL™ IS A TRADEMARK OF TEKKY. COPYRIGHT © 2022 TEKKY. ALL RIGHTS RESERVED. MANUFACTURED FOR: TEKKY, ORLAND PARK, IL 60467 USA

TEKKYDESIGN.COM

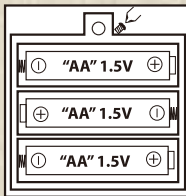

**AGES 15+
8.125 IN.
(20.63 CM)**

BATTERY INSTRUCTIONS + CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

⚠ WARNING

CHOKING HAZARD - small parts.
This item is not a toy. For decoration only.
This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.

3AA
BATTERIES
REQUIRED
(NOT INCLUDED)



Scan code for
demo video