



PARTS

1. METAL BASE (QTY 1)
2. UPPER FRAME (QTY 1)
3. UPPER FRAME POLE (QTY 1)
4. LOWER FRAME AND MODULE (QTY 1)
5. BODY (QTY 1)
6. FABRIC FRAME COVER (QTY 1)
7. CENTER BODY POLE (QTY 1)

1. Snap lock LOWER FRAME AND MODULE onto METAL BASE. (Match A to A)
2. Snap lock UPPER FRAME onto LOWER FRAME AND MODULE. (Match B to B)
3. Slide the UPPER FRAME POLE through the sleeve marked **UP** on the UPPER FRAME. Snap lock the UPPER FRAME POLE into the LOWER FRAME AND MODULE. (Match C to C)
4. Attach the spring located on the LOWER FRAME AND MODULE to the hook on the UPPER FRAME AND CENTER POLE. (Match YELLOW TO YELLOW)

NOTE: SPRING MUST BE ATTACHED ONLY TO THE CORRECT COLOR CODE OR IT WILL DAMAGE THE SPRING!
5. Attach the spring located on the UPPER FRAME AND CENTER POLE to the hook on the CENTER POLE. (Match BLUE TO BLUE)

NOTE: SPRING MUST BE ATTACHED ONLY TO THE CORRECT COLOR CODE OR IT WILL DAMAGE THE SPRING!
6. Slide the FABRIC FRAME COVER over the assembled UPPER FRAME AND CENTER POLE.
7. Snap lock the CENTER BODY POLE onto the UPPER FRAME POLE. (Match D to D)
8. Snap lock the BODY onto the CENTER BODY POLE. (Match E to E)
9. Reach inside the FABRIC FRAME COVER and connect the wire labeled H from the MODULE to the wire running from the BODY outside the FABRIC FRAME COVER. (Connect F to F)
10. Connect the two wires labeled I **LOCATED UNDER THE FABRIC**. (Connect G to G)
11. Reach inside the FABRIC FRAME COVER and connect 6V 2A ADAPTER (not included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the MODULE. Turn switch to ON position and make a loud sound or clap to activate item.

Turn switch on MODULE to TIMER to operate in Timer/Sound mode (Animated Haunting Ghost Bride™ will function with 5 minute breaks between cycles - or, clap during 5 minute break to instantly start playing again). Leave switch in OFF position when not in use.
12. Attach the four hook and loop fasteners on the FABRIC FRAME COVER to the hook and loop fasteners on the METAL BASE.
13. Position the arms and dress as seen in illustration. Continue to optional Footpad and External speaker setup instructions.

NOTE: FOR USE IN WIND - PLACE WEIGHT ON METAL BASE FOR EXTRA STABILITY AS NEEDED.

