


# CONVULSING WEREWOLF

## INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

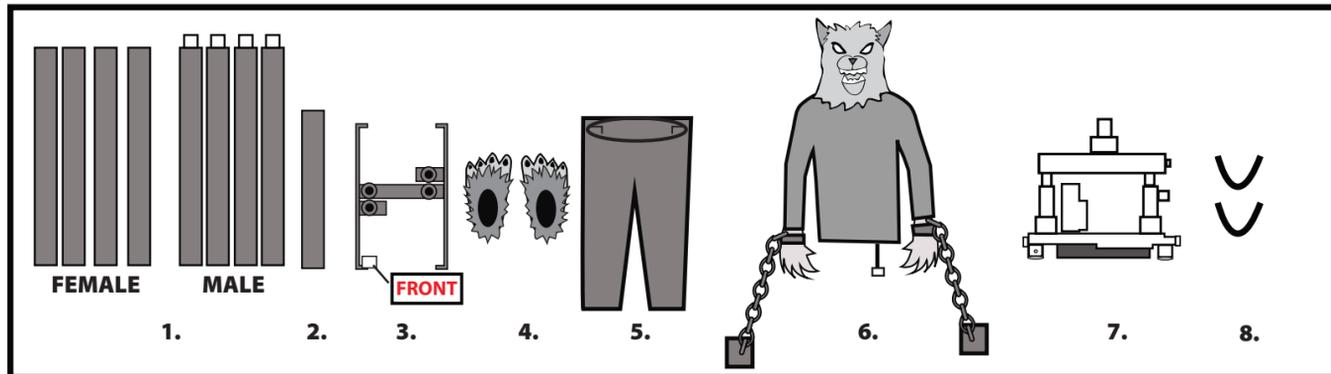

### PARTS

1. LONG POLES (4 FEMALE & 4 MALE)
2. SHORT POLE (FEMALE / FEMALE)
3. METAL STAND
4. FEET (2)
5. PANTS WITH BRACKET
6. HEAD WITH ARMS AND CHAINS
7. MODULE
8. LOCKING PINS

1. Assemble **LONG POLES**, 4 MALE to 4 FEMALE (Match **A** to **A**). Twist to lock.
2. Attach **LONG POLES** to **METAL STAND**.
3. Slide **FEET** over assembled **LONG POLES** connected to **METAL STAND**.
4. Slide **PANTS** over assembled **LONG POLES** connected to **METAL STAND**.
5. Attach **MODULE** to assembled **LONG POLES**.  
**Note:** **MODULE** labeled **FRONT** should be pointing same way as the front of the **FEET**.
6. Locate holes in the top of the **LONG POLES**. Turn the poles and line up holes in top of the **LONG POLES** with the holes on **MODULE**. (Holes are located on **MODULE front left** and **MODULE back right**.) Insert **LOCKING PINS** as illustrated. (See illustration 6 and 6a)
7. Attach **PANTS BRACKET** to holes on either end of **MODULE**, inserting metal prongs facing down. (See illustration 7)
8. Attach **SHORT POLE** to **HEAD WITH ARMS AND CHAINS**. (Match **B** to **B**) Twist to lock.
9. Attach opposite end of **SHORT POLE** to **MODULE**. (Match **B** to **B**) Twist to lock.
10. Connect cable located under clothes to cable coming from **MODULE**. (Match **C** to **C**)

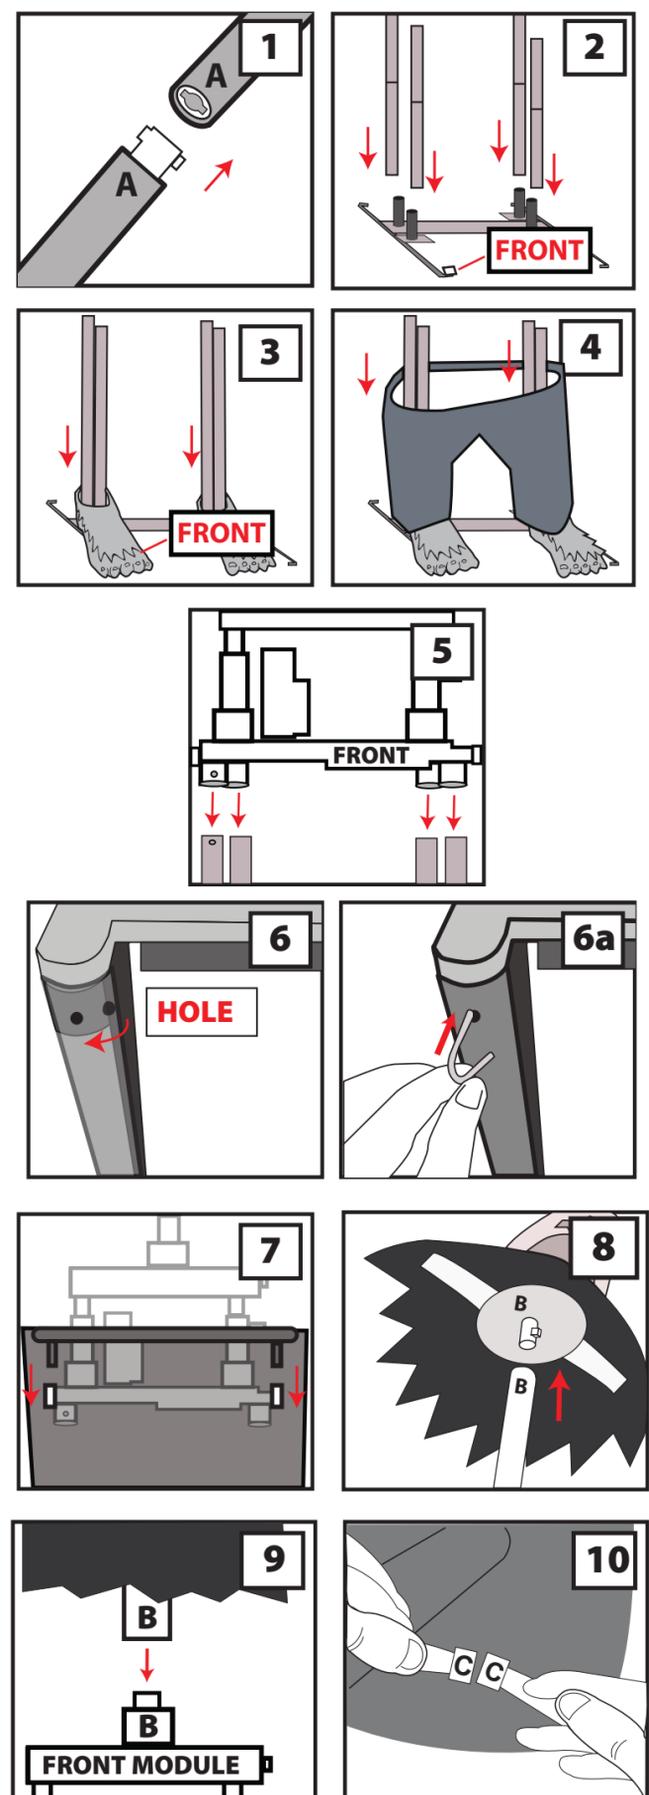



11. Use 3M adhesive located on the back of the chain brackets to secure brackets to the desired surface.

**Note:** Use caution when selecting surface to attach chains.  
Adhesive may cause damage to some surfaces.

12. Insert 4 AA batteries (not included) into the battery compartment located on the **MODULE** or connect 6V 2A adapter. (sold separately)

**Note:** Turn switch on top of **MODULE** to ON to operate in sound & motion activation mode. Leave switch in OFF position when not in use.


13. Pull Convulsing Werewolf's shirt down so he doesn't get angry!

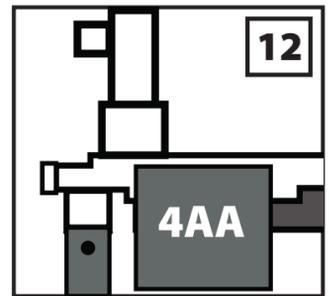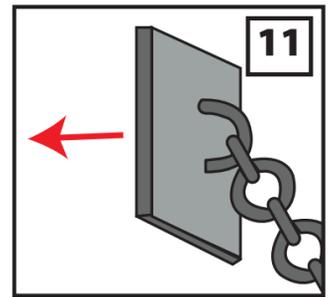

## OPTIONAL FOOTPAD SETUP

Follow Steps 1 through 12 on initial installation first.

1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the MODULE.
2. Place the switch on the MODULE into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #13 to continue setup)

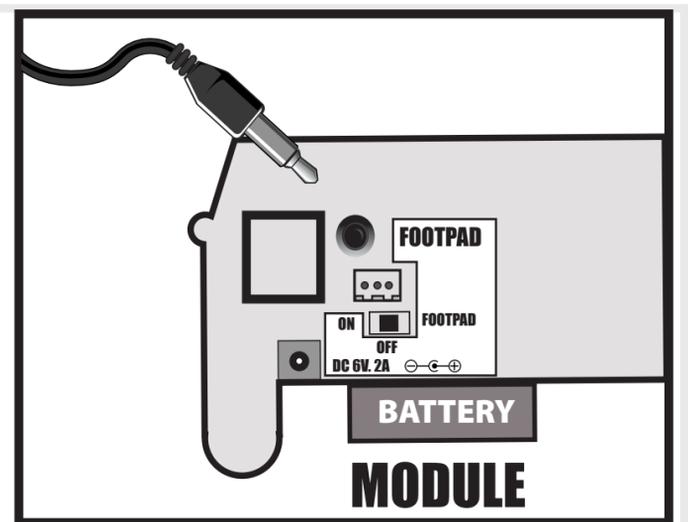

**\*\*No weight should be placed onto item\*\***

**Warning!** This item is not a toy. For decoration only. Small parts, choking hazard.  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children ages 14 years and younger.

### WARNING

DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

**Stay clear of item while operating.**

## SMART PHONE SCAN SETUP VIDEO



visit us at [tekkytoys.com](http://tekkytoys.com)

**Surface Washable Only.**  
ALL NEW MATERIALS : PLASTIC,  
POLYESTER, POLYESTER FIBER

Battery Powered:  
Requires 4 AA Batteries (not included)  
Optional DC Adapter Ready (6V 2A)  
\*\*DC Adapter and footpad sold  
separately and can be purchased  
at: [www.tekkytoys.com](http://www.tekkytoys.com)  
CONVULSING WEREWOLF is a trademark  
of Tekky Toys.  
Copyright © 2013 Tekky Toys.  
All Rights Reserved.  
MADE IN CHINA



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to  
[www.tekkytoys.com](http://www.tekkytoys.com) for assistance.