 


# CRAWLING POSSESSED GIRL™

## Installation and Operating Instructions

 
Keep all plastic and wire parts away from children.

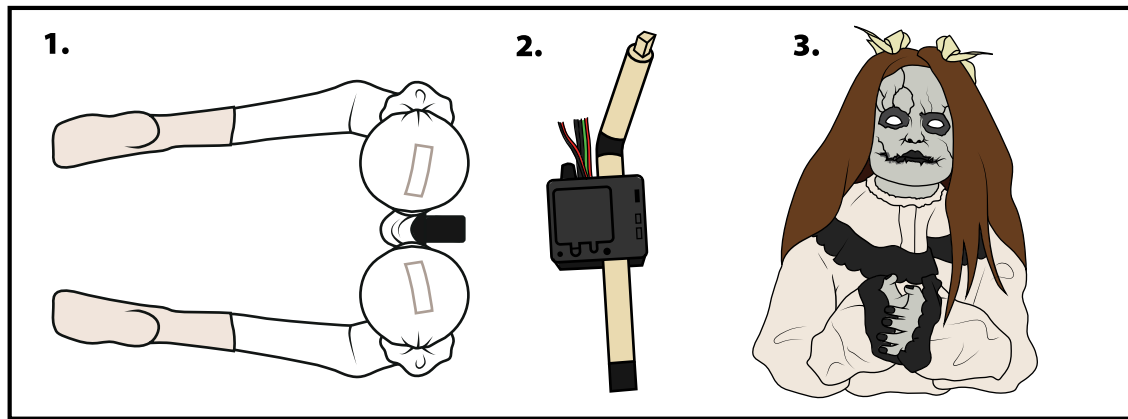

1. Snap lock the CENTER POLE WITH CONTROL BOX into the LEGS. (Match A to A)
2. Reach inside the dress and snap lock the CENTER POLE WITH CONTROL BOX into the HEAD AND BODY. (Match B to B)
3. Connect both the large and small wire bundles running from the CONTROL BOX to the wire bundles located inside the HEAD AND BODY. (Match C to C) and (Match D to D)
4. Insert 6V 2A ADAPTER (not included) or 4 AA batteries (not included) into the CONTROL BOX. Turn the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate the item. Turn the item off when not in use.
5. Reach inside the fabric and pull the foam cover down towards the feet. Attach the hook and loop fasteners on the foam pad to the fasteners located on the LEG padding.
6. Pull the dress back down over the foam cover and CENTER POLE WITH CONTROL BOX.
7. Position the item with arms and foam wrist pads located beneath the hands on a flat surface for optimal performance.

## PARTS


1. LEGS
2. CENTER POLE WITH CONTROL BOX
3. HEAD AND BODY

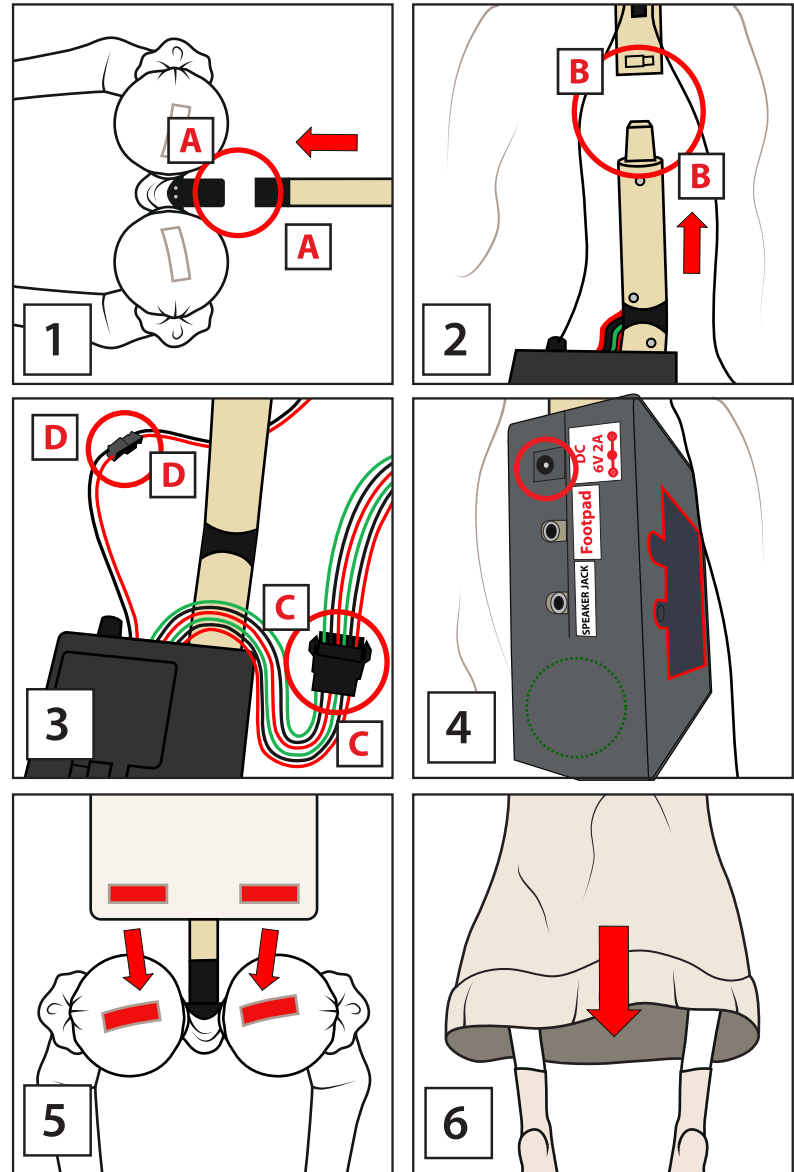

### OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

 
1. Plug speaker cord into the jack labeled SPEAKER JACK located on side of the control box.
2. Use volume knob on external speaker to control volume levels.

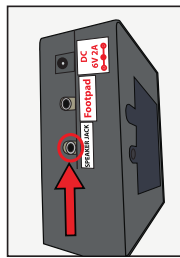

### OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

 1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the control box.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

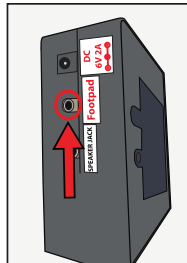

\* Footpads and adapters are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)


### SMART PHONE SCAN

 SETUP VIDEO



### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

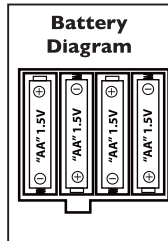

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

**WARNING**  
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.  
STAY CLEAR OF ITEM WHILE OPERATING.  
DO NOT PLACE ITEM ON UNEVEN GROUND.  
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



**TEKKY**

visit us at [tekkydesign.com](http://tekkydesign.com)

Requires 6V 2A ADAPTER (not included) or 4AA batteries (not included)

ALL NEW MATERIALS:  
METAL, FOAM, PLASTIC, POLYESTER  
Surface washable only.

CRAWLING POSSESSED GIRL™  
is a trademark of Tekky.  
Copyright © 2021 Tekky.  
All Rights Reserved.  
MADE IN CHINA



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.