



**MOTION
& SOUND
ACTIVATED!**

**¡MOVIMIENTO
Y SONIDO
ACTIVADOS!**

CROW STALKER™

Cuervo Acechador™

Quick snap-up
motion &
scary sounds!

¡Sale disparado rápidamente
y produce sonidos terroríficos!

3AA

Batteries Included
(for demo purposes only)

3 pilas "AA" incluidas
(solo con fines de demostración)

Crow Stalker™ lies in wait...
to scare the @*% # out of you!
Quick snap-up motion & scary sounds!
Motion and sound activated

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE
PARTS AWAY FROM CHILDREN

1. Carefully remove and discard the "Try Me" wire and packaging.
2. Insert 3 brand new "AA" alkaline batteries into the battery compartment located on bottom of base.
3. Place switch on base to the "ON" position.
4. Make a loud sound (clap) or wave hand in front of Crow Stalker™ to activate scary sequence!

NOTE: Keep the switch in the "OFF" position when not in use.

SURFACE WASHABLE ONLY.

All new materials:
polyester fibres, plastic, wire


Item #58438
CROW STALKER™
is a trademark of Tekky.
Copyright © 2018 Tekky.
All Rights Reserved.
MADE IN CHINA

Manufactured for
and distributed by:
Tekky, Orland Park, IL 60467 USA

TekkyDesign.com

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

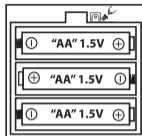

WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.