

 
DAMIEN

INSTALLATION AND OPERATING INSTRUCTIONS KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

Setup Instructions: DAMIEN

PARTS:

1. HEAD WITH CLOTHES
2. TELESCOPING BASE
3. SUPPORTS (Hands attached)

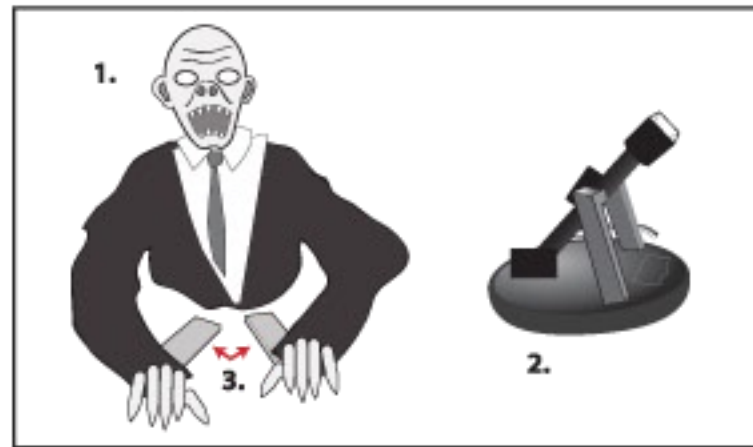

1). Snap lock **HEAD WITH CLOTHES** into **TELESCOPING BASE**. (Match **A** to **A**) Press until it clicks into place.

2). Connect cable coming from under clothes to cable coming from **TELESCOPING BASE**. (Match **B** to **B**)

3). Attach both **SUPPORTS** to underside of **TELESCOPING BASE**. (Match **C** to **C**).

NOTE: Damien's hands are pre-mounted to **SUPPORTS**.

 
4). Attach hook and loop fasteners located underneath the front of Damien's shirt to opposite hook and loop fasteners located on the top of both **SUPPORTS**.

5). Attach hook and loop fastener located underneath the back of Damien's shirt to the opposite hook and loop fastener located on the back of **TELESCOPING BASE**.

6). Insert 4 brand new AA Alkaline batteries into the battery compartment located on **BASE** or attach optional 6V 3A adapter (sold separately).

Turn switch on top of BASE to ON to operate in Timer/Sound mode (Item will function with 1.5 minute breaks between cycles - or, clap during 1.5 minute break to instantly start item playing again).

Leave switch in OFF position when not in use.

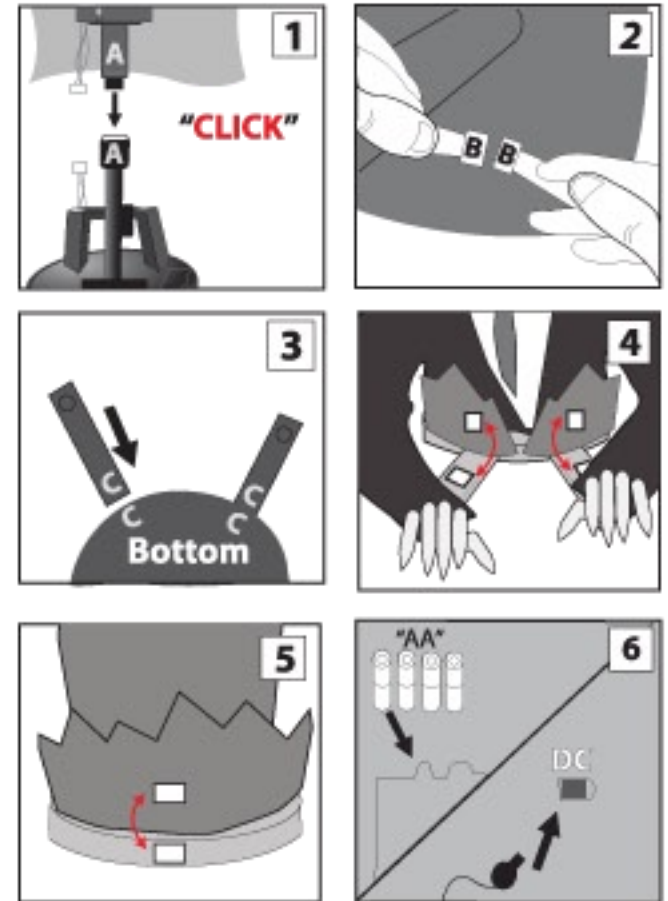

Outdoor Warnings: For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

OPTIONAL FOOTPAD SETUP

Follow initial installation instruction first.

1. Connect wire from optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence.

 
NOTE:

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

CAUTION!

Not aligning the plug to jack properly may cause permanent damage to footpad jack of your item. **DO NOT** use excessive force when inserting plug.

*Footpads are sold separately and can be purchased online at: www.tekkytoys.com

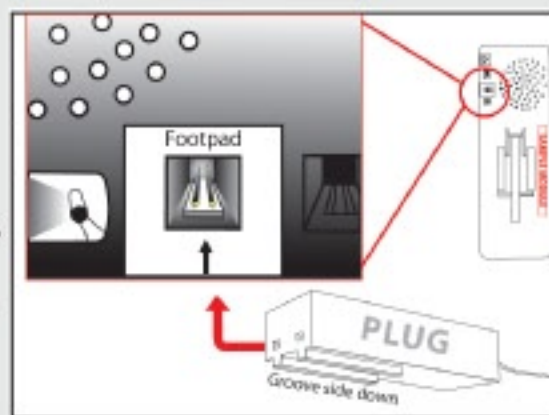

SMART PHONE SCAN SETUP VIDEO



****No weight should be placed onto item****

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

Stay clear of item while operating.



VISIT US: WWW.TEKKYTOYS.COM

Surface Washable Only.
ALL NEW MATERIALS : PLASTIC, POLYESTER,
POLYESTER FIBER

Battery Powered:

Requires 4 AA Batteries (not included)
DC Adapter Ready 6V 3A (not included)

** Footpad and adapter sold separately and can be purchased at: www.tekkytoys.com

Damien is a trademark of Tekky Toys.
Copyright © 2012 Tekky Toys.
All Rights Reserved.
MADE IN CHINA