

# FLOATING MONSTERS™ - WITCH

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

**Easy SET-UP in less than 5 minutes.**  
**Set 'em up, turn 'em on and WATCH 'EM GO!**

### ASSEMBLY AND OPERATING INSTRUCTIONS

Requires 4 'AA' Batteries (included for demo purposes only).

1. Carefully remove your floating monster from the enclosed packaging. Save package for storage.
2. Remove the TRY ME/DEMO button from product and discard. TRY ME button is for in-store demo only and is NOT part of this product.
3. We recommend replacing the DEMO batteries with brand new alkaline batteries.

Your floating monster is packed with easy-to-assemble parts, allowing you to store the item when not in use.

Each part fits together with a simple twist lock operation and easy to connect wiring (male to female).

- PART 1 - HEAD/SHOULDER/ARM unit with 'costume'
- PART 2 - SHOULDER SUPPORT (Foam Insert)
- PART 3 - TOP support pole
- PART 4 - MIDDLE support pole
- PART 5 - LOWER MIDDLE support pole
- PART 6 - BOTTOM support pole
- PART 7 - Round wheeled BASE

- Insert TOP support pole (part 3) into bottom of HEAD/SHOULDER/ARM unit (part 1); twist to lock.
- Assemble remaining 2 support poles (parts 4 and 5); twist to lock.
- Attach above poles (2 pcs) to TOP support pole (part 3)
- Place wheeled BASE (part 6) on a smooth and level surface
- Insert BOTTOM support pole (of assembled monster) into top of BASE; twist to lock
- **Snap-connect all wiring.**
- Turn switch (on top of BASE) to ON (with sound) or SILENT (floating movement only).
- **For BEST MOVEMENT, pose bendable arms as shown.**
- **Floating monster is sound-activated...**
- **Make a LOUD noise and ...START THE PARTY!**



FOR INDOOR USE ONLY!



ALL NEW MATERIALS  
PLASTIC, POLYESTER  
Surface washable only.  
Requires 4 "AA" batteries, included.

FLOATING MONSTERS is a trademark of Tekky Toys.  
Copyright © 2006 Tekky Toys. All Rights Reserved.  
**MADE IN CHINA.**

Witch will function with 2 minute breaks between cycles - or, clap during 2 minute break to instantly activate Witch again.



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkytoys.com](http://www.tekkytoys.com) for assistance.

**Warning!**  
This item is not a toy. For decoration only. Small parts, choking hazard.  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children 14 years of age and younger.



Create your own Halloween scene with all of Tekky Toys' animated products!  
[www.tekkytoys.com](http://www.tekkytoys.com)