




KEEP CABLE AS TIGHT AND HORIZONTAL AS POSSIBLE.

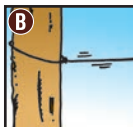

HOOK CABLE AROUND TREE.



WIND CABLE AROUND OBJECT. TIGHTEN CABLE BEFORE WINDING.




POSITION CLIPS ALONG CABLE TO STOP GHOST WHERE DESIRED.

SETTING UP YOUR FLYING GHOST™ PIRATE

FOR THE BEST PERFORMANCE, WE HIGHLY RECOMMEND KEEPING THE CABLE PERFECTLY HORIZONTAL (ILLUS. A). ANY INCLINE OR DECLINE IN THE CABLE MAY CAUSE THE FLYING GHOST PIRATE TO RUN POORLY OR STOP!

- BE SURE CABLE IS PULLED AS TIGHT AS POSSIBLE!!
- REFER TO ILLUSTRATIONS B AND C ABOVE FOR TIPS ON FASTENING CABLE END SO THERE IS NO SLACK IN THE LINE.

OPERATING INSTRUCTIONS

A 3-WAY SWITCH IS LOCATED NEAR THE BATTERY COMPARTMENT AT THE BOTTOM OF THE PLASTIC MODULE, THE FLYING GHOST™ PIRATE HAS 3 OPERATING MODES: OFF, ON (WITH CREEPY SOUNDS) AND  (ON WITH NO SOUNDS).

FLYING GHOST™ PIRATE IS SOUND ACTIVATED. CLAP YOUR HANDS OR MAKE A LOUD NOISE TO BEGIN THE "FLYING" ACTION. THE GHOST WILL TRAVEL BACK AND FORTH ALONG THE CABLE, AUTOMATICALLY REVERSING DIRECTIONS WHEN REACHING THE CABLE END (OR CABLE CLIPS).

OPERATING TIPS

- KEEP THE CABLE FREE OF DEBRIS, LEAVES, TWIGS, ICE, ETC.
- KEEP GHOST AWAY FROM TREE BRANCHES OR OTHER OBSTRUCTIONS WHICH MAY HINDER MOVEMENT.
- POSITION THE TWO CLIPS ALONG CABLE TO STOP THE GHOST WHERE DESIRED (ILLUS. D).

ALL NEW MATERIALS:
POLYESTER/
POLYESTER
FIBER FILL

SURFACE
WASHABLE
ONLY.


OPERATING YOUR FLYING GHOST™ PIRATE OUTDOORS

FOR BEST OVERALL PERFORMANCE, WE RECOMMEND YOU BRING YOUR FLYING GHOST™ PIRATE INDOORS DURING ADVERSE WEATHER CONDITIONS (EXTREME COLD, STRONG WINDS AND/OR RAIN). FLYING GHOST PIRATE IS INTENDED FOR USE OUTDOORS IN SHELTERED AREAS AND IN TEMPERATURES ABOVE FREEZING (32°F). TEKKY RECOMMENDS USING HEAVY-DUTY, ALKALINE BATTERIES FOR BEST OPERATING PERFORMANCE.

ITEM #57305
FLYING GHOST™
PIRATE IS A
TRADEMARK
OF TEKKY.
© COPYRIGHT
2018 TEKKY.
ALL RIGHTS
RESERVED.
PROTECTED BY
U.S. AND
INTERNATIONAL
PATENTS.

AGES 15+

3 "AA"
BATTERIES
REQUIRED
(NOT INCLUDED)

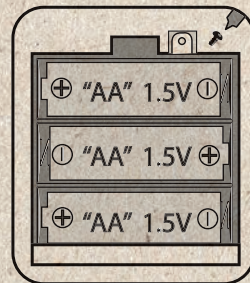

BATTERY INSTRUCTIONS AND CAUTIONS:

- REMOVE BATTERIES WHEN NOT IN USE.
- DO NOT USE RECHARGEABLE BATTERIES.
- BE SURE TO INSERT THE BATTERIES WITH THE CORRECT POLARITY +/-.
- NEVER MIX DIFFERENT TYPES OF BATTERIES: OLD AND NEW, CARBON-ZINC, ALKALINE, NICKEL-CADMIUM OR RECHARGEABLE.
- ALWAYS DISPOSE OF EXHAUSTED BATTERIES PROPERLY. DO NOT DISPOSE OF BATTERIES IN FIRE, THEY MAY LEAK OR EXPLODE.
- ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.
- IF PRODUCT IS UNUSED FOR A LONG PERIOD OF TIME, CLEAN THE BATTERY CONTACTS AND ALSO THOSE OF THE DEVICE PRIOR TO INSTALLATION.

WARNING

This item is not a toy. For decoration only.
Strangulation risk!

Keep cables, rope and/or wires away from children.

Remove all plastic fasteners and tags.

These are part of the packaging and should be discarded.
Intended for use by persons 15 years of age and up.

FLYING GHOST PIRATE™