

FOG MACHINE SOLD SEPARATELY

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS
AWAY FROM CHILDREN

- Carefully remove and discard packaging.
- Connect 6V 2A Adapter (not included) or insert 4 brand new "AA" alkaline batteries into the battery compartment located on MODULE inside of pumpkin.
- Plug Fog Machine Cover's™ FOG CORD into your fog machine's optional "FOG TIMER" input.
- Plug the wire from the FOG CORD into the MODULE (match B to B) and plug wire from Fog Machine Cover's™ light into the MODULE (match A to A).
- Make sure your fog machine is heated up properly, then turn Fog Machine Cover's™ switch to either the "ON" or "TIMER" position. If fog does not appear from Fog Machine Cover™, press the relay switch on the MODULE and restart the sequence.
- Place switch on the MODULE to the "ON" position to activate by sound; make a loud sound (clap) to activate scary sequence.
- Place switch on MODULE to the "TIMER" position to automatically activate scary sequence every 5 minutes. Clap during 5 minute breaks to instantly start item playing again.
- Place Fog Machine Cover™ over your fog machine (facing side of pumpkin as pictured in "FIGURE A") for an amazing display of fog, lights and sounds!
NOTE: Keep the switch in the "OFF" position when not in use.

ITEM OPERATION

- Make sure the fog machine nozzle is pointed towards the side of the pumpkin. The fog will hit the inside and flow out evenly.
- Avoid fog machine nozzle from coming into direct contact with the inside of pumpkin to prevent damage to the pumpkin.


OPTIONAL FOOTPAD* SET UP

*FOOTPAD IS NOT INCLUDED.
SOLD SEPARATELY.

- Connect the footpad cable into the jack labeled "FOOTPAD" on the module.
- Place switch to the "FOOTPAD/OFF" position to enable footpad activation.
- Step on the footpad to activate scary sequence!

FOG MACHINE COVER™

"FIGURE A"

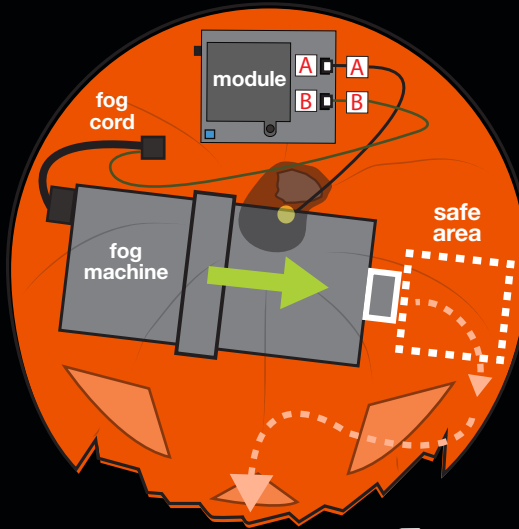


4AA

Batteries Required
(not included)



6V 2A DC Adapter Ready
(sold separately)

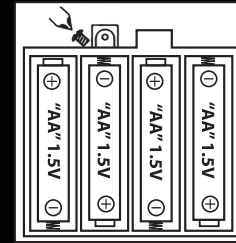

REQUIRES 4
"AA" BATTERIES
(not included)

Includes:
1 FOG MACHINE
COVER™ decoration,
1 FOG CORD and 1
MODULE.

Assembly required.
Display on flat surface.

SURFACE
WASHABLE ONLY.
ALL NEW MATERIALS:
plastic / wire / metal

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.
- If product is unused for a long period of time, clean the battery contacts and also those of the device prior to installation.

Copyright © 2018 Tekky.
All Rights Reserved.
MADE IN CHINA
Manufactured for and distributed by:
Tekky, Orland Park, IL 60467 USA



WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.