

OPERATING INSTRUCTIONS:

1. Insert 4 brand new 'AA' alkaline batteries (not included) into the battery compartment located on the back of the TV.
2. Place the switch on the back of the TV to the "ON" position. Make a loud sound to initiate scary sequence.
3. Place the switch to the "KNOB" position to activate by turning the right knob only.

Keep the switch in the "OFF" position when not in use.

BATTERY INSTRUCTIONS & CAUTIONS:

- Use only the batteries recommended by the manufacturer.
- Remove batteries when not in use.
- Do NOT use rechargeable batteries.
- Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

Adult supervision recommended when changing batteries.

If product is unused for a long period of time, clean the battery contacts and also those of the device prior to installation.

FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT:

www.tekkyaccessories.com

Surface Washable Only.

ALL NEW MATERIALS : PLASTIC, POLYESTER

Battery Powered: Requires 4 "AA" Batteries (not included)

GARGOYLE TV is a trademark of Tekky.

Copyright © 2017 Tekky. All Rights Reserved.

MADE IN CHINA



WARNING:

Not a toy. Decorative use only.
This product is intended for use by
persons 15 years of age and older.



TEKKY

www.tekkydesign.com