

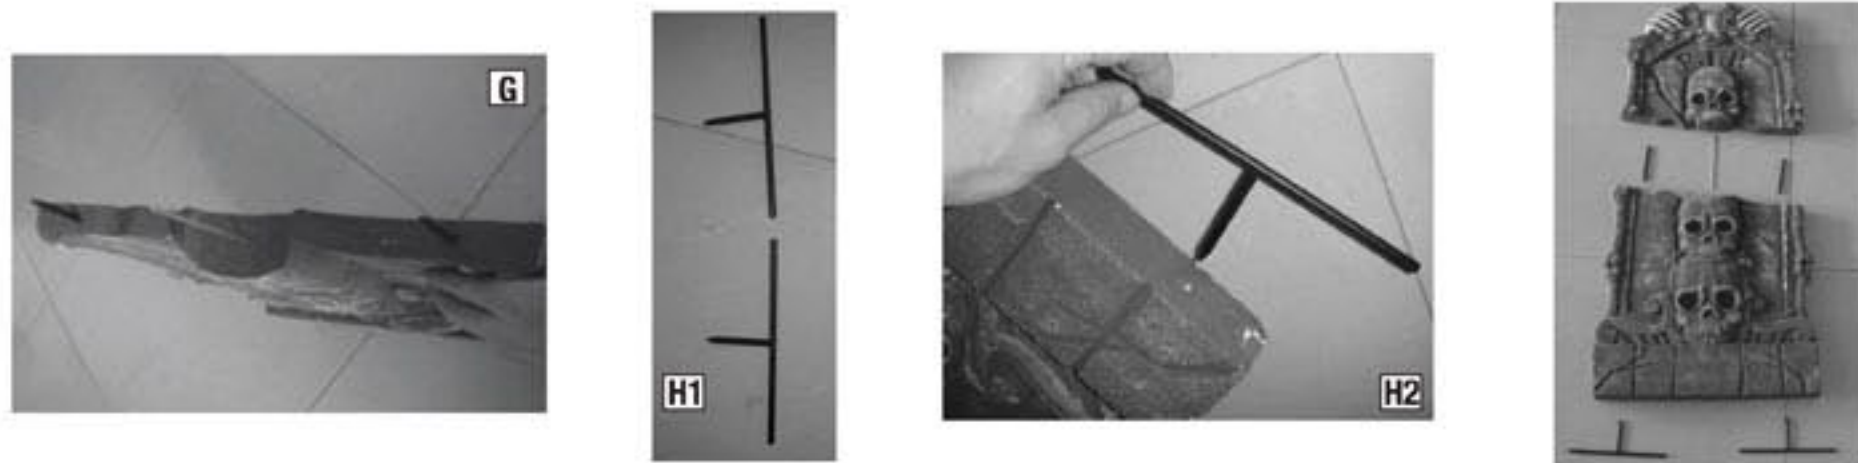
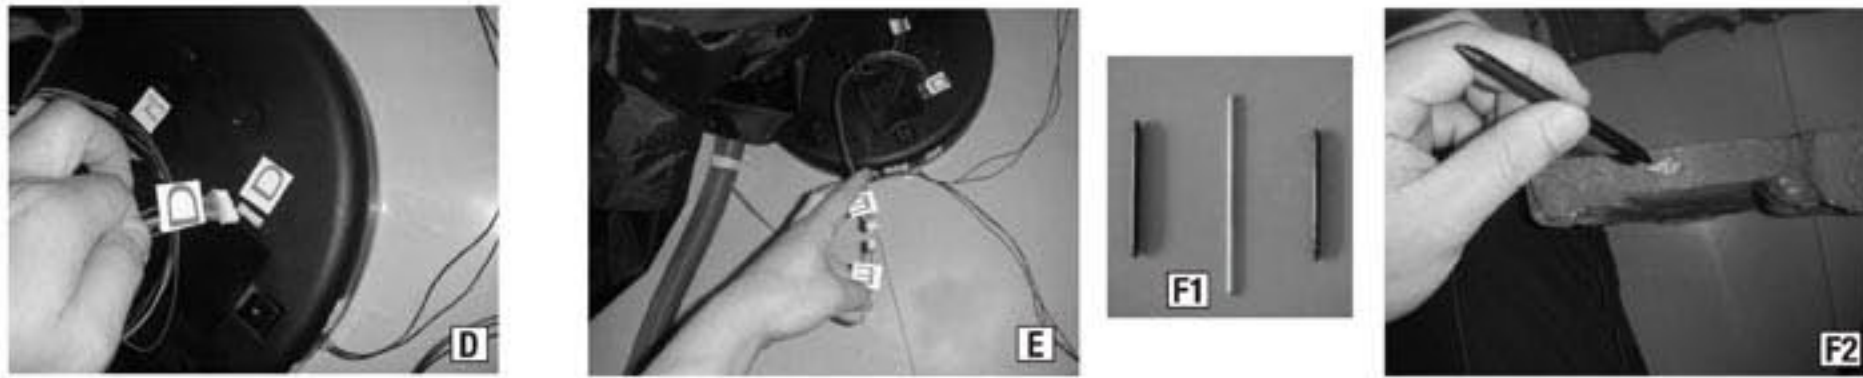


GUARDIAN OF THE GRAVE™

GUARDIAN OF THE GRAVE™ Setup instructions:

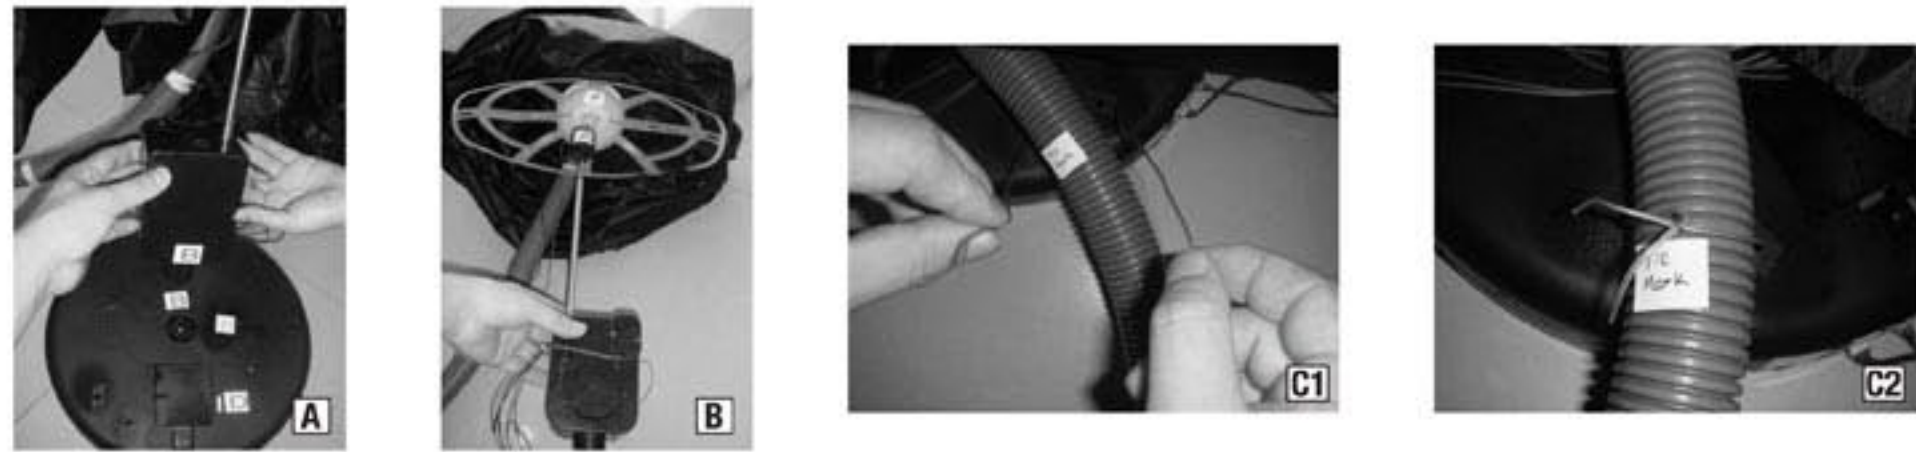

TOMBSTONE ASSEMBLY

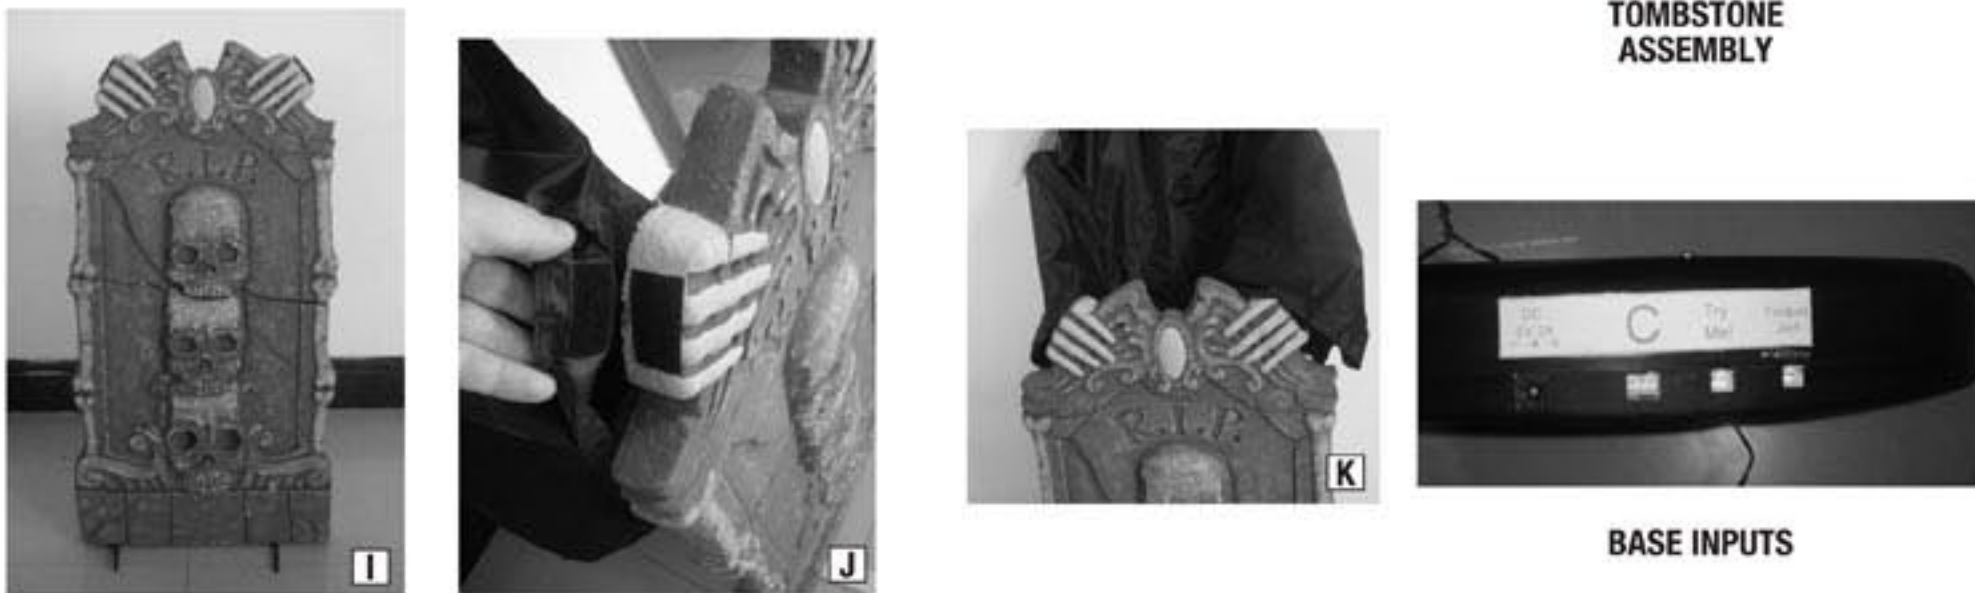

BASE INPUTS


- (refer to PHOTO A) Assemble TELESCOPING MODULE (Line up B to B) into BASE. Twist to lock.
- (refer to PHOTO B) Assemble SHOULDERS to TELESCOPING MODULE (Line up A to A). Twist to lock.
- (refer to PHOTOS C1 and C2) Twist tie FOG TUBE to BASE making sure to mount at area marked 'Tie Mark' on FOG TUBE.
- (refer to PHOTOS D, and E) Connect wires labeled PART D (Line up D to D), and PART E (Line up E to E).
- (refer to PHOTOS F1, F2, and G) Insert SPIKES into premade holes in TOP half of TOMBSTONE. Keep METAL SPIKE in Center.
- (refer to PHOTOS H1 and H2) Insert PLASTIC FEET into BOTTOM half of tombstone making sure to **keep feet level, or TOMBSTONE will not stand straight!!** Feet can also be turned to insert into soft ground.
- (refer to PHOTO I) Connect TOP half to BOTTOM half of TOMBSTONE.
- (refer to PHOTOS J & K) Set TOMBSTONE in front of GUARDIAN and velcro GUARDIAN'S SLEEVES to TOMBSTONE keeping TOMBSTONE very close to GUARDIAN.
- Insert 4AA batteries into battery compartment located on BASE and turn switch to 'ON' position to activate. Guardian is timed to activate every 2 minutes unless a loud sound overrides the 2 minute break. Guardian will also work with optional DC adapter. (6V 2A DC adapter not included, go to www.tekkytoys.com to purchase)
*****NOTE:** If GUARDIAN does not rise up to face forward, loosen twist-tie, and rotate fog tube slightly to allow GUARDIAN to face the proper direction. Then, re-tighten twist-tie.

STOP DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkytoys.com.

GUARDIAN OF THE GRAVE™

OPTIONAL FOG MACHINE Setup Instructions:

FOG MACHINE IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

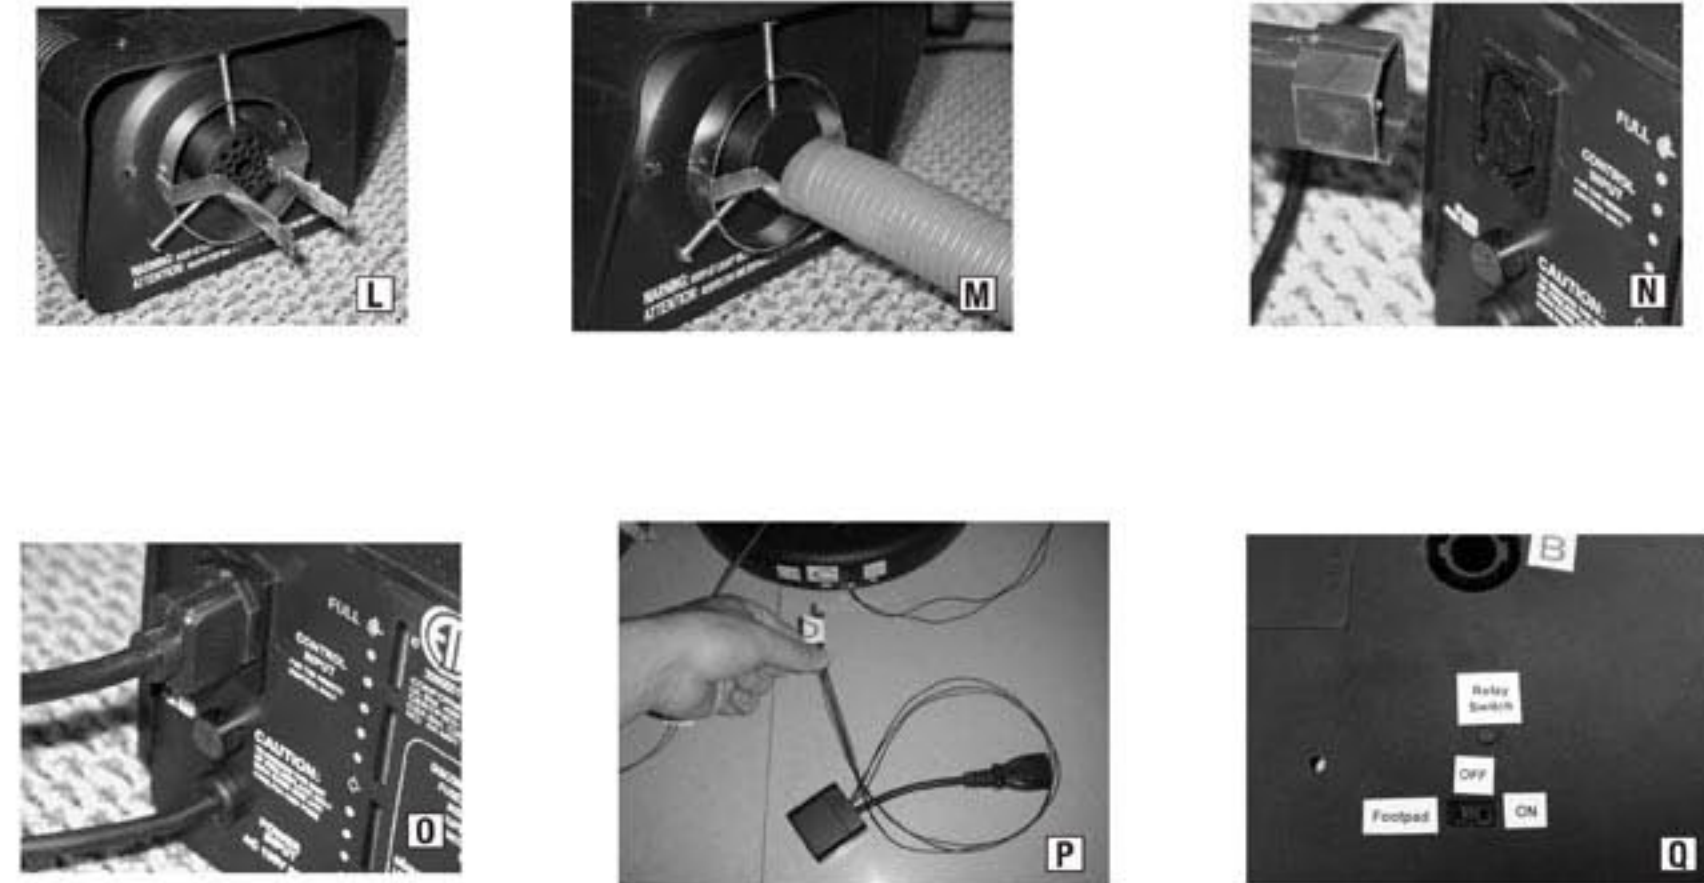

Optional Fog Attachment setup:
Your FOG MACHINE (select models) can be used in connection with the Guardian.
Only attach a FOG MACHINE as instructed below.

***** Make sure Guardian is set to the OFF position and your FOG MACHINE is not turned on*****

- (refer to PHOTOS L and M) Install METAL CLIP and FOG TUBE onto your FOG MACHINE (Note: leave about 1.5 inches space between fog machine nozzle and the end of the tubing, or tube may melt).
- (refer to PHOTOS N and O) Plug the Guardian's FOG CORD into your FOG MACHINE. IF FOG CORD will not plug in, or your machine does not interface with the Guardian, we recommend that you not use optional fog attachment.
- (refer to PHOTO P) Plug other end of FOG CORD into BASE of Guardian (Attach C to C).
- (refer to PHOTO Q) Make sure your FOG MACHINE is heated up properly, then turn GUARDIAN switch to ON position. If fog does not appear from mouth, try pressing the relay switch on the BASE.

Caution:

Do not touch the Guardian, cords, or any part connected to Guardian when it is plugged in.
Do not operate the Guardian in wind/rain.
Do not operate the Guardian until you have completely finished assembly.
For best overall performance, please shut off the Guardian when not in use.
Do not tamper with MODULE or FOG CORD whatsoever. Warranty voided if any part is tampered with.
USE SAFETY when using Fog Machine attachment, and strictly adhere to all printed Fog Machine Warnings.

***** No weight should be placed on the item. *****

STOP DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkytoys.com.