

# HAUNTED TOASTER™


Item#  
58399



## OPERATING INSTRUCTIONS:

1. Insert 3 brand new 'AA' alkaline batteries into the battery compartment located on bottom of toaster.
2. Place the switch on the module to the "SOUND SENSOR" position to operate in sound activation mode. Clap or make a loud sound to activate scary sequence.
3. Place the switch on the module to the "BUTTON" position to activate the item using the yellow TRY-ME button.

NOTE: Keep the switch in the "OFF" position when not in use.

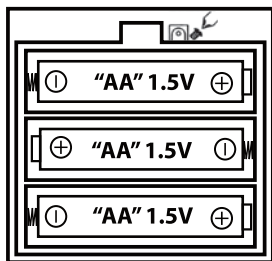

### BATTERY INSTRUCTIONS & CAUTIONS:

- Use only the batteries recommended by the manufacturer.
  - Remove batteries when not in use.
  - Do NOT use rechargeable batteries.
  - Be sure to insert the batteries with the correct polarity +/-.
  - Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
  - Always dispose of exhausted batteries properly.
  - Do NOT dispose of batteries in fire, they may leak or explode.
- Adult supervision recommended when changing batteries.**

**FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT:**  
[www.tekkyaccessories.com](http://www.tekkyaccessories.com)



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.

**Surface Washable Only.**

ALL NEW MATERIALS : PLASTIC

Battery Powered: Requires 3 "AA" Batteries (included)

HAUNTED TOASTER is a trademark of Tekky.  
Copyright © 2017 Tekky. All Rights Reserved.

**MADE IN CHINA**



### WARNING:

Not a toy. Decorative use only.  
This product is intended for use by  
persons 15 years of age and older.



**TEKKY**

[www.tekkydesign.com](http://www.tekkydesign.com)