



6 FOOT INFERNO SCARECROW™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.







WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.



1. Insert METAL SNAP LOCK POLES into METAL STAND. (Match **A** to **A**)
2. Insert METAL SNAP LOCK POLES into METAL STAND. (Match **B** to **B**)
3. Insert WAIST BRACKET AND MODULE into METAL SNAP LOCK POLES. (Match **C** to **C**)
4. Lift the clothing on the HEAD BODY AND ARM and insert the pole into the WAIST BRACKET AND MODULE. (Match **D** to **D**)
5. Connect the arm poles located inside his **RIGHT** sleeve under the shoulder area on the HEAD, BODY AND ARM. (Match **E** to **E**)
6. Attach RIB CAGE AND FABRIC to HEAD BODY AND ARM using the hook and loop fasteners located underneath the burlap collar.
7. Reach inside the HEAD BODY AND ARM and connect all three wires located inside the clothing. (Match **F** to **F**) (Match **G** to **G**) and (Match **H** to **H**)
8. Gently unbend and pose his **LEFT** (non-moving) arm as pictured.
*Make sure the motion sensor is clear from fabric and other obstructions.
9. Reach inside the fabric on the HEAD BODY AND ARM. Connect 6V 2A ADAPTER (not included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the MODULE. Turn the switch to the ON position to activate the item. Move in front of the item or make a loud sound (clap) to activate. Turn item OFF when not in use.
WARNING: FAST MOTION. STAY CLEAR OF SWIPING ARM WHILE OPERATING!

PARTS

1. STAND (QTY 1)
2. METAL SNAP LOCK POLES (QTY 4)
3. HEAD, BODY, AND ARM (QTY 1)
4. WAIST BRACKET AND MODULE (QTY 1)
5. RIB CAGE AND FABRIC (QTY 1)

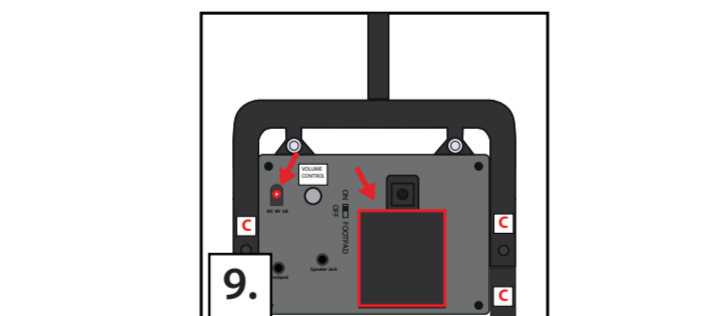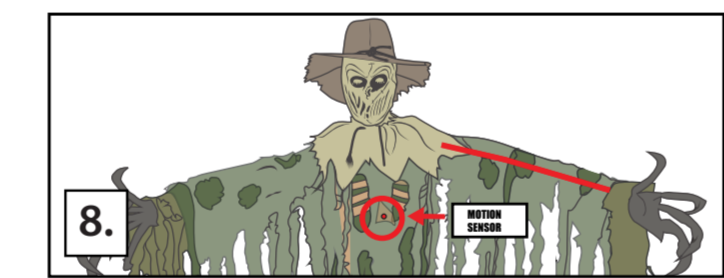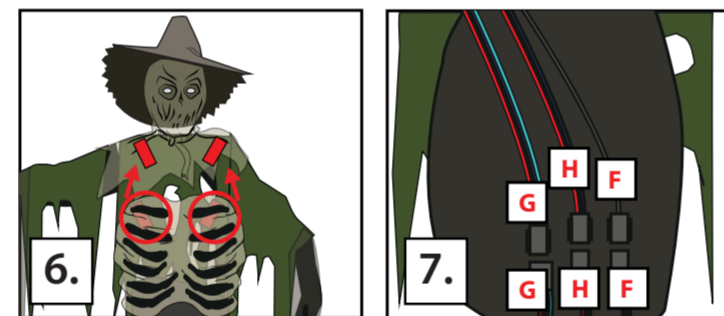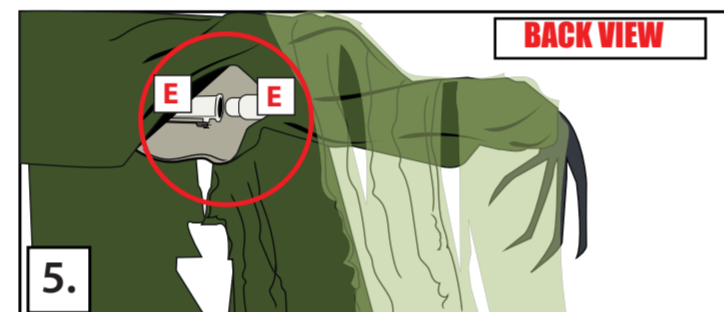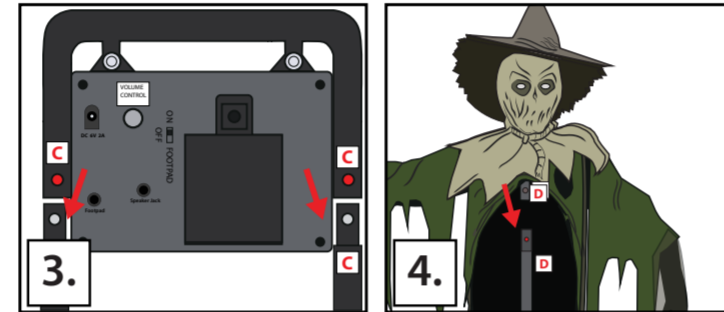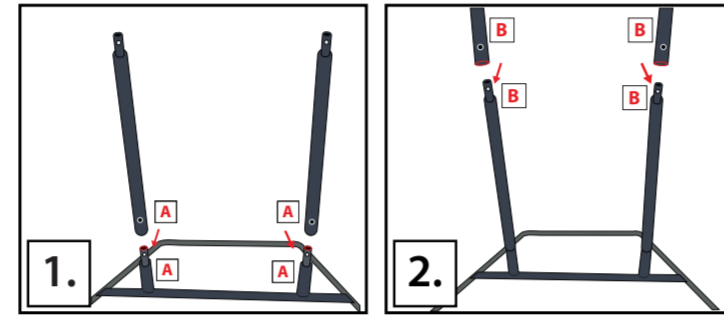

TROUBLESHOOTING	
PROBLEM	SOLUTION
Item will not activate/Motion sensor does not work	Ensure motion sensor is located on the front of the chest is not blocked by fabric or any other obstructions. To test the motion sensor shine a flashlight in the motion sensor tube. See Illustration 8.
Item will not activate/Arm will not move	Ensure all wires are connected securely and matched with the correct labels. See Illustration 7.
Sound is distorted or faint	If using batteries, replace with fresh batteries.
No Sound.	Ensure the volume knob is not turned all the way down.
No flaming effect in head.	Ensure all wires are connected securely and matched with the correct labels. See Illustration 7.
Still experiencing a problem?	Please call 1-877-527-0313 or go to tekkydesign.com for further assistance.

OPTIONAL FOOTPAD SET UP
FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the MODULE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!
* Footpads and adapters are sold separately and can be purchased at www.tekkyaccessories.com

OPTIONAL EXTERNAL SPEAKER SET UP
EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the MODULE.
2. Use volume knob on external speaker to control volume levels.

SMART PHONE SCAN SETUP VIDEO

BATTERY INSTRUCTIONS AND CAUTIONS
Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Battery Diagram

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND. DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION. RECOMMENDED FOR SHELTERED OUTDOOR USE.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Home Depot, 2455 Paces Ferry Road, Atlanta, GA 30339 1-877-527-0313

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

INFERNO SCARECROW™ is a trademark of Tekky.
Copyright © 2021 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, or any parts missing, please go to tekkydesign.com for assistance or call 1-877-527-0313



SKU# 1006 128 459 Model# 21TK59506



6 FOOT INFERNO SCARECROW™

ARM REPAIR

ARRRGH!
MY SHOULDER!
I CAN BE FIXED!!




- TOOLS NEEDED**
1. DRILL
 2. 9/64 DRILL BIT
 3. PHILLIPS SCREW DRIVER
 4. PLIERS
 5. #6-32 NYLON LOCK NUT
 6. #6-32 1-1/2 INCH MACHINE SCREW




IF YOU HAVE A LOOSE ARM, OR ARM THAT HAS COME UNSEATED, USE THE FOLLOWING STEPS TO THE SECURE ARM AND SHOULDER.




1. SEAT THE LOOSE MODULE ON THE SHOULDER WITH THE RECEPTACLE AND BODY FACING FORWARD.

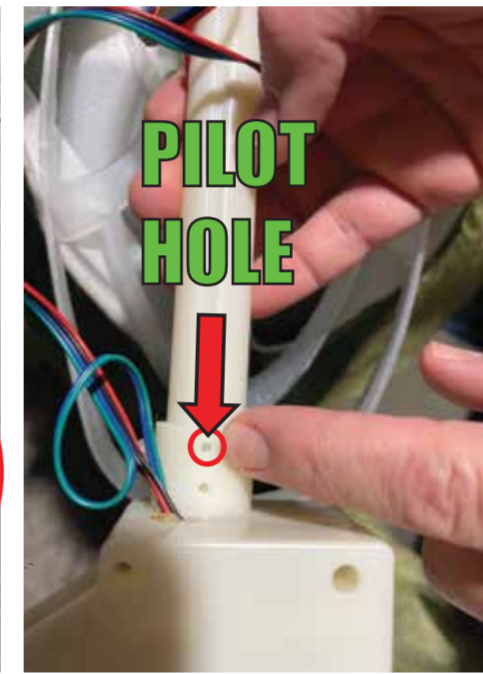


2. LOCATE THE PILOT HOLE.

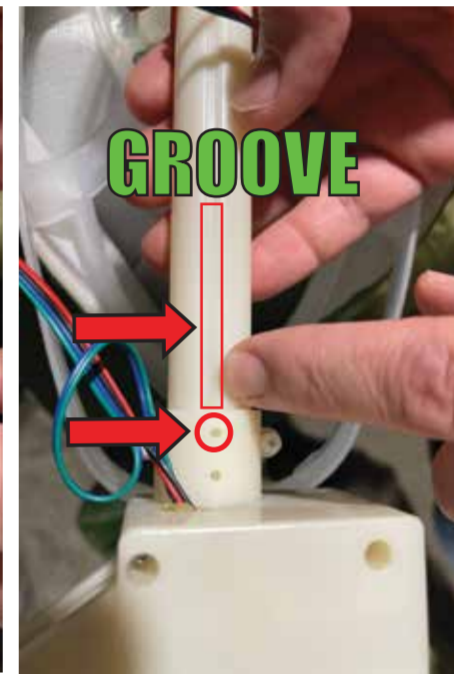


3. LINE UP THE PILOT HOLE WITH THE GROOVE IN THE POLE.

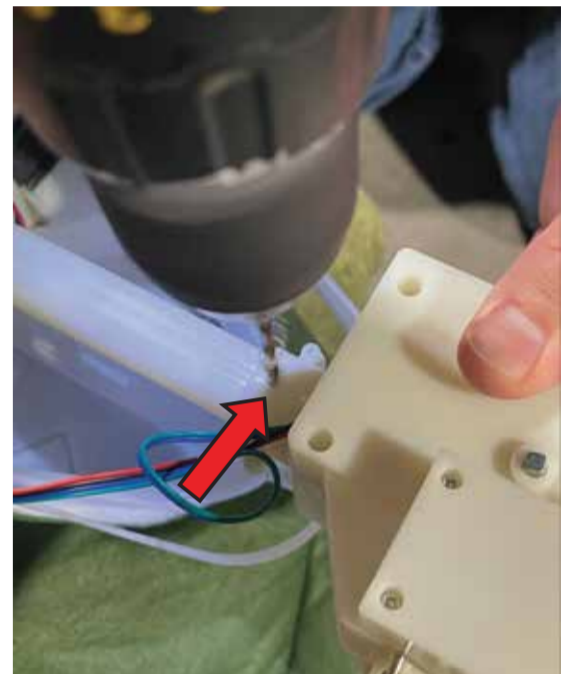

4. CAREFULLY DRILL INTO THE PILOT HOLE.

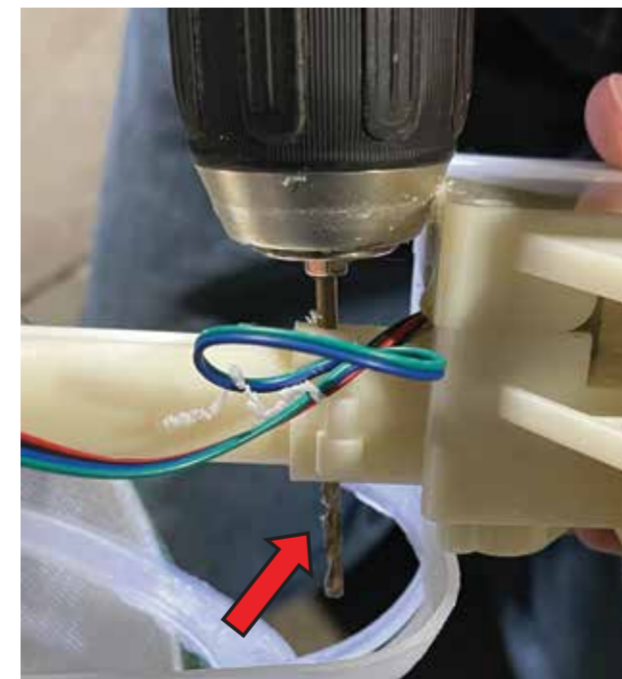

5. DRILL ENTIRELY THROUGH THE POLE.

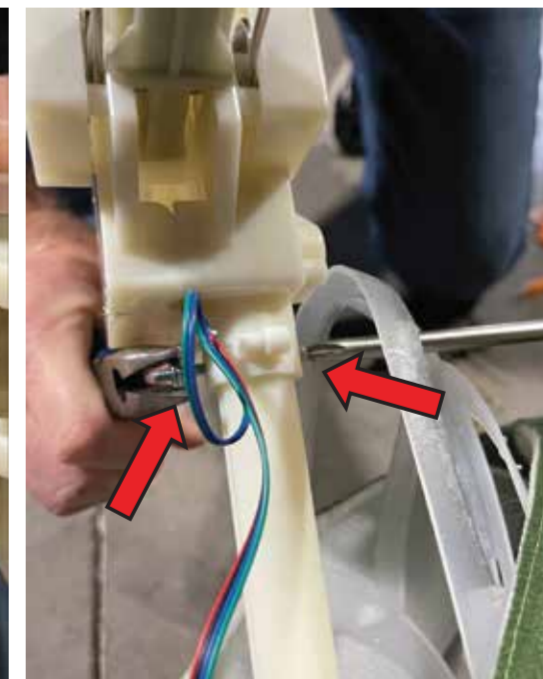

6. INSERT THE MACHINE SCREW AND THREAD THE NYLON LOCK NUT AND FASTEN.



7. SHOULDER AND ARM ARE NOW FASTENED SECURELY. CONTINUE WITH SCARING!!