

INSANE SERIAL KILLER™

Installation and Operating Instructions

REMOVE ALL PARTS FROM PACKAGING.
KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

PARTS INCLUDED:

BASE (1)
POLE (1)
HEAD WITH CLOTHES (1)

Make sure to seat the Insane Serical Killer on a level chair when setting it up! If the BASE is not level, it will NOT function correctly.

- 1) Insert POLE into back of clothing and snap-lock into the base of the neck (match up B to B). See photo 1.**

Note: Align the snap-locks with the snap-holes and press firmly until locked in place.

- 2) Insert POLE into BASE (match up A to A). See photo 2.**

Note: Align the snap-locks with the snap-holes and press firmly until locked in place.

- 3) Wrap velcro straps under chair, pull very taut, and connect to each other.**

Note: Velcro must be connected very tight so BASE does not move.

- 4) Tie the loose ends of the rope that are attached to his legs around the chair legs to give the apperance that he is bound to the chair.**

- 5) Insert 4 "AA" brand new, fresh alkaline batteries into the battery compartment located on the botom of the BASE, or connect a 6V 2A DC adapter to the jack located on top of the BASE (see photo 3).**

Note: DC adapter sold separately and can be purchased at www.tekkytoys.com.

- 6) Turn switch (on top of BASE) to the ON position to operate in motion/sound-activation mode. Item will operate when motion or a loud sound is detected.**

- 7) Zip up the zipper near the back of BASE (see photo 4).**

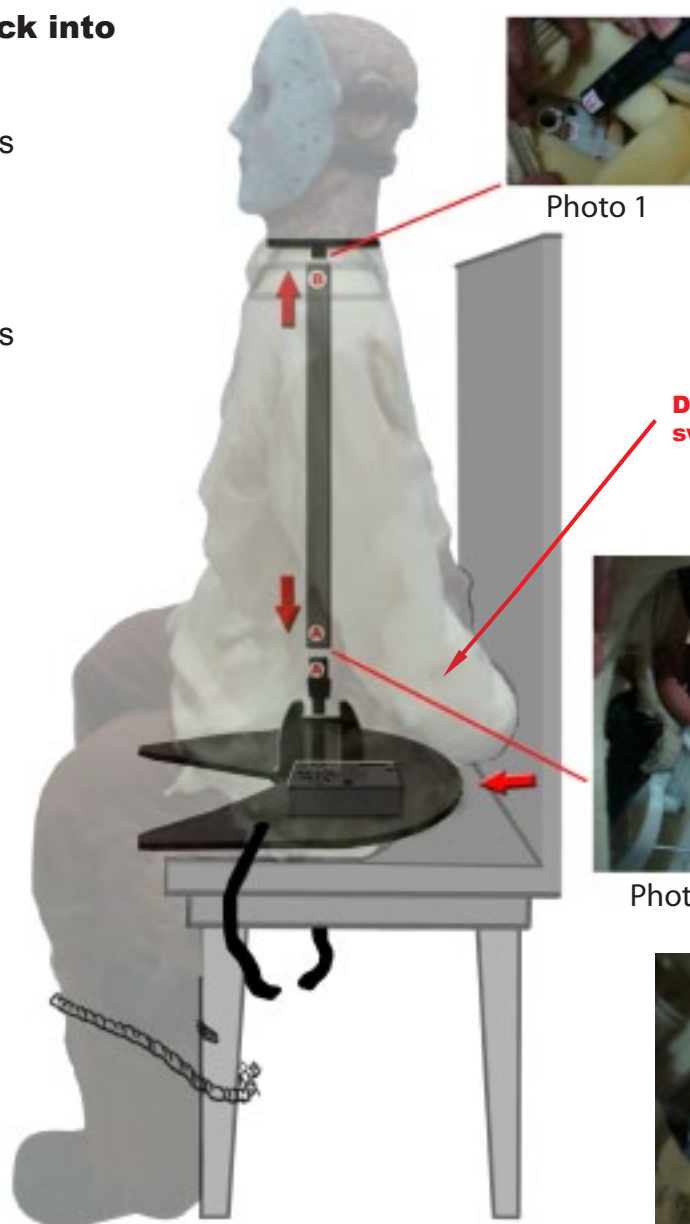


Photo 1

DC jack & ON/OFF/FOOTPAD switch located here.



Photo 2



Photo 3

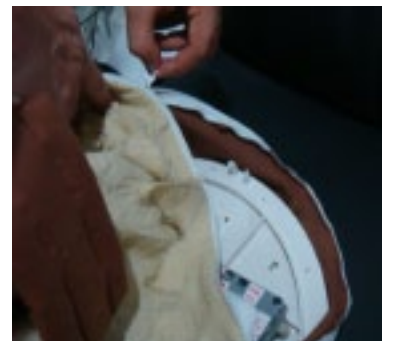


Photo 4

Optional Footpad Setup

Follow initial installation instructions first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the "FOOTPAD" position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence.

*footpads are sold separately and can be purchased at www.tekkytoys.com

Warning: This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. Not intended for use by children 13 years of age and younger.

WARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

***** No weight should be placed on the item. *****

Caution:

Do not touch cords, or any part connected when plugged in.
Do not operate until you have completely finished assembly.
For best overall performance, please shut off when not in use.

Powered by Battery (4 "AA") or 6V 2A DC Adapter (optional)
Optional footpad and/or DC Adapter are sold separately
and can be purchased at www.tekkytoys.com.

Requires 4 "AA" Batteries

Create your own Halloween scene with all of Tekky Toys' animated products!

www.tekkytoys.com

ALL NEW MATERIALS: PLASTIC, POLYESTER, POLYESTER FIBER

Surface washable only.

WITCH'S BREW is a trademark of Tekky Toys.

Copyright © 2007 Tekky Toys. All rights reserved.

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkytoys.com.

