


INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

Setup Instructions: Jumping Spider

PARTS:

1. Module with Spider
2. Front Foot
3. Back Foot
4. Side Feet
5. Foot Removal "Key"

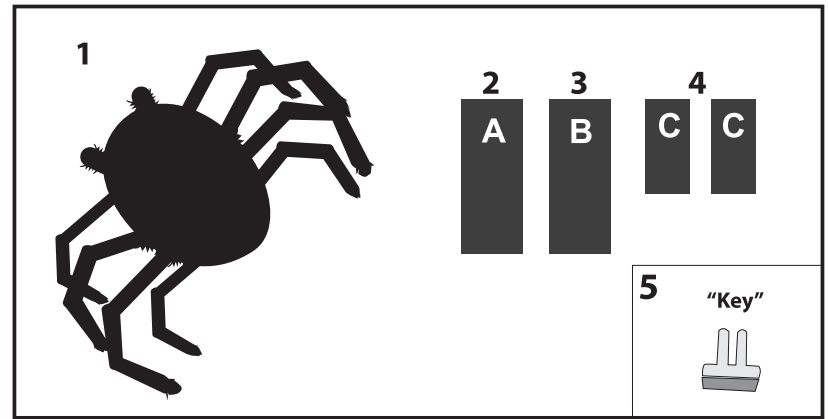

1.) Insert Front Foot into bottom of module until locks into place. (Match up A to A)

Note: Press to make sure supports are FLUSH with rectangular base. To remove FOOT, insert plastic "Key" (included) into holes on bottom to release locks and pull.

2.) Insert Back Foot into bottom of module until it locks into place. (Match up B to B)

3.) Insert Side Feet into bottom of module until they lock into place. (Match up C to C)


4.) Lift spider wrapped in fabric until poles are vertical and attach 2 springs as shown.

5.) Insert 4 AA batteries into the battery compartment located on the bottom module or connect DC adapter. (Sold separately)

6.) Release tie holding fabric, and attach velcro under clothing to opposite velcro located on four Feet.

7.) Spread out fabric and pose legs as desired.

Note: Make sure there are no obstructions to hinder the Spiders movement.
Turn switch to the ON position to operate in Sound or Motion activation mode.
Make a loud sound (clap) or move in front of the item to activate.

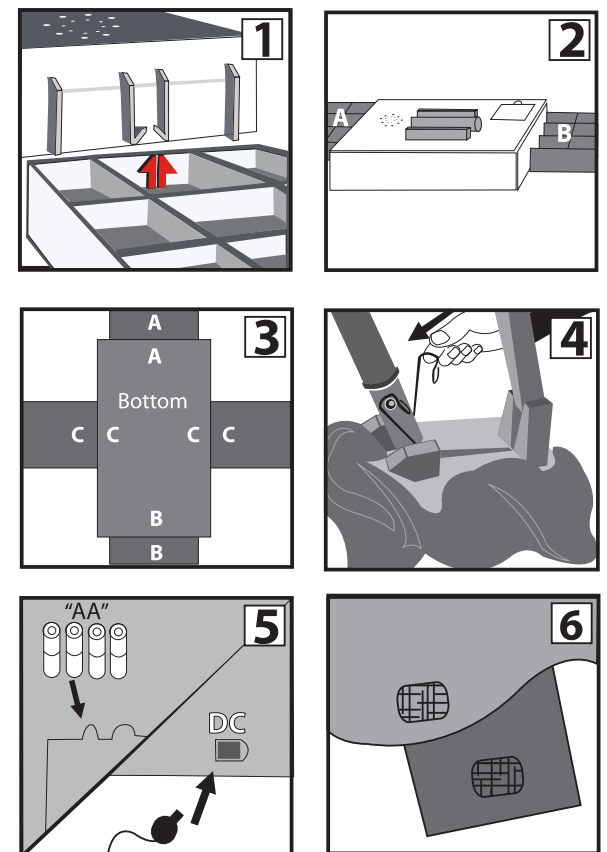

Optional Footpad Setup

Follow Steps 1 through 5 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (Go to instruction #6 to continue setup.)


NOTE:

When plugging in, make sure pins line up properly with holes on plug.
Align plug, groove side down, with the notch.

CAUTION!

Not aligning the plug to jack properly may cause permanent damage to Foot Pad jack of your item. Do not use excessive force when inserting plug.

*Footpads are sold separately and can be purchased at www.tekkytoys.com

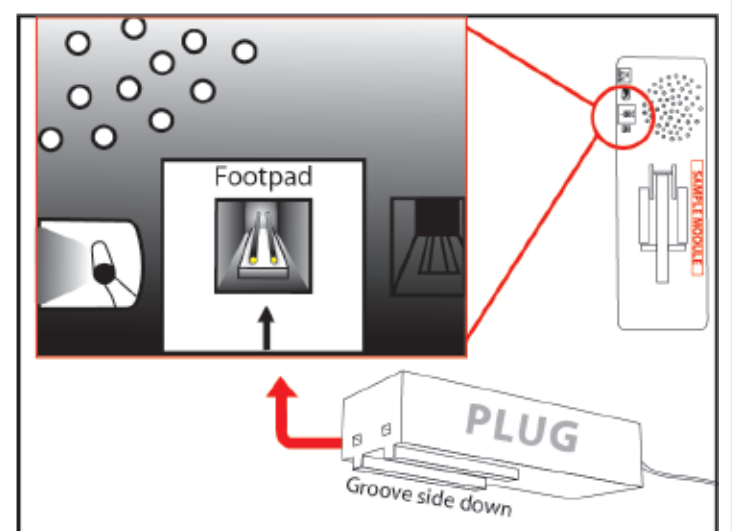

If you hear a constant "clicking" sound and this item does not function properly, it means that there is an obstruction preventing the item from operating (for example: rock, bush, incline, etc.). The clicking sound does not mean that it is broken, just remove any obstruction and the item should function normally.

SMART PHONE SCAN SETUP VIDEO



****No weight should be placed onto item****

****For indoor use only****

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

Stay clear of item while operating.



visit us: tekkytoys.com

Requires 4'AA' Batteries
or optional DC Adapter (6V 2A)
Surface washable only.
ALL NEW MATERIALS:
PLASTIC, POLYESTER,
POLYESTER FIBER

JUMPING SPIDER
is trademark of Tekky Toys.
Copyright © 2011 Tekky Toys.
All Rights Reserved.



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to
www.tekkytoys.com for assistance.