


# LEVITATOR GIRL™

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN





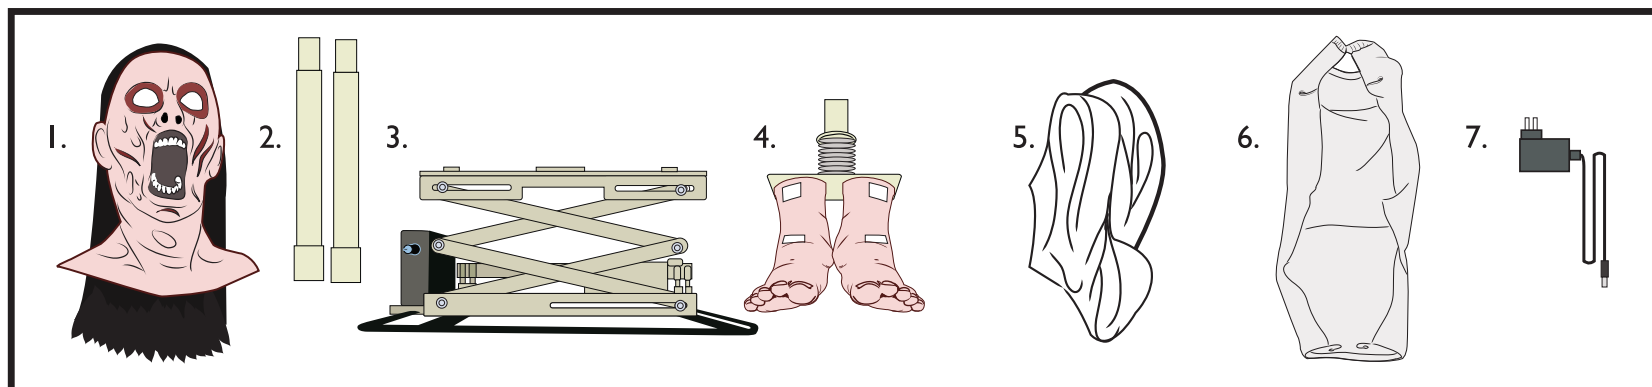


### PARTS

1. HEAD
2. POLES QTY 2
3. MODULE
4. FEET
5. TOP SHEET
6. FABRIC LINER
7. 6V2A ADAPTER





Before beginning assembly, remove all parts from packaging. Pay special attention when removing twist tie securing hair to inner cardboard.

1. Snap lock POLE marked D underneath the HEAD.
2. Snap lock POLE C to FEET.
3. Slide poles through slots located on the top of the module. Snap lock A to A and B to B.
4. Slide elastic end of FABRIC LINER over the HEAD.  
**NOTE:** Make sure the hook and loop fastener near the elastic band on the FABRIC LINER is facing upright, and the two hook and loop fasteners at the bottom of the FABRIC LINER face downward so they can attach to the fasteners on the tops of the feet as shown in Step 6.  
Fasten metal hooks located underneath the FABRIC LINER. Elastic Ring on FABRIC LINER should cover any exposed plastic shoulder framework.
5. Attach hook and loop fastener located on the FABRIC LINER to the hook and loop fastener located on the chest.
6. Attach hook and loop fastener located at the foot end of FABRIC LINER to the ankles. Fasten hooks located underneath the FABRIC LINER.
7. Run wire marked E from head OVER the wire fasteners and out the bottom of the FABRIC LINER.
8. Place TOP SHEET over the FABRIC LINER. Attach hook and loop fastener located underneath FABRIC TOP SHEET to FABRIC LINER. Run wire marked E from HEAD through the 2 fabric loops on the underside of TOP SHEET.
9. Attach hook and loop located underneath the TOP SHEET and attach them to the top of the FEET.

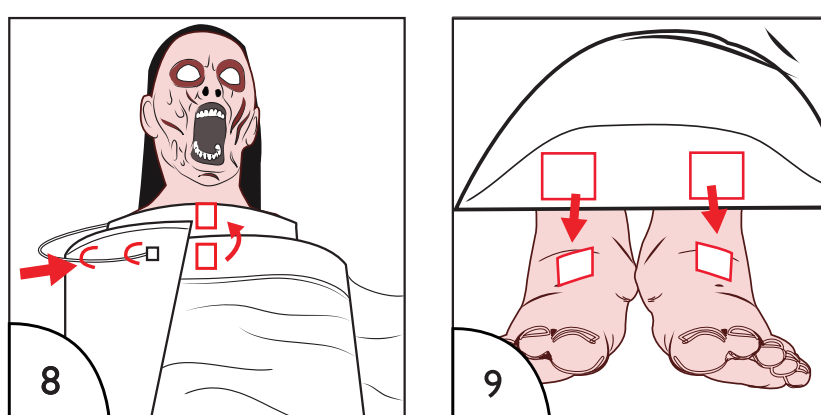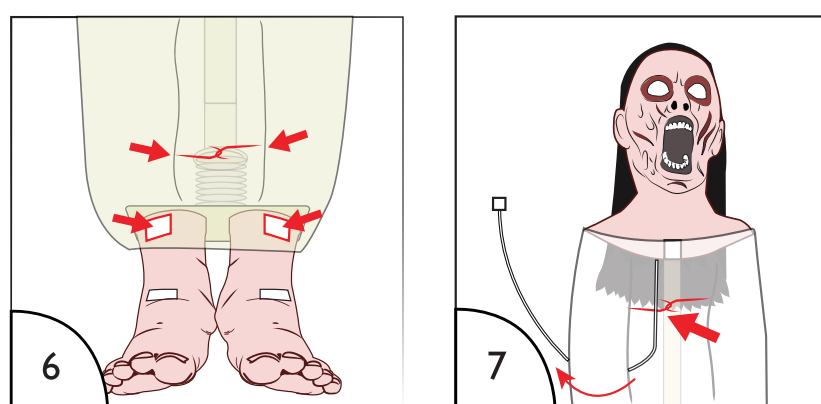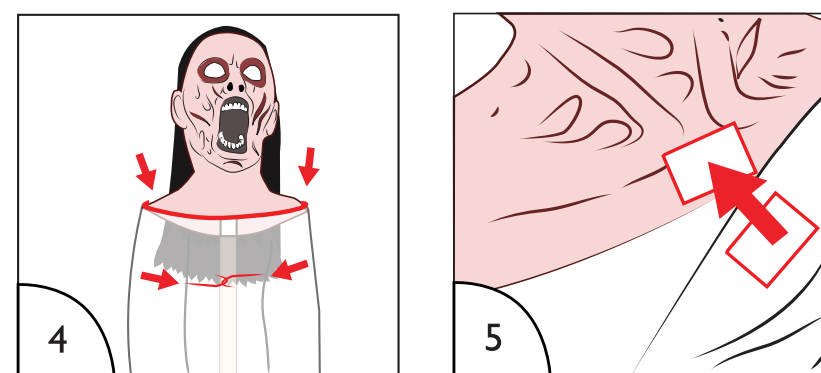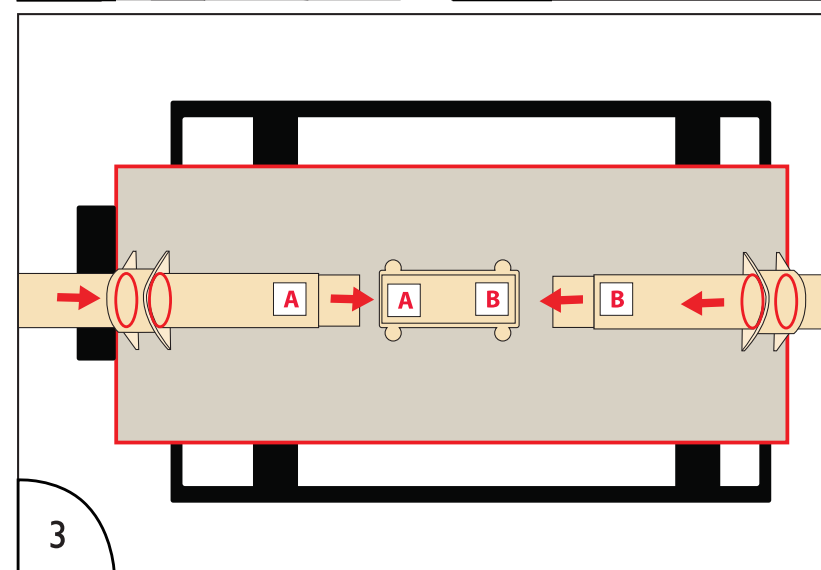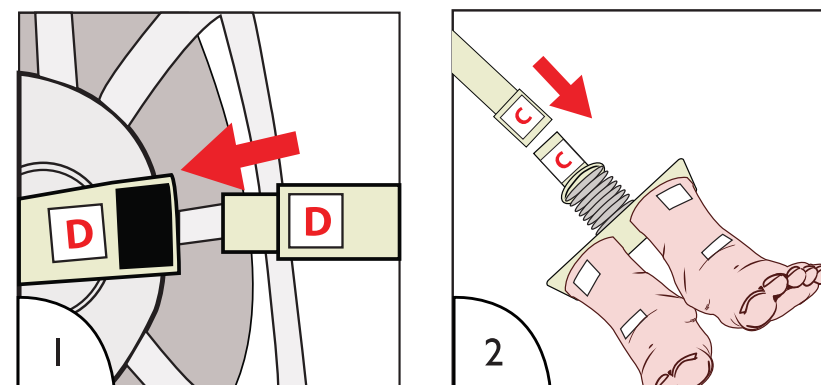

\* The FABRIC LINER will be in an oval shape around the body. TOP SHEET is in proper position with TOP SHEET LOOPS located near the head. Head wire will run over metal fastener of FABRIC LINER and through the TOP SHEET LOOPS.



10. Connect wire running through the TOP SHEET loops to the wire running from the MODULE. Connect E to E.
11. Connect 6V2A ADAPTER or insert 4 AA alkaline batteries into the battery compartment located on the MODULE.
12. Turn switch on control box to ON to operate in Sound activation mode. Adjust volume control knob as needed. Make a loud sound (clap) to activate. Leave switch in OFF position when not in use.
13. Position Levitator Girl on level ground with enough room for the item to move up and down freely.

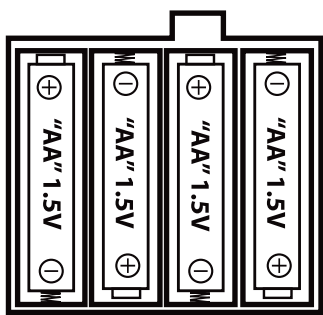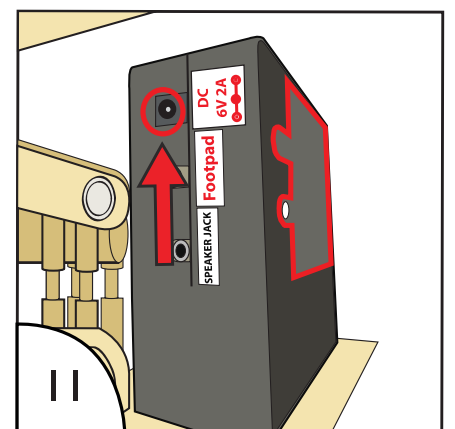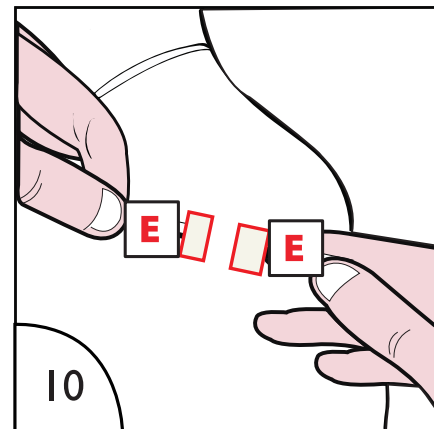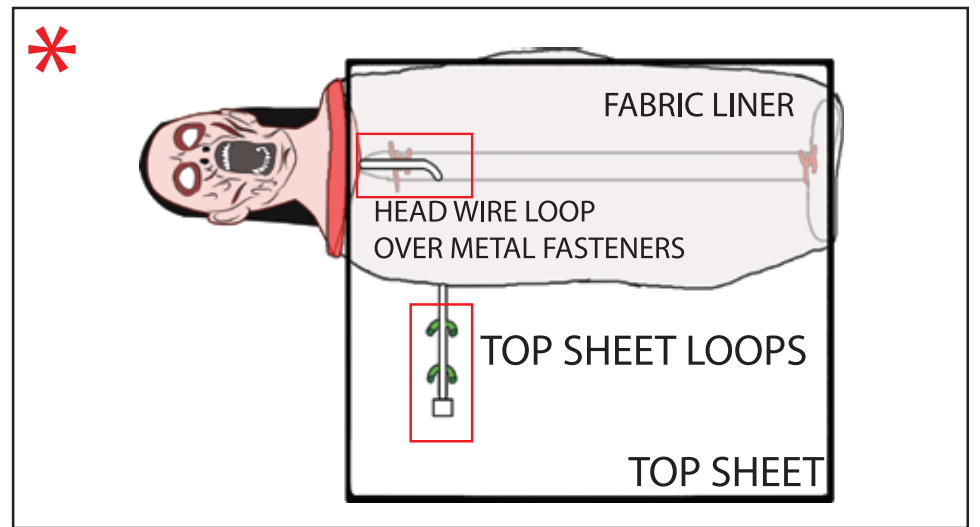

#### Battery Instructions and Cautions

- Use only the batteries recommended by the manufacturer.
- Remove batteries when not in use.
- Do NOT use rechargeable batteries. • Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium or rechargeable.
- Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

ADULT SUPERVISION RECOMMENDED WHEN CHANGING BATTERIES.

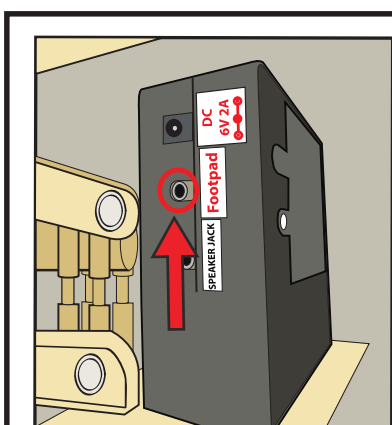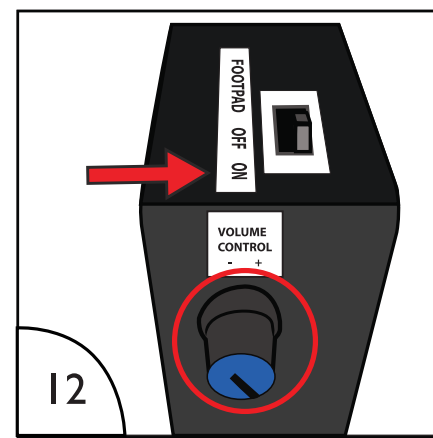

#### Optional Footpad Setup

Follow steps #1 through 10 on initial installation first.

1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the MODULE.
2. Place the switch on the MODULE into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #11 to continue setup)

\*Footpads are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)



FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT: [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

**STOP** DO NOT RETURN THIS ITEM TO THE STORE!  
If experiencing technical difficulties, please go to [tekkydesign.com](http://tekkydesign.com) for assistance.



**TEKKY**

[www.tekkydesign.com](http://www.tekkydesign.com)

Surface Washable Only.

ALL NEW MATERIALS :  
POLYESTER FIBERS, COTTON FELT,  
PLASTIC, WIRE

Requires 4 'AA' Batteries (Not included) or optional 6V2A Adapter (sold separately)

LEVITATOR GIRL is a trademark of Tekky.  
Copyright © 2017 Tekky. All Rights Reserved.

MADE IN CHINA

#### Outdoor Warning

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather conditions (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F).

#### Warning!

**This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 and under.**

#### WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND. DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION**

#### Trouble Shooting Steps

- If you hear a constant "clicking" sound and this item does not function properly it means there is an obstruction preventing the module scissor arm from lowering fully. The clicking sound does not mean that it is broken, just remove any obstruction and the item should function normally.
- You can only use batteries OR an adapter. Not both at the same time.
- The item must be sitting level to function optimally.
- Make sure fabric hanging from body does not get caught in module.
- Make sure fabric liner is secured properly with metal hooks and all hook and loop fasteners are attached.
- Do not place any weight on this item.