

LIFE SENTENCE


INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

Setup Instructions: Life Sentence

PARTS:

1. Cellar Frame with Module
2. Tent
3. Fog Cord

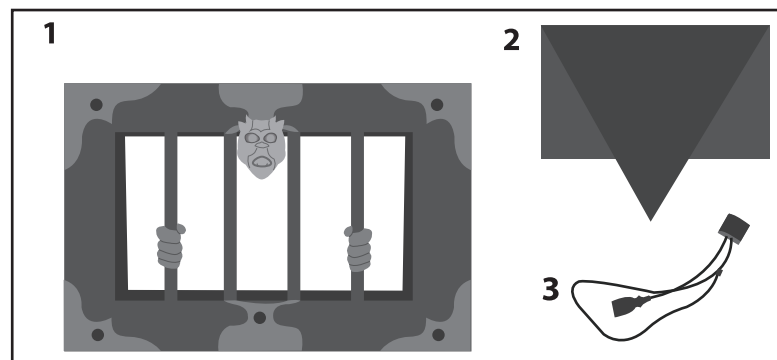

1.) Insert top metal brackets on Tent into holes located on back of Cellar Frame with Module. (Match A to A) Repeat for the opposite side.

2.) Insert bottom metal brackets on Tent into holes located on back of Cellar Frame with Module. (Match B to B) Repeat for the opposite side.

3.) Insert 4 AA batteries into the battery compartment located on the back of module, or connect DC adapter (sold separately).


Note: Turn switch on module to the ON position to operate in Timer/Sound & Motion mode (Life Sentence will function with 1.5 minute breaks between cycles - clap or make motion in front during 1.5 minute break to instantly start the item playing again.) Leave switch in OFF position when not in use.

Optional Fog Machine Set Up:

Your Fog Machine (select models) can be used in connection with Life Sentence.

****Make sure Life Sentence is set to the OFF position and your FOG MACHINE is not turned on****

- 1.) Plug the Fog Cord into your fog machine. (See illustration 5)
If Fog Cord will not plug in, or your machine does not interface with Life Sentence, we recommend that you not use the optional fog attachment.
- 2.) Plug other end of Fog Cord into Module. (Attach C to C)
(See illustration 6)
- 3.) Make sure your Fog Machine is heated up properly, then turn the switch on the back of the Module to the ON position. If fog does not appear, try pressing the relay switch.
(See illustration 7)
- 4.) Place fog machine so that it is completely enclosed in the tent. (See illustration 8)

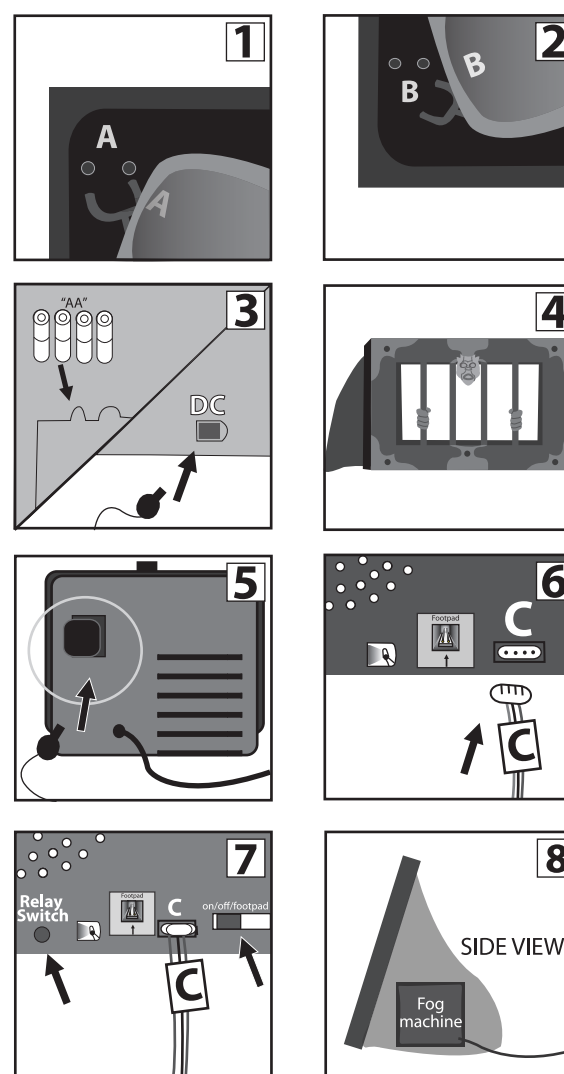


Optional Footpad Setup

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence.

NOTE:
When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

CAUTION!
Not aligning the plug to jack properly may cause permanent damage to Foot Pad jack of your item. Do not use excessive force when inserting plug.

*Footpads are sold separately and can be purchased at www.tekkytoys.com

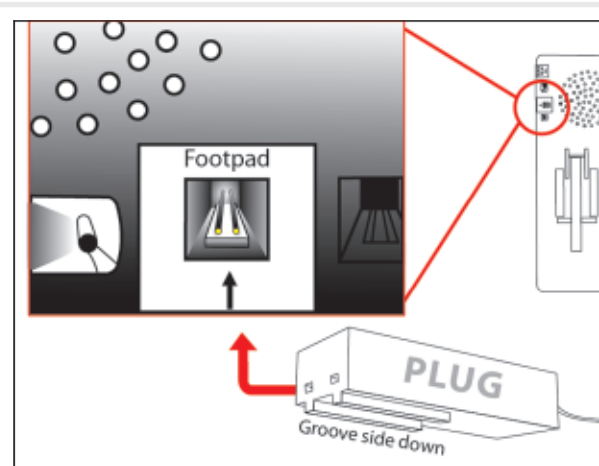

SMART PHONE SCAN SETUP VIDEO



Requires 4'AA' Batteries
or optional DC Adapter (6V 2A)
Surface washable only.
ALL NEW MATERIALS:
PLASTIC, POLYESTER,
POLYESTER FIBER

LIFE SENTENCE is a
trademark of Tekky Toys.
Copyright © 2011 Tekky Toys.
All Rights Reserved.

CAUTION: Do not tamper with Module or Fog Cord whatsoever. Warranty voided if any part is tampered with. USE SAFETY when using Fog Machine attachment, and strictly adhere to all printed Fog Machine Warnings.

****No weight should be placed onto item****

****For sheltered outdoor use only****

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
Stay clear of item while operating.

STOP DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkytoys.com for assistance.

