

Controls YOUR light switch!

LIGHT SWITCH LEVER™

Scary Lights & Sounds!

Works with most standard light switches.

SURFACE WASHABLE ONLY.

ALL NEW MATERIALS:
PLASTIC, METAL

Item #58481
LIGHT SWITCH LEVER™
is a trademark of Tekky.
Copyright © 2018 Tekky.
All Rights Reserved.

MADE IN CHINA

Manufactured for and distributed by:
Tekky, Orland Park, IL 60467 USA

TekkyDesign.com



RECOMMENDED INSTALLATION




ALWAYS TURN OFF POWER ON THE ELECTRICAL CIRCUIT BREAKER TO YOUR SWITCH WHILE PERFORMING SETUP.

1. Carefully remove and discard packaging.
2. Insert 3 brand new "AAA" alkaline batteries into the battery compartment located on the back of the Light Switch Lever™.
3. Using a screwdriver, remove the two screws securing your existing light switch plate. (DO NOT REMOVE PLATE.) Line up the cover placing it over the light switch with the handle in the down position. (See Illustration A)
* **NOTE:** If the Light Switch Lever™ does not fit securely over the plate, proceed to OPTIONAL INSTALLATION instructions (below).
4. Line up the exposed hole. Insert the screw in the top hole and tighten the screw securing the cover over the plate. (See Illustration B)
5. Move the handle of the Light Switch Lever™ into the up position — exposing the bottom hole — and insert your existing screw. Tighten the screw securing the Light Switch Lever™ to your light switch plate. (See Illustration C)
6. Turn power on electrical circuit breaker back on.
7. Flip the handle to operate the lights in your room and enjoy scary lights and sounds!

OPTIONAL INSTALLATION


ALWAYS TURN OFF POWER ON THE ELECTRICAL CIRCUIT BREAKER TO YOUR SWITCH WHILE PERFORMING SETUP.

1. Using a screwdriver, remove the two screws securing your existing light switch plate. Set your existing plate aside exposing the switch.
2. Place the Light Switch Lever™ over your light switch with the handle in the down position. Line up and insert the switch into the back cover. (See Illustration A)
3. Insert and tighten the screw in the exposed top hole securing the cover over the switch. (See Illustration B)
4. Move the handle of the Light Switch Lever™ into the up position exposing the bottom hole. Insert and tighten the screw securing the Light Switch Lever™ to the wall. (See Illustration C)
5. Turn power on electrical circuit breaker back on.
6. Flip the handle to operate the lights in your room and enjoy scary lights and sounds!

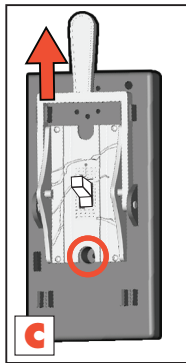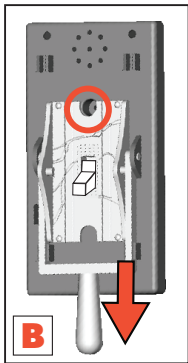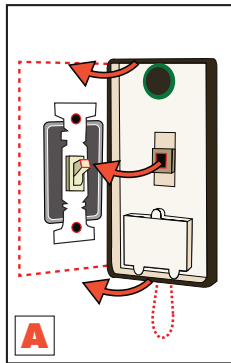

3AAA

Batteries Included
(for demo purposes only)

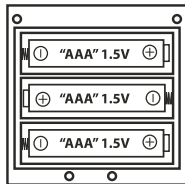

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

*****IMPORTANT*****
Always turn off power on the electrical circuit breaker to your switch while performing setup outlined below! **DANGER!** Electric shock could result if power is not shut off during installation. Also, make sure to thoroughly test the item with your switch to ensure it is functioning well and safely. If item does not function well or properly, do not use this item with your switch. **SAFETY FIRST!**