

MOTION ACTIVATED ANIMATED HALLOWEEN PROP SPOOKY JOKES AND "SOUND" EFFECTS

OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Replace demo batteries with three brand new "AA" alkaline batteries into the battery compartment located on back of the MAUSOLEUM™.
3. Place switch on back of item to the "ON" position.
4. Wave your hand in front of the MAUSOLEUM™ to activate the scary, silly sequence!

NOTE: Keep switch in the "OFF" position when not in use.


AGES 15+

3AA
BATTERIES
REQUIRED
(NOT INCLUDED)

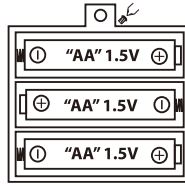

BATTERY INSTRUCTIONS + CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

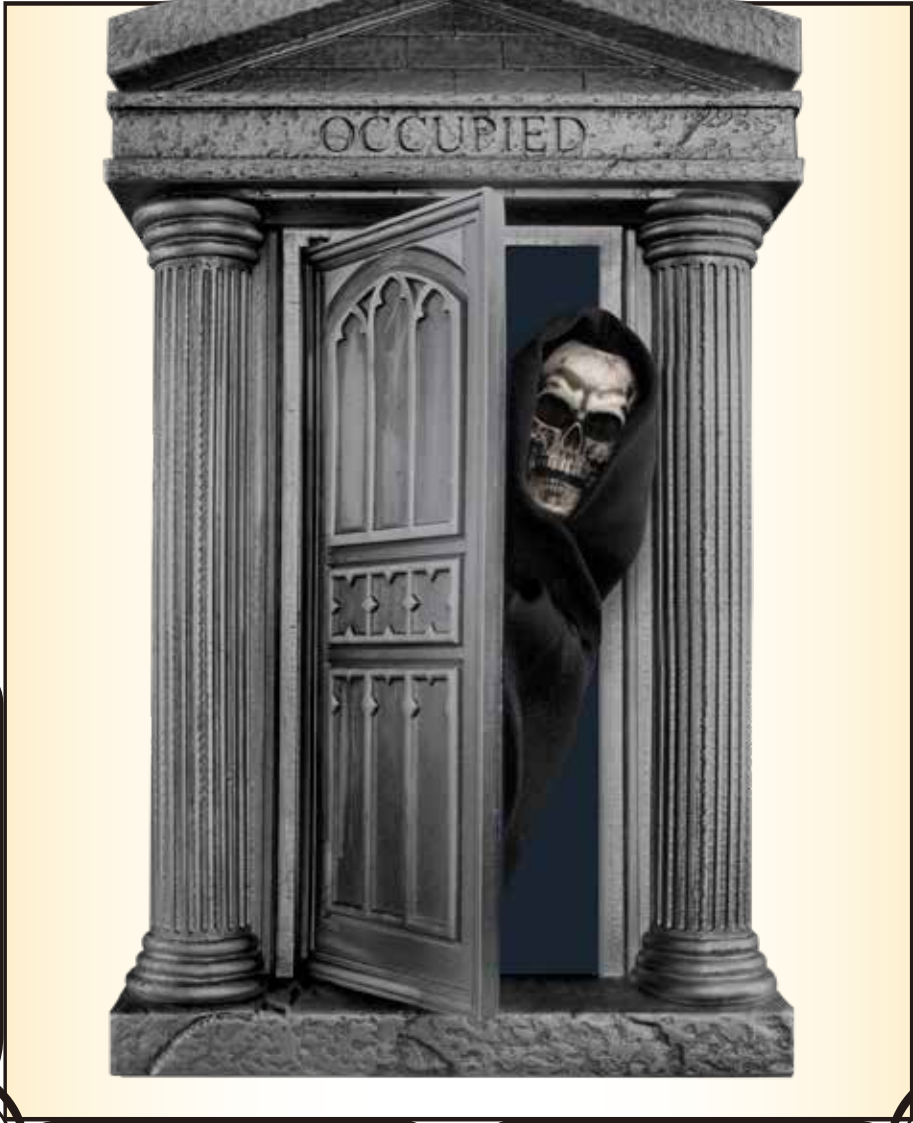

MAUSOLEUM™

INCLUDES ONE (1) MAUSOLEUM™ DECORATION.

DISPLAY ON LEVEL SURFACE.

ALL NEW MATERIALS: PLASTIC, FABRIC.
SURFACE WASHABLE ONLY. INDOOR USE.

ACTUAL ITEM MAY VARY FROM THE PHOTOGRAPHS
AND/OR ILLUSTRATIONS ON PACKAGE. ITEM #59146.

MAUSOLEUM™ IS A TRADEMARK OF TEKKY.
COPYRIGHT © 2021 TEKKY. ALL RIGHTS RESERVED.

TEKKYDESIGN.COM

⚠ WARNING

CHOKING HAZARD - small parts.

This item is not a toy. For decoration only.
This product is intended for use by persons 15
years of age and older. Not intended for use
by children 14 years of age and younger.