
POP UP PUMPKIN PATCHT

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN
WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME SEVEN MINUTES.


PARTS:


- 1. HEAD & BODY FRAME
- 2. RIGHT ARM
- 3. LEFT ARM
- 4. POP UP MODULE
- 5. POP UP FRAME & CONTROL BOX
- 6. HIP FRAME
- 7. BASE
- 8. TORSO POLE
- 9. LOWER SUPPORT POLES
- **10. UPPER SUPPORT POLES**
- 11. SMALL CLEVIS AND COTTER PIN
- 12. MEDIUM CLEVIS AND COTTER PIN
- 13. LARGE CLEVIS AND COTTER PIN
- 14. ADAPTER

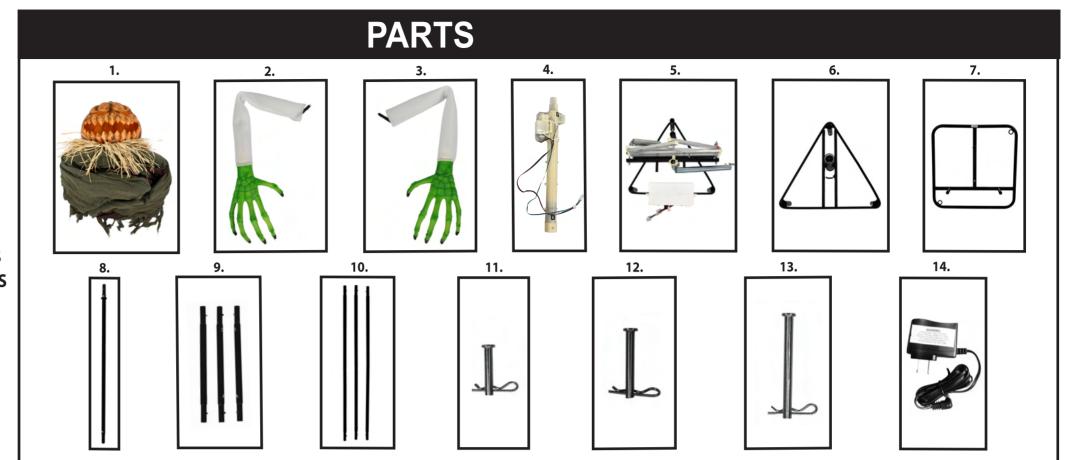


ASSEMBLY

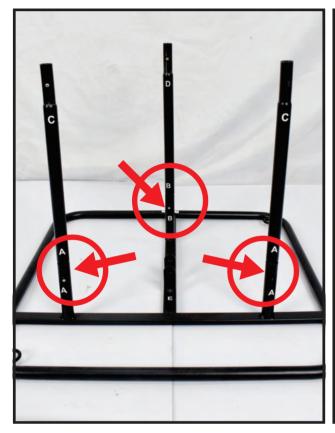

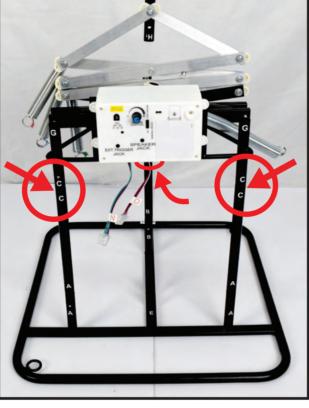

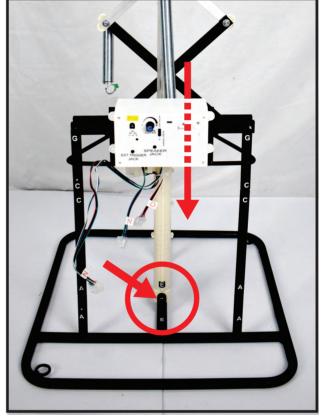

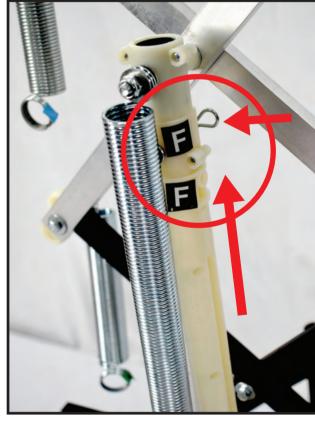

1. Snap lock the LOWER SUPPORT POLES into the BASE.

MATCH A to A and MATCH B to B


2. Snap lock the POP UP FRAME AND CONTROL BOX into the LOWER SUPPORT POLES.

MATCH C to C and MATCH D to D

3. Slide the E end of the POP UP MODULE between the middle of the POP UP FRAME and the CONTROL BOX. Secure the POP UP MODULE to the base with the LARGE CLEVIS AND COTTER PIN. MATCH E to E

4. Insert the top of the POP UP MODULE into the POP UP FRAME and secure it with the MEDIUM CLEVIS AND COTTER PIN.

MATCH F to F

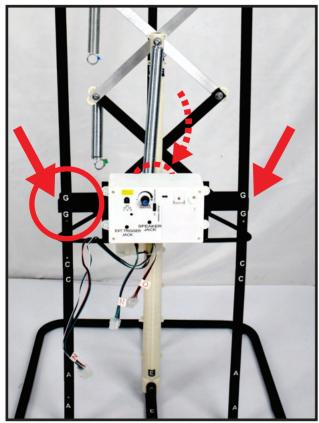



MATCH G to G and MATCH H to H




6. Snap lock the TORSO POLE to the POP UP FRAME.

MATCH H₁ to H₁




7. Slide the SHOULDER FRAME over the TORSO POLE and connect it to the UPPER POLES.

MATCH I to I and MATCH J to J

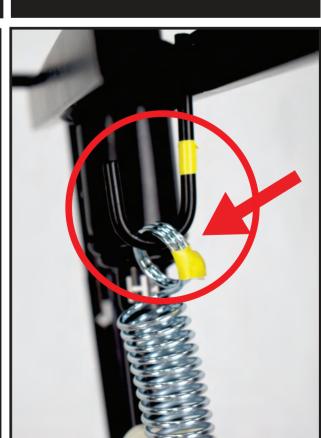

8. Connect all springs.


MATCH YELLOW to YELLOW

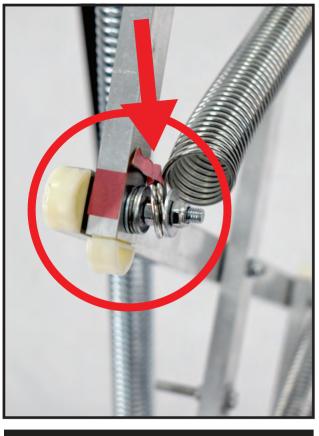

9. Connect all springs.

NOTE - The spring must be attached behind the washer.


MATCH RED to RED

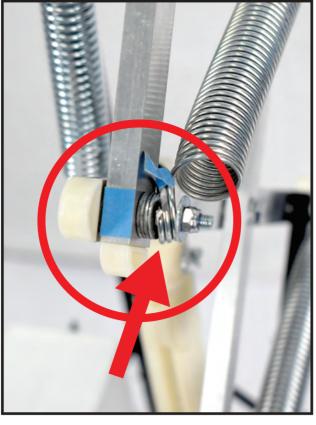

10. Connect all springs.

NOTE - The spring must be attached behind the washer.

MATCH BLUE to BLUE

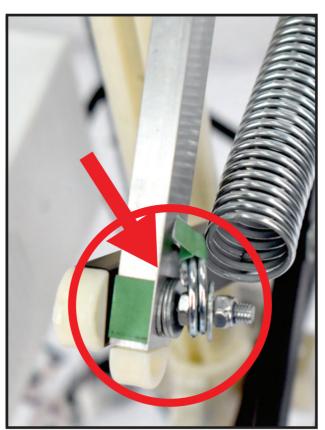

11. Connect all springs.


NOTE - The spring must be attached behind the washer.

MATCH GREEN to GREEN



12. Lay the product down against its box. Connect the pole located underneath the head of the HEAD & BODY FRAME, to the TORSO POLE and secure it with the SMALL CLEVIS AND COTTER PIN.

MATCH K to K

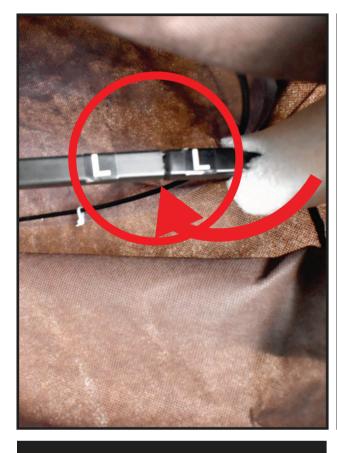


13. Slide the RIGHT ARM's pole up the right sleeve of the HEAD AND BODY. Snap lock the RIGHT ARM to the SHOULDER FRAME.

MATCH L to L




14. Slide the LEFT ARM's pole up the left sleeve of the HEAD AND BODY.
Snap lock the LEFT ARM to the SHOULDER FRAME.

MATCH M to M

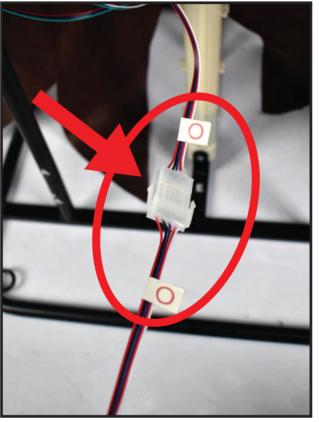

15. Raise the product back up onto its BASE. Connect all assembly wires from the HEAD AND BODY to the POP UP FRAME AND CONTROL BOX.

CONNECT O to O

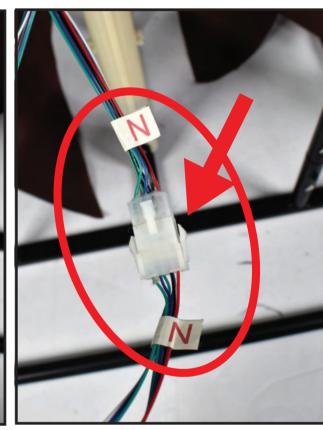


16. Connect all assembly wires from the HEAD AND BODY to the POP UP FRAME AND CONTROL BOX.

CONNECT N to N



17. Adjust the HEAD & BODY FRAME's fabric around the BASE.

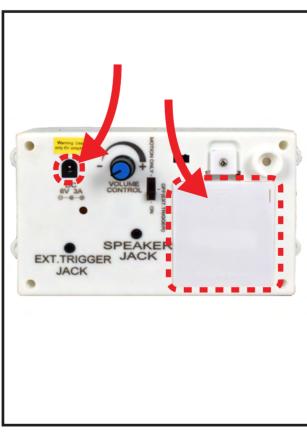

18. Insert 4 fresh alkaline batteries (recommended) or insert 6V 3A ADAPTER (Included). Turn the switch to the ON position to operate in Sound or Motion activation mode. Make a loud sound (clap), or move in front of the item to activate. Turn item OFF when not in use.

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- **1.** Plug speaker cord into the jack labeled SPEAKER JACK located on side of the control box.
- 2. Use volume knob on external speaker to control volume levels.



OPTIONAL EXT. TRIGGER SET UP

EXT. TRIGGER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Insert the cable from EXT. TRIGGER into the jack labeled EXT. TRIGGER JACK on the CONTROL BOX.
- 2. Place the switch in the EXT. TRIGGER position to enable EXT. TRIGGER activation.
- 3. Step on the EXT. TRIGGER to activate the scary sequence!
 - * Ext. Triggers / Footpads are sold separately and can be purchased at www.tekkyaccessories.com



Battery Diagram | (+ "AA" 1.5V +) | | (+ "AA" 1.5V +) | | (+ "AA" 1.5V +) |

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged.

The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

STAY CLEAR OF ITEM WHILE OPERATING.

DO NOT PLACE ITEM ON UNEVEN GROUND.


DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.




DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.


STORAGE AND REASSEMBLY

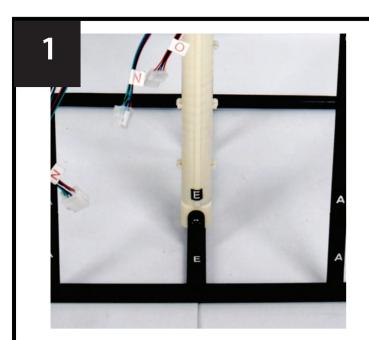

Insert and secure the POP
UP MODULE to the METAL
BASE. (Match E to E) Insert the
LARGE CLEVIS PIN through the
METAL BASE through the POP
UP MODULE. Slide the COTTER
PIN through the CLEVIS PIN to
secure the POP UP MODULE.

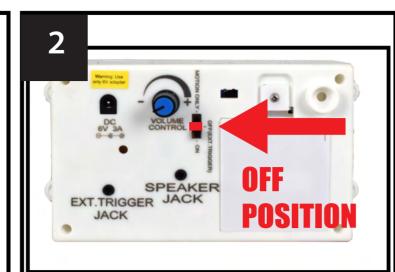


! WARNING!
THE SWITCH MUST
BE IN THE OFF
POSITION THROUGH
ENTIRE PROCESS.

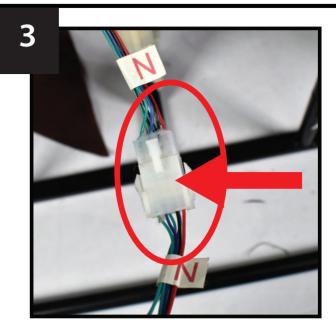


Connect the POP UP MODULE wire TO THE CONTROL BOX.

CONNECT N TO N.

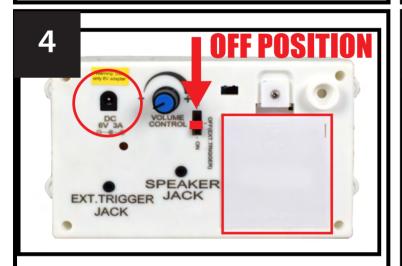


With the switch in the OFF position apply power.

Plug in an adapter or insert Batteries.

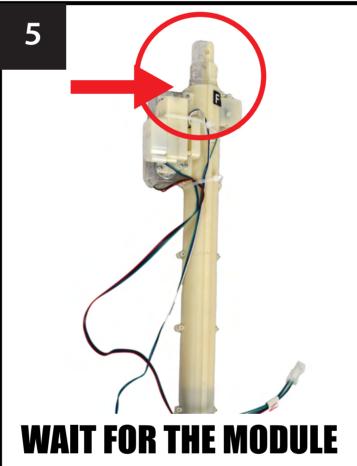

WAIT FOR THE MODULE POLE TO FULLY RETRACT AND STOP.

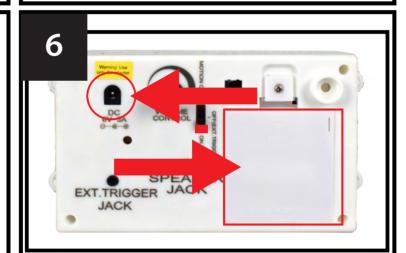

Disconnect power (Remove a battery or unplug adapter) continue assembly.



visit us at tekkydesign.com Requires 6V 3A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER

Surface washable only.
POP UP PUMPKIN PATCH™

POP UP PUMPKIN PATCH™ is a trademark of Tekky.

Copyright © 2023 Tekky

All Rights Reserved. MADE IN CHINA



