

POSSESSED PUMPKIN™

OPERATING INSTRUCTIONS:

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Carefully remove and discard packaging.
2. Insert 3 brand new “AA” alkaline batteries into the battery compartment located on the bottom of pumpkin.
3. Place switch on bottom of pumpkin to the “ON” position.
4. Make a loud noise (clap) to activate scary sequence!


NOTE: Keep the switch in the “Off” position when not in use.

Surface Washable Only.
All new materials: plastic, metal.

Item #58635. POSSESSED PUMPKIN™ is a trademark of Tekky.
Copyright © 2018 Tekky. All Rights Reserved. MADE IN CHINA
Manufactured for and distributed by: Tekky, Orland Park, IL 60467 USA

Requires 3 “AA”batteries (included for demo purposes only)

TekkyDesign.com

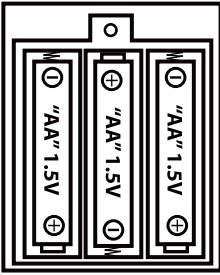

3AA

Batteries Included
(for demo purposes only)

BATTERY INSTRUCTION AND CAUTIONS:

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.



WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.
Not intended for use by children 14 years of age and younger.

