



# RISING REAPER



## Setup instructions:






- PARTS:**
1. HEAD WITH CLOTHES
  2. BASE
  3. FEET (2)
  4. POLE (2)
  5. PUMPKIN IN BAG
  6. TELESCOPING MODULE

1. Insert FEET into underside of BASE (Match A1 to A1, A2 to A2). Note: FEET are found inside fabric of HEAD WITH CLOTHES.
2. Assemble two POLES labeled B together. Twist to lock.
3. Insert POLE assembly B into BASE (Match B to B). Twist to lock.



4. Insert TELESCOPING MODULE into BASE (Match C to C). Twist to lock.
5. Insert HEAD WITH CLOTHING into TELESCOPING MODULE (Match D to D). Twist to lock.
6. Insert cable labeled E into jack labeled E on BASE.

7. Connect together cables labeled G (from BASE, and from HEAD WITH CLOTHES).
8. Bend wire shoulders out so these are straight and level. Shoulders need to be parallel to the floor.
9. Locate PUMPKIN IN BAG.

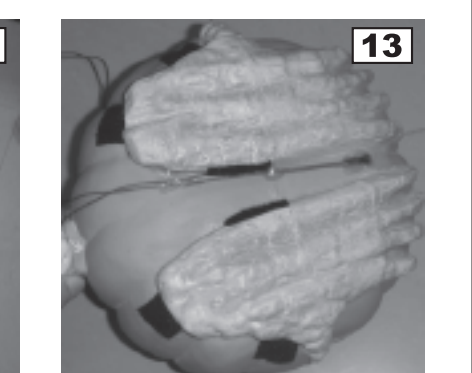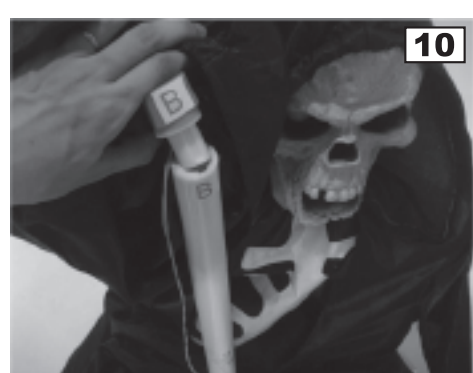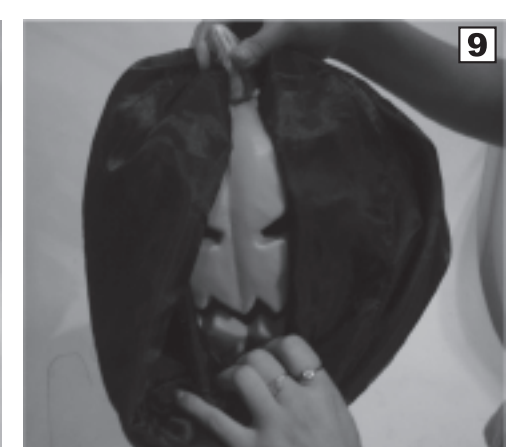

10. Insert PUMPKIN IN BAG into top of POLE B (Match B to B). Twist to lock.
11. Connect cable F to jack on BASE labeled F.
12. Push BAG back to reveal PUMPKIN, and drape BAG down over POLE B.
13. Locate velcro on bottom of PUMPKIN as shown.



14. Attach velcro located on Reaper's sleeves to velcro on bottom of PUMPKIN.
15. Shape wire brim of hood as shown.
16. Spread out clothes as pictured.

**STOP DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkytoys.com](http://www.tekkytoys.com).



# RISING REAPER



## Setup instructions:

Continued



17. Insert batteries (4 "AA") into battery compartment located on BASE, or
18. connect 6 V 2A DC adapter on BASE.

**Turn switch on top of BASE to ON to operate in Sound Activation mode. Clap or make a loud sound to activate. Leave switch in OFF position when not in use.**

**Note:**  
Make sure Reaper is on level ground. Place weight on BASE or FEET to increase stability.

### Optional Footpad Setup

Follow Steps 1 through 16 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to Step #17 to continue setup)


#### NOTE:

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

#### CAUTION!

Not aligning the plug to jack properly may cause permanent damage to Foot Pad jack of your item. Do not use excessive force when inserting plug.

\*Footpads are sold separately and can be purchased at [www.tekkytoys.com](http://www.tekkytoys.com) or any Spirit Halloween online or retail store.

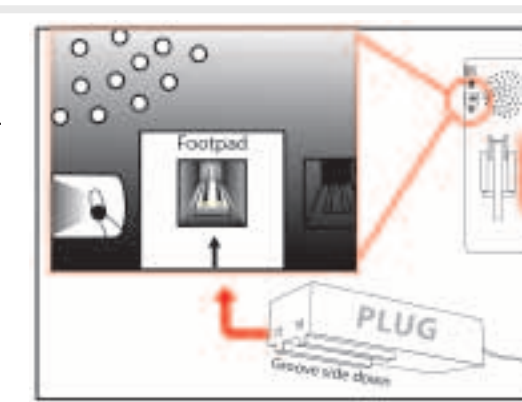

### Hints for better performance:

- Make sure to place the Rising Reaper on level ground to ensure best operation.
- Place weight on module or feet to increase stability.
- Keep area around Rising Reaper clear of obstructions.

**Caution:**  
Do not touch cords, or any part connected when plugged in.  
Do not operate until you have completely finished assembly.  
For best overall performance, please shut off when not in use.

Create your own Halloween scene with all of Tekky Toys' animated products!

[www.tekkytoys.com](http://www.tekkytoys.com)



**STOP DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkytoys.com](http://www.tekkytoys.com).