


# ROSEMARY™

## Installation and Operating Instructions


Keep all plastic and wire parts away from children.

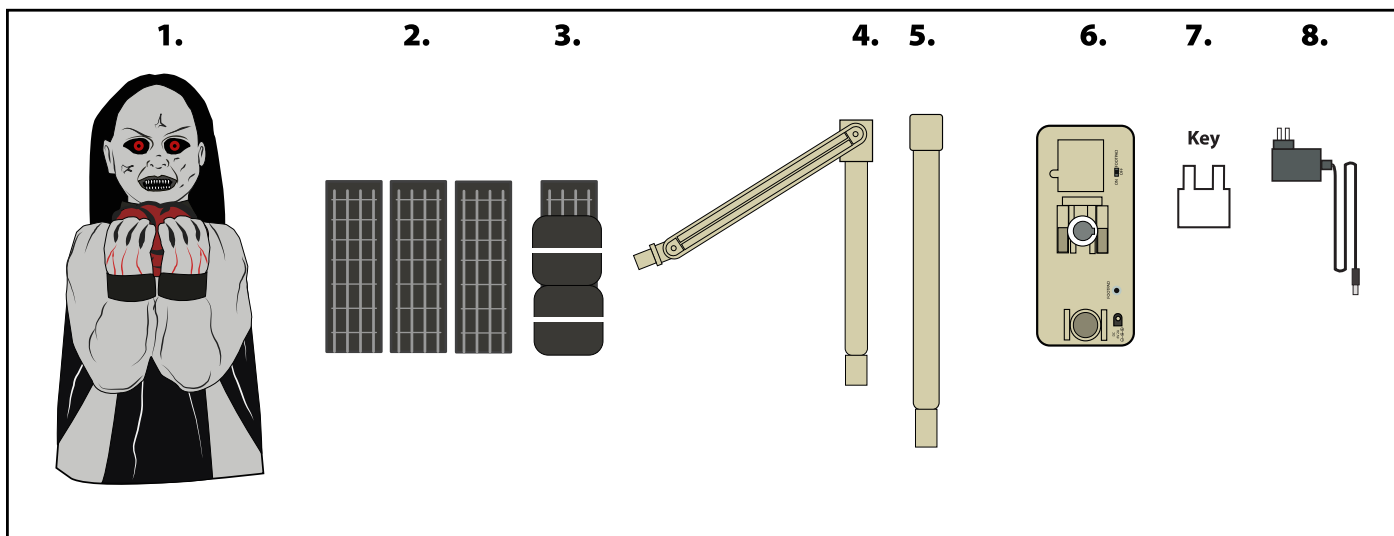

### PARTS

1. BODY
2. FEET
3. BACK FOOT WITH WEIGHT AND LOOP
4. LOWER POLE
5. UPPER POLE
6. MODULE
7. FOOT REMOVAL KEY
8. 6V 2A ADAPTER


1. Turn MODULE over so the BOTTOM is facing up. Snap lock the FEET and BACK FOOT WITH WEIGHT AND LOOP into the module. (Match A to A) and (Match B to B)
- 1A. Press to make sure feet are flush with bottom of the MODULE and snap lock into place. To remove the FEET use the insert the FOOT REMOVAL KEY into the holes on the bottom of the FEET to release the locks and gently pull.
2. Snap lock the LOWER POLE into the MODULE. (Match C to C) and (Match D to D)
3. Line up the snap lock and then snap lock the UPPER POLE into the LOWER POLE. (Match E to E)
4. Snap lock the BODY on to the UPPER POLE. (Match F to F)
5. Connect the wire from the MODULE to the wire under the dress on the BODY. (Connect G to G)
6. Hook the metal wire to the plastic ring located on the BACK FOOT WITH WEIGHT.
7. Connect 6V 2A adapter (included) or 4AA batteries (not included) into the battery compartment located on the module. Make a loud sound (clap) to activate the item. Turn the item off when not in use.
8. Attach hook and loop fasteners from underneath the dress to the front and side FEET on the MODULE.
9. Spread out clothing over the FEET and proceed to FOOTPAD set up as needed.

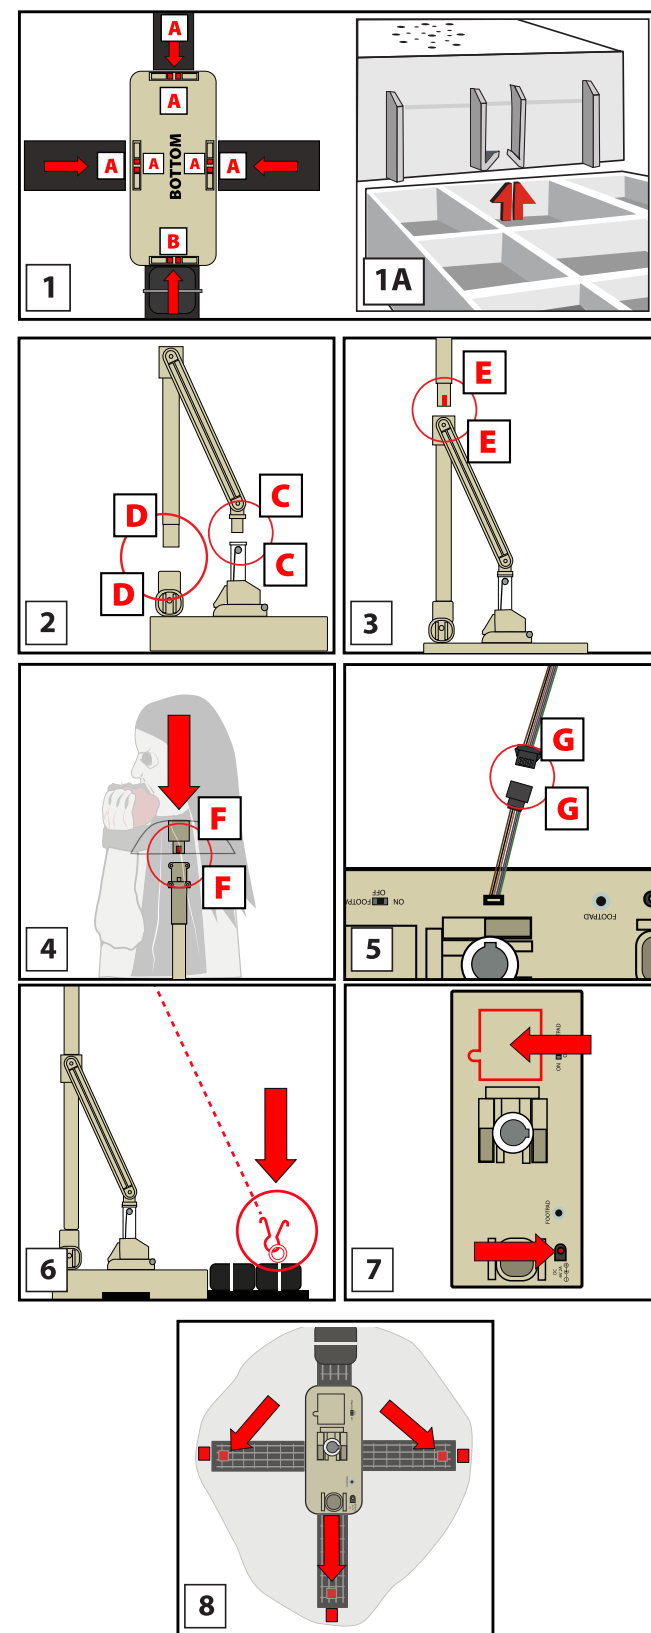

### OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the control box.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

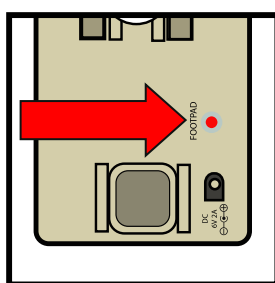


\* Footpads and adapters are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

### SMART PHONE SCAN SETUP VIDEO



### Battery Diagram

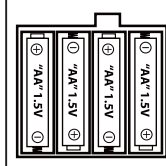

### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.**

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



visit us at [tekkydesign.com](http://tekkydesign.com)  
 Requires 6V 2A ADAPTER (included)  
 or 4AA batteries (not included)

ALL NEW MATERIALS:  
 METAL, FOAM, PLASTIC, POLYESTER  
**Surface washable only.**  
 ROSEMARY/BLOODY ROSE™ is  
 a trademark of Tekky.  
 Copyright © 2011-2021 Tekky.  
 All Rights Reserved.  
 MADE IN CHINA



**DO NOT RETURN THIS ITEM TO THE STORE!**  
 If experiencing technical difficulties, please go  
 to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.