

LED FLICKERING FLAME ROTTED PUMPKIN™

LIGHTS UP
Requires (3) "AA" batteries


OPERATING INSTRUCTIONS: KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN. Requires 3 "AA" batteries (included for demo purposes only). 1. Carefully remove and discard the "Try Me" wire. 2. Replace the demo batteries with 3 brand new "AA" alkaline batteries into the battery compartment located on the bottom of the ROTTED PUMPKIN. 3. Place switch on the bottom of ROTTED PUMPKIN's base to the "ON" position to activate the scary sequence for continuous play!

NOTE: Keep switch in the "OFF" position when not in use.

SURFACE WASHABLE ONLY. All new materials: Plastic.

BATTERY INSTRUCTIONS & CAUTIONS:

Battery installation and removal should be performed by an adult. • Remove batteries when not in use. • Use only batteries recommended in the instructions. • Do not mix new and used batteries. • Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. • Be mindful to insert batteries with the correct polarity (+/-) as indicated. • Remove all exhausted batteries. • Rechargeable batteries are only to be charged under adult supervision. • Rechargeable batteries are to be removed from the item before being charged. • Non-rechargeable batteries are not to be recharged. • The supply terminals are not to be short-circuited. • Always dispose of exhausted batteries properly. • Do NOT dispose of batteries in fire, they may leak or explode.

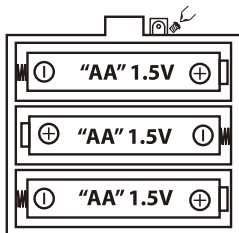

⚠ WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

Item #10020
LED FLICKERING FLAME ROTTED PUMPKIN™
is a trademark of Tekky. Copyright © 2019 Tekky.
All Rights Reserved.

TekkyDesign.com