


SMILING JACK GREETER™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

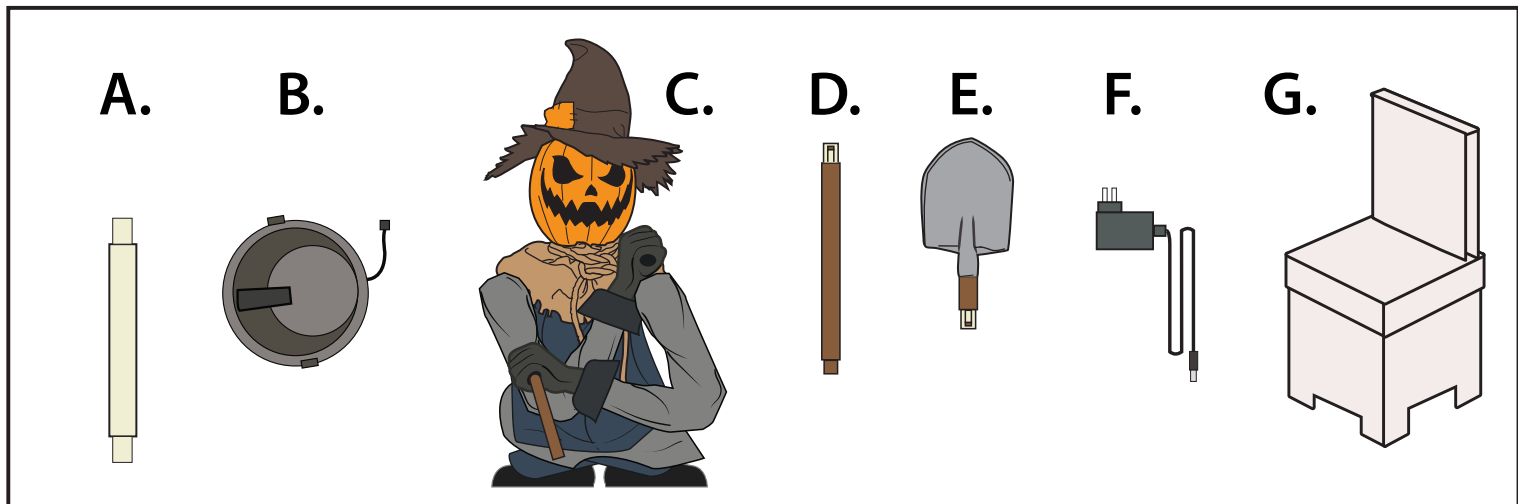

Parts:






- A: CENTER SNAP LOCK POLE
- B: BOWL
- C: HEAD WITH CLOTHES AND BASE
- D: SHOVEL HANDLE
- E: SHOVEL HEAD
- F: ADAPTER
- G: CARDBOARD CHAIR

Assembly:


1. Unzip the back of Jack's CLOTHES. Locate the BASE and insert the CENTER SNAP LOCK POLE into the BASE. (Match A to A)
2. Lower the top half of the HEAD WITH CLOTHES AND BASE onto the SNAP LOCK POLE. (Match B to B)
3. Open the hook and loop on the back of Jack's shirt. Locate the arm snap-lock poles and insert both poles into the module located beneath Jack's head. (Match C to C) and (Match D to D)
4. Place the BOWL at Jack's feet and connect the wire running from the pants to the wire on the BOWL. (Match G to G)

*Note: BOWL must be level and have a light source above the bowl to enhance the motion sensor function.


5. Insert the SHOVEL HANDLE through the hole in his right hand. Slide the SHOVEL HANDLE through the hole and insert the end into his left hand. Snap lock the SHOVEL HEAD onto the SHOVEL HANDLE. (Match E to E) and (Match F to F)
6. Connect 6V2A ADAPTER (included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the BASE.
7. Turn the switch to the ON position to operate in Sound and Motion activation mode. Any sound or motion inside the candy bowl will activate the item. For MOTION ONLY, only motion inside the candy bowl will activate the item. Turn item OFF when not in use. Adjust volume control knob as needed.
8. If you are positioning the item in your own chair see ILLUSTRATION 8. If you are using the supplied cardboard chair proceed to ILLUSTRATION 9. Close zipper on the back of Jack's pants. Position the item in a chair, fasten hook and loop strap snugly under chair and fill BOWL to lure Trick Or Treaters for a scary surprise!

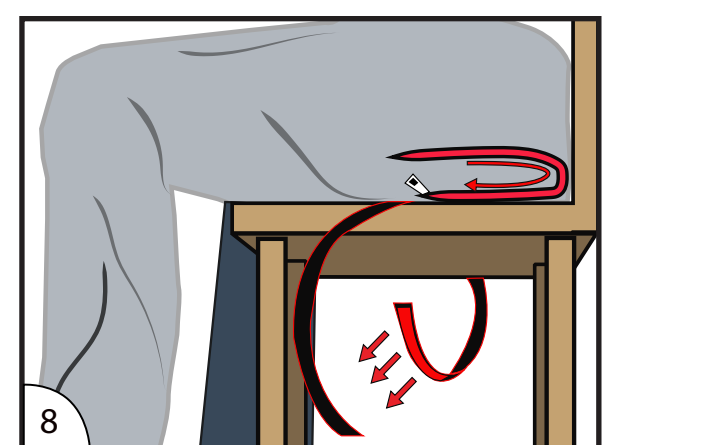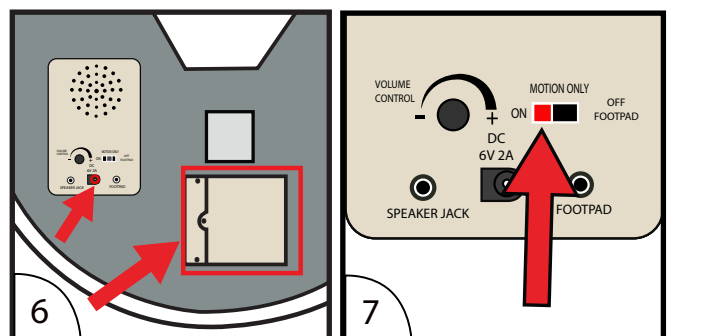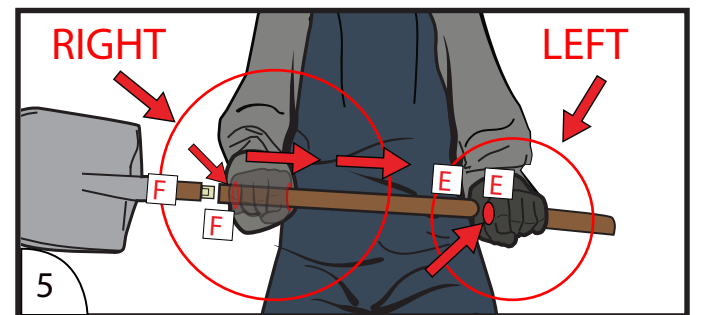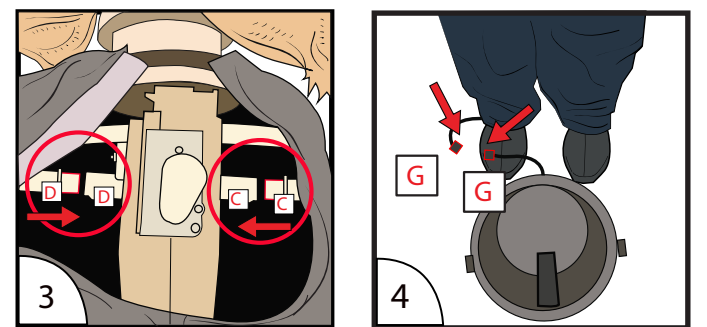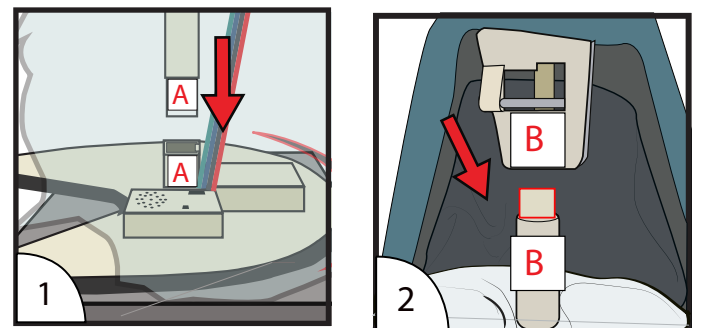


CARDBOARD CHAIR SETUP INSTRUCTIONS

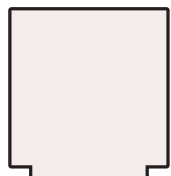

BACK

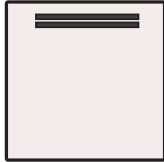


SEAT

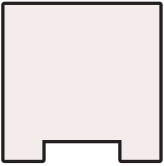

CHAIR BASE


1. UNFOLD THE CHAIR BASE AS PICTURED.
2. LOWER SEAT ON TO CHAIR BASE.
3. INSERT TABS OF SEAT BACK INTO SEAT.

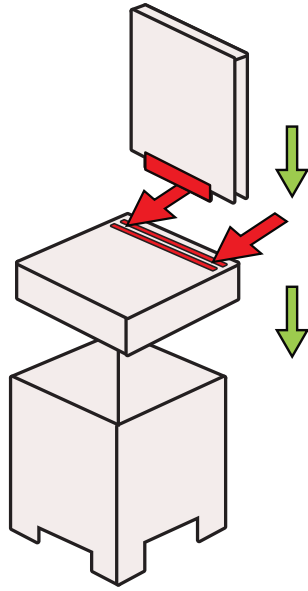

SEAT BACK

SEAT

CHAIR BASE

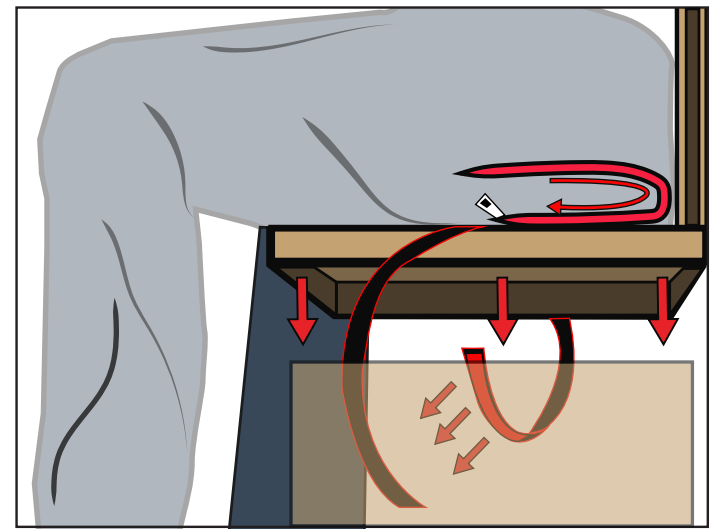

ASSEMBLE CARDBOARD CHAIR. LIFT SEAT AND SEAT BACK AND SECURE HOOK AND LOOP FASTENER UNDERNEATH THE SEAT. GENTLY PUSH THE SEAT AND SEAT BACK INTO PLACE ON THE CHAIR BASE TO SECURE THE ITEM.


*BE SURE TO LEAVE ENOUGH SLACK IN THE HOOK AND LOOP FASTENER FOR THE SEAT TO FIT ON THE CHAIR BASE SECURELY.

9

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


1. Plug speaker cord into the jack labeled SPEAKER JACK located on top of the BASE.
2. Use volume knob on external speaker to control volume levels.

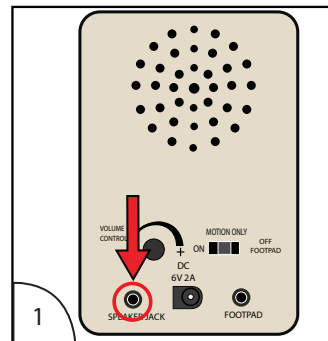

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the BASE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

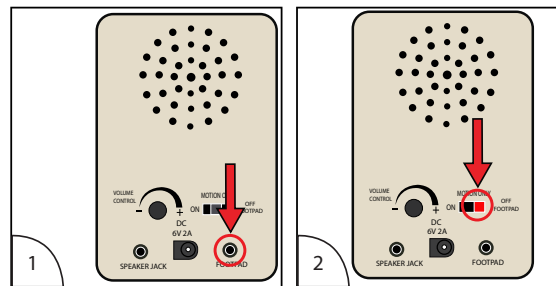


* Footpads and adapters are sold separately and can be purchased at www.tekkyaccessories.com

SMART PHONE SCAN SETUP VIDEO



Battery Diagram

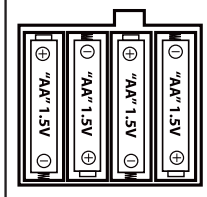

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND. DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



visit us at tekkydesign.com
Requires 6V 2A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

SMILING JACK GREETER™ is a trademark of Tekky.
Copyright © 2020 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.