

# Spooky Eyes Lantern

## 10 in (25.4 cm)

### OPERATING INSTRUCTIONS

1. Carefully remove and discard the “Try Me” wire.
2. Replace the demo batteries with 3 brand new “AA” alkaline batteries into the battery compartment located on the bottom of the lantern.
3. Place the switch on the bottom of the lantern to the “ON” position.
4. Make a loud sound (clap) near lantern to activate scary sequence.

NOTE: Keep switch in the “OFF” position when not in use.

Decorative use only. Not a toy. Surface washable only.

Requires 3 “AA” batteries (included for demo purposes only).


All new materials: Plastic.



**WARNING!**

This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older.

Item #58444 SPOOKY EYES LANTERN™ is a trademark of Tekky.  
Copyright © 2018 Tekky. All Rights Reserved. MADE IN CHINA

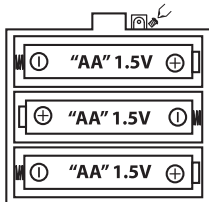

### BATTERY INSTRUCTIONS AND CAUTIONS

- Use only the batteries recommended by the manufacturer.
    - Remove batteries when not in use.
    - Do NOT use rechargeable batteries.
  - Be sure to insert the batteries with the correct polarity +/-.
    - Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium or rechargeable.
    - Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

**ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.**