

SCARY JUMPING SPIDER™


Item #
57331



OPERATING INSTRUCTIONS:

1. Insert 3 brand new 'AA' alkaline batteries into the battery compartment located on the module.
2. Place the switch on the module to the "ON" position.
3. Wave hand in front of item or make a loud sound (clap) to activate scary sequence.

NOTE: Keep the switch in the "OFF" position when not in use.

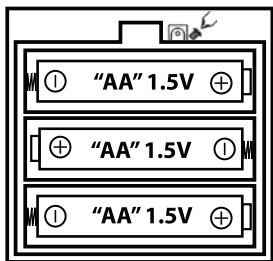

BATTERY INSTRUCTIONS & CAUTIONS:

- Use only the batteries recommended by the manufacturer.
 - Remove batteries when not in use.
 - Do NOT use rechargeable batteries.
 - Be sure to insert the batteries with the correct polarity +/-.
 - Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
 - Always dispose of exhausted batteries properly.
 - Do NOT dispose of batteries in fire, they may leak or explode.
- Adult supervision recommended when changing batteries.**

FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT:
www.tekkyaccessories.com



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go
to www.tekkydesign.com for assistance.

Surface Washable Only.

ALL NEW MATERIALS : PLASTIC, POLYESTER FIBERS

Battery Powered: Requires 3 "AA" Batteries (included)

SCARY JUMPING SPIDER is a trademark of Tekky.

Copyright © 2017 Tekky. All Rights Reserved.

MADE IN CHINA

Patent No. 8,602,836



WARNING:

Not a toy. Decorative use only.
This product is intended for use by
persons 15 years of age and older.



www.tekkydesign.com