



HAUNTED TV™

Tekky Item #58308C - HAUNTED TV™



6 69703 58308 3

Manufactured for and distributed by:
Tekky, Orland Park, IL 60467 USA
MADE IN CHINA



TUNE IN TO TERROR! KNOB OR MOTION ACTIVATED SPOOKY ANIMATION, LIGHTS & SOUNDS

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

1. Insert 3 brand new "AA" alkaline batteries into the battery compartment located on the back of the HAUNTED TV™.
2. Place switch on back of the HAUNTED TV™ to the "ON" position. Wave your hand in front of HAUNTED TV™ to initiate scary sequence.
3. Place the switch to the "KNOB" position to activate using the top knob only.

NOTE: Keep the switch in the "OFF" position when not in use.

SURFACE WASHABLE ONLY.

All new materials:
Plastic, polyester


Item #58308C
HAUNTED TV™

is a trademark of Tekky.
Copyright © 2019 Tekky.
All Rights Reserved.

TekkyDesign.com

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

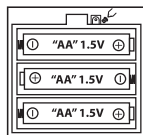

WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

FOOT SETUP INSTRUCTIONS

1. Locate and open compartment on the back side of the Haunted TV™
2. Remove feet and position Haunted TV™ upside down to locate the four twist-lock holes.
3. Insert feet and twist gently, locking all four feet into position (as seen in illustration #3).

