



CANDY CHOPPER™

Tekky Item #58734 - CANDY CHOPPER™



6 69703 58734 0

Manufactured for and distributed by:
Tekky, Orland Park, IL 60467 USA
MADE IN CHINA

SOUND AND MOTION ACTIVATED OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS
AWAY FROM CHILDREN

- Carefully remove and discard "Try Me" wire.
- Replace demo batteries, inserting 3 brand new "AA" alkaline batteries into the battery compartment located on the back of the CANDY CHOPPER™.
- Fill the CANDY CHOPPER™ with Halloween candy.
- Place switch on the back of the CANDY CHOPPER™ to the "ON" position to operate in sound and motion activation mode.

- Reach into the CANDY CHOPPER™...if you dare!
Any sound or motion inside the candy bowl will activate the scary sequence!

NOTE: Keep the switch in the "OFF" position when not in use.

**SURFACE
WASHABLE ONLY.**
All new materials:
Plastic

Item #58734
CANDY CHOPPER™
is a trademark of Tekky.
Copyright © 2019 Tekky.
All Rights Reserved.

TekkyDesign.com

FILL WITH CANDY

SOUND AND
MOTION
ACTIVATED



CANDY CHOPPER™

HALLOWEEN
LIGHTS AND
SOUNDS


3AA

Batteries
included*

*for demo purposes only

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

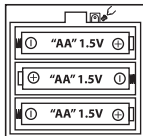

WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.