

# Installation and Operating Instructions

REMOVE ALL PARTS FROM PACKAGING.  
KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

**Make sure Thrashing Mummy™ is on a level plane for proper operation and enjoyment. If the BASE is not level, it will NOT function correctly.**

**1. Insert POLE through the bottom of clothing and snap-lock into the base of the neck (match up B to B).**

See Fig. 1

Note: Align the snap-locks with the snap-holes and press firmly until locked in place.

**2. Insert POLE into BASE (Match up A to A)**

See Fig. 2

Note: Align the snap-locks with the snap-holes and press firmly until locked in place.

**3. Connect wire from inside clothing to wire located on BASE.**

See Fig. 3

**4. Place YARD STAKES or SANDBAGS on BASE for added security (if required).**

Note: 3 YARD STAKES are supplied for sheltered outdoor use in soft ground.

See Fig. 4

2 SANDBAGS are supplied for indoor use. Fill included SAND BAGS with sand (not included) and secure tightly. Place the filled bags of sand into fabric bags and zip closed.

**5. Insert 4 "AA" brand new, fresh alkaline batteries into the battery compartment located on the bottom of the BASE, or connect a 6V 2A DC Adapter to the jack located on top of the BASE**

See Fig. 5

Note: DC Adapter sold separately and can be purchased at: [www.tekkytoys.com](http://www.tekkytoys.com)

**6. Turn switch (on top of BASE) to the ON position to operate in motion/sound - activation mode. Item will operate when motion or loud sound is detected.**

**7. Attach Velcro under clothing to opposite Velcro located on base.**

See Fig. 6

**8. Bend wires in arms out to 45 degree angle.**

See Fig. 7

**9. Clap or make a loud noise to activate Thrashing Mummy™.**


\*\*Keep free from any obstructions

\*\*No weight should be placed on the item.

Powered by Battery (4 "AA") or 6V 2A DC Adapter (optional)

Optional footpad and/or DC Adapter are sold separately and can be purchased at [www.tekkytoys.com](http://www.tekkytoys.com)

Requires 4 "AA" Batteries

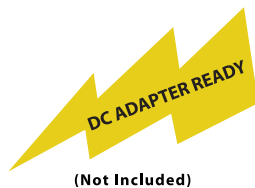

**DO NOT RETURN THIS ITEM TO THE STORE!**

If experiencing technical difficulties, please go to [www.tekkytoys.com](http://www.tekkytoys.com) for assistance.

- PARTS INCLUDED:**  
**BASE (1)**  
**POLE (1)**  
**HEAD WITH CLOTHES (1)**  
**SANDBAGS (2)**  
**YARD STAKES (2)**

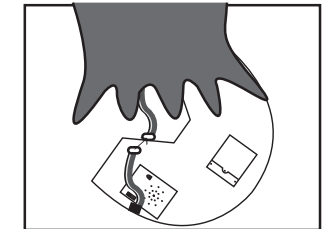
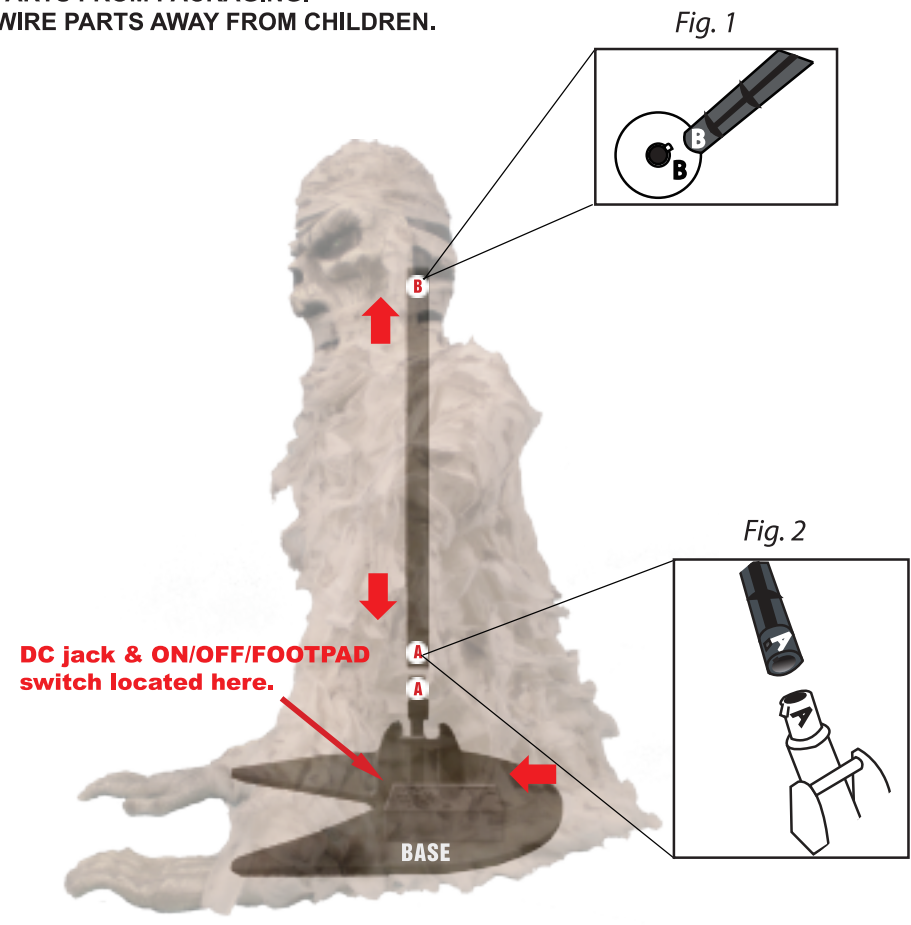


Fig. 3

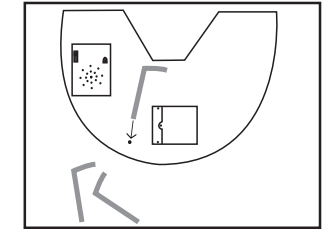


Fig. 4

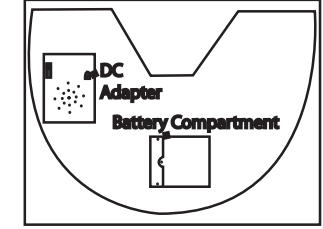


Fig. 5

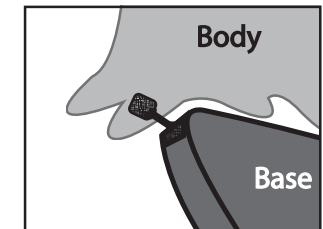


Fig. 6

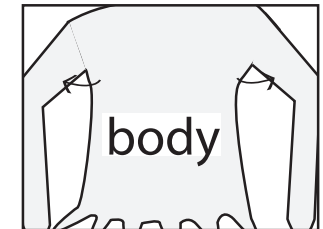


Fig. 7

**Optional Footpad Setup**

Follow Steps 1 through 5 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (Go to instruction #6 to continue setup.)


**NOTE:**

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

**CAUTION!**

Not aligning the plug to jack properly may cause permanent damage to Foot Pad jack of your item. Do not use excessive force when inserting plug.

\*Footpads are sold separately and can be purchased at [www.tekkytoys.com](http://www.tekkytoys.com)

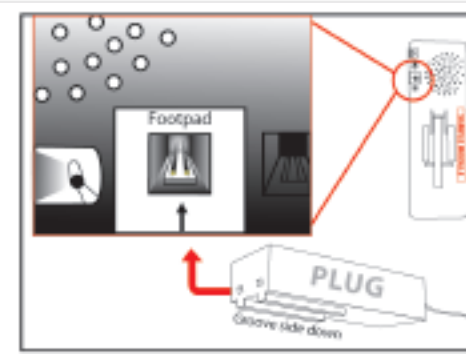

THRASHING MUMMY is a trademark of Tekky Toys. Copyright © 2011 Tekky Toys. All Rights Reserved.

FILLING: ALL NEW MATERIALS  
 PLASTIC, POLYESTER  
 SURFACE WASHABLE ONLY.

**MADE IN CHINA**

**CAUTION:**  
 Do not turn on the item until you have completely finished assembly!!  
 Stay clear of item while operating.

**WARNING:**  
 This item is not a toy. For decoration only. Small parts, choking hazard.  
 This product is intended for use by persons 15 years of age and older.  
 Not intended for use by children 14 years of age and younger.

**OUTDOOR WARNINGS:**  
 For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using heavy-duty, alkaline batteries for best operating performance.

If you hear a constant "clicking" sound and this item does not function properly, it means there is an obstruction preventing the item from operating (for example: fabric, rock, brush, incline, etc.). The clicking sound does not mean that the item is broken, just remove any obstruction and the item should function normally.

**SMART PHONE SCAN SET UP VIDEO**

