

TORTURE BOX WOMAN™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.





ESTIMATED ASSEMBLY TIME SEVEN MINUTES.

1. HEAD AND BODY
2. CONTROL BOX AND UPPER POLE
3. METAL STAND
4. LOWER POLES
5. UPPER POLES
6. PANTS AND WAIST BRACKET
7. 6V 2A ADAPTER
8. FEET

PARTS

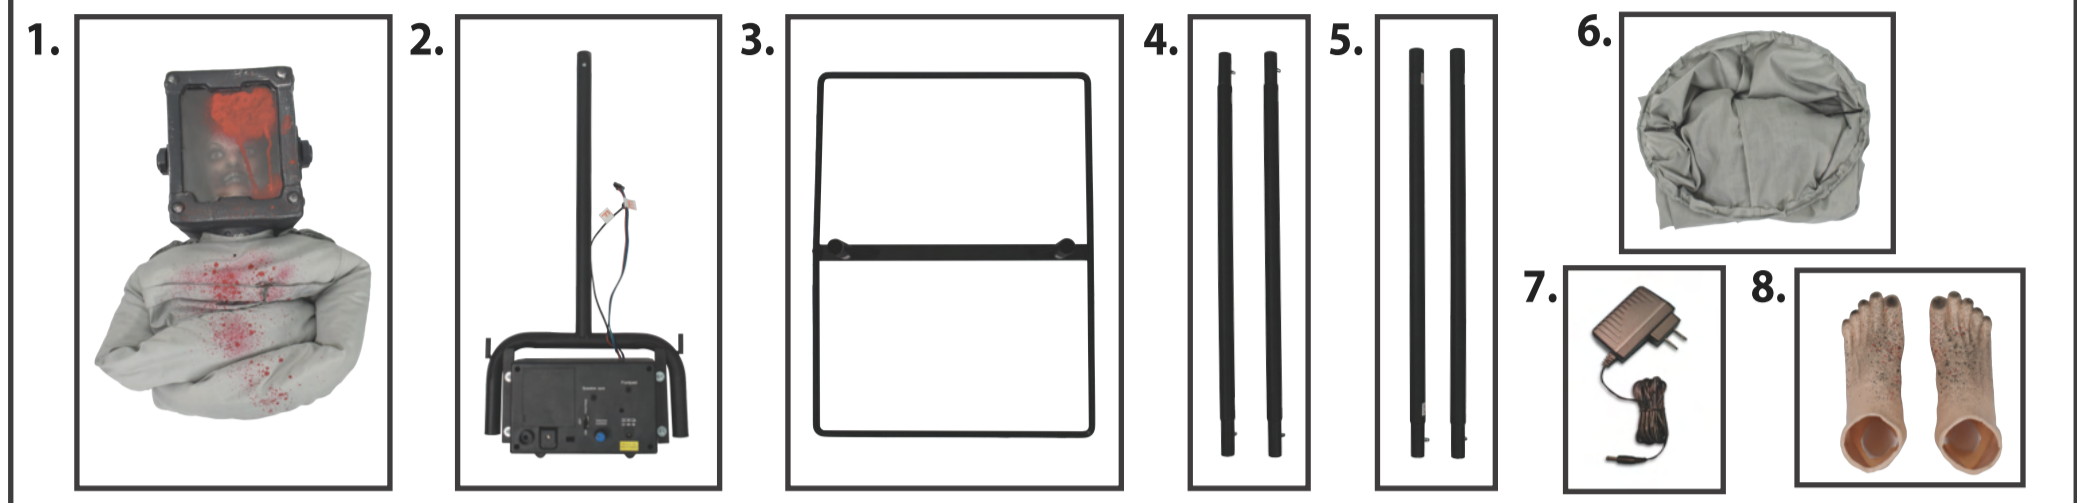

ASSEMBLY

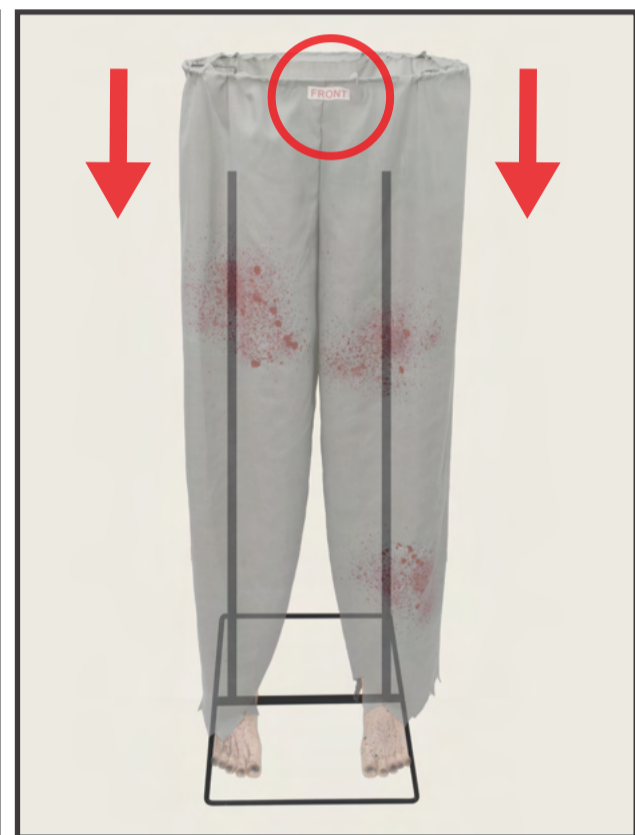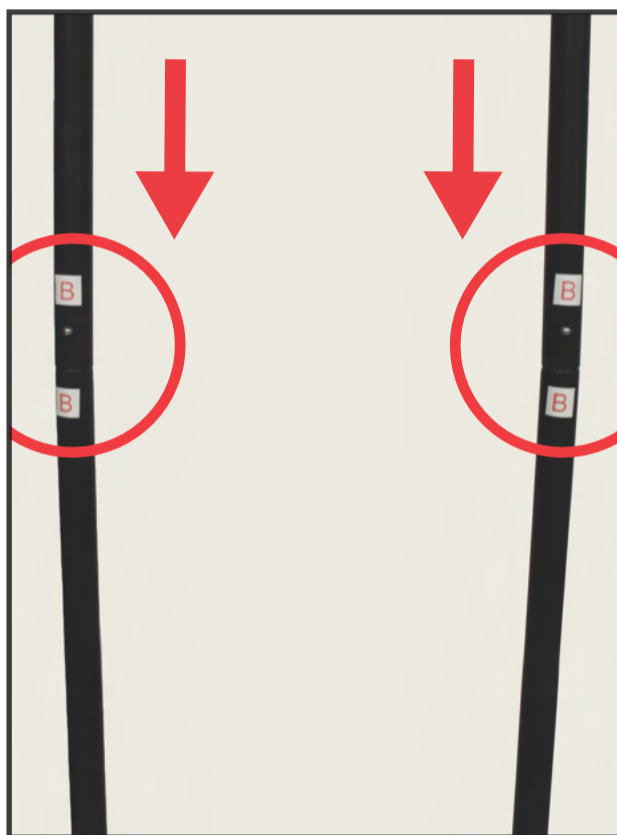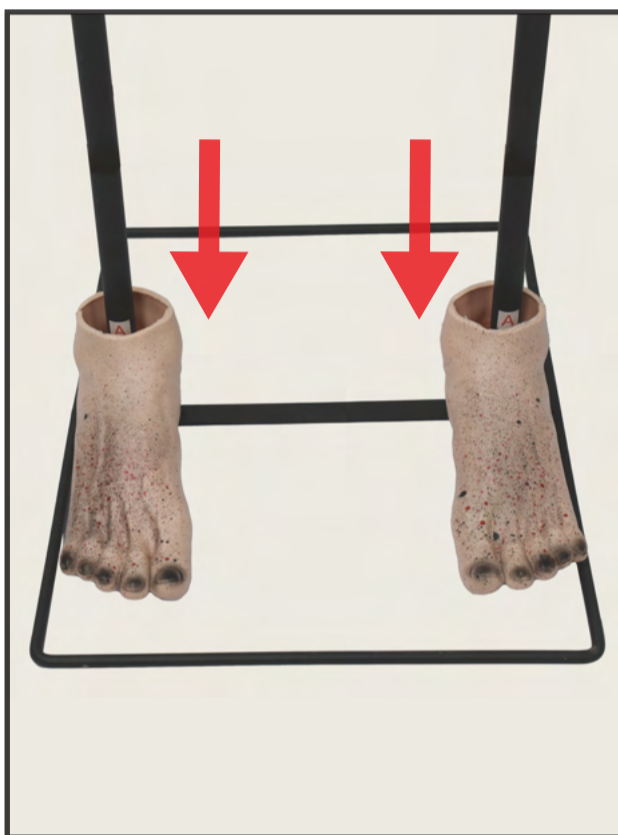
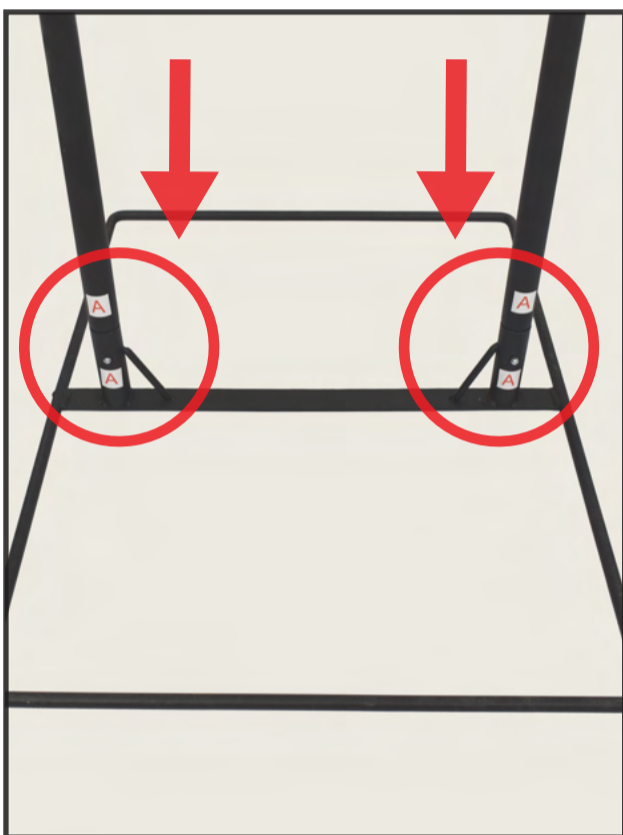


1. Snap lock the LOWER POLES labeled A to the METAL STAND.
MATCH A TO A

2. Slide the FEET over the LOWER POLES in the correct left and right orientation on the METAL STAND.

3. Snap lock the UPPER POLES labeled B to the LOWER POLES.
MATCH B TO B

4. Slide the PANTS AND WAIST BRACKET over the assembled POLES, making sure the FRONT label is facing forward.

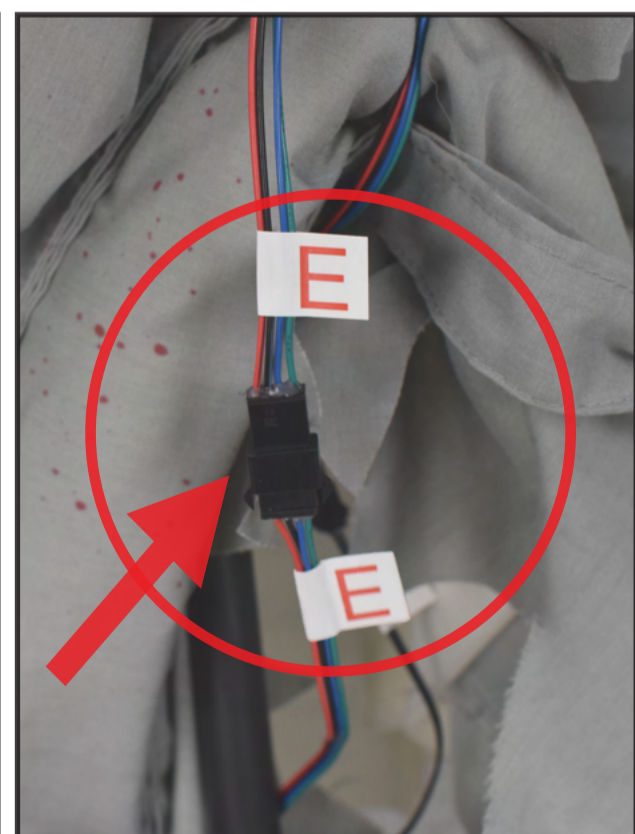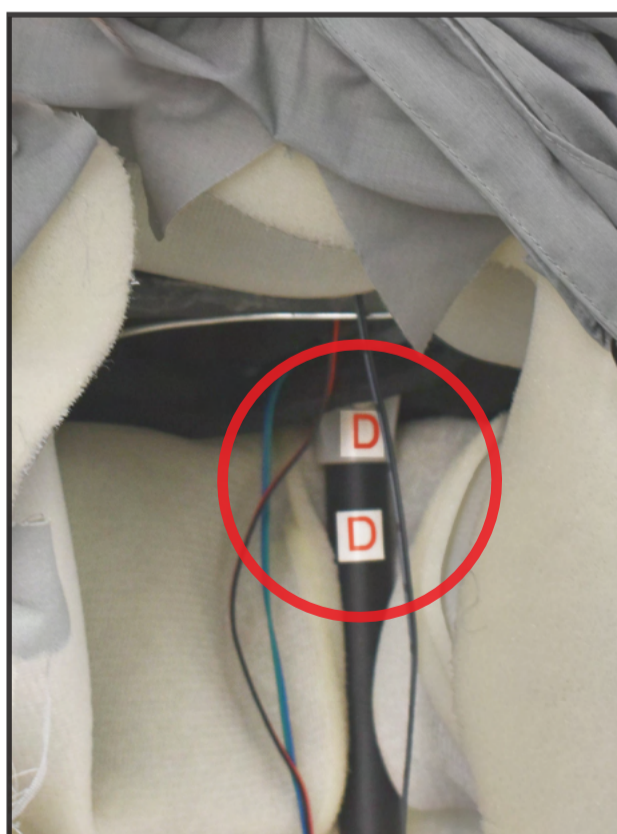

5. Snap lock the CONTROL BOX AND UPPER POLE labeled C to the UPPER POLES.
MATCH C TO C

6. Locate the two posts on the sides of the WAIST BRACKET and insert into the two posts on the CONTROL BOX AND UPPER POLE.


7. Lift the fabric on the HEAD AND BODY and snap lock to the CONTROL BOX AND UPPER POLE.
MATCH D TO D

8. Connect the wire bundle from the CONTROL BOX to the wire bundle from the HEAD AND BODY.
MATCH E TO E.



9. Connect the wire bundle from the CONTROL BOX to the wire bundle from the MOTION SENSOR on the HEAD AND BODY.

MATCH F TO F

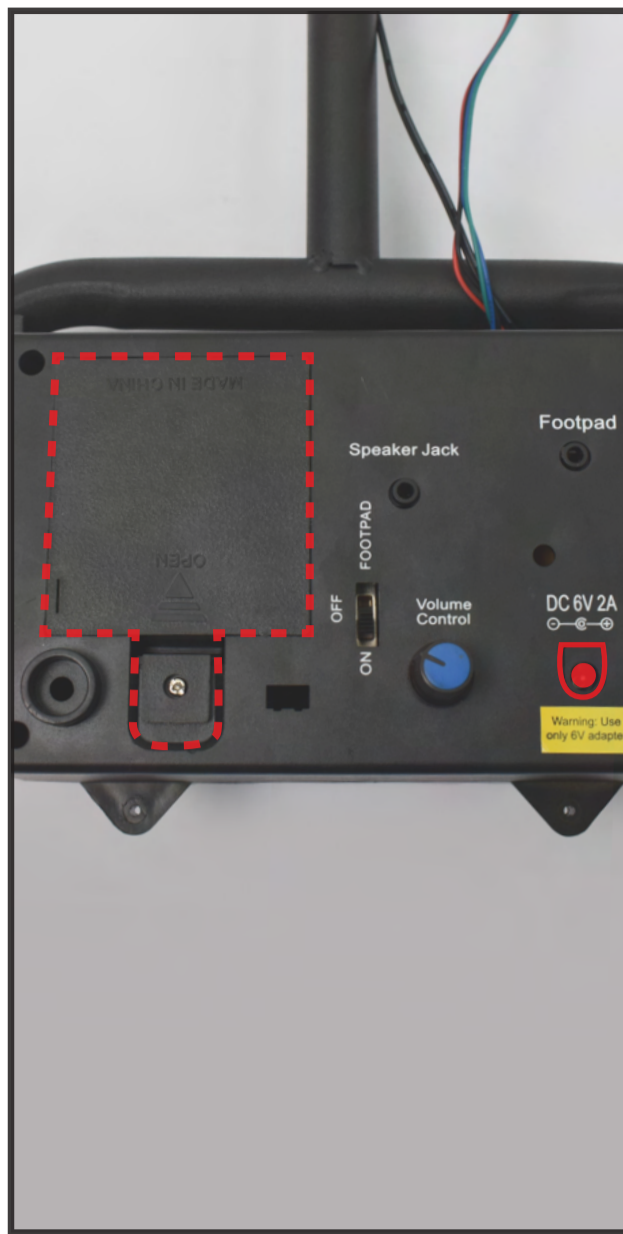

10. Insert 4 AA batteries (not included) or 6V 2A adapter (included) into the CONTROL BOX. Move the switch to the on position. Make a loud sound (clap) or move in front of the item to activate. Turn the item off when not in use. Remove 6V 2A adapter when using batteries.

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the CONTROL BOX.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!
* Footpads are sold separately and can be purchased at www.tekkyaccessories.com




OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



Battery Diagram

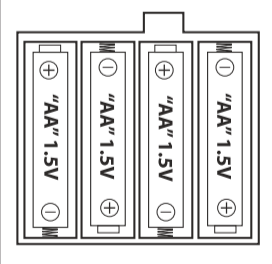

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



visit us at tekkydesign.com
Requires 6V 2A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

TORTURE BOX WOMAN™ is a trademark of Tekky.
Copyright © 2022 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

SMART PHONE SCAN SETUP VIDEO

