

# WINGED WATCHER™

He moves!  
Scary lights and  
creepy sounds!  
Motion activated

## OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS  
AWAY FROM CHILDREN

1. Carefully remove and discard the "Try Me" wire and packaging.
2. Insert 3 brand new "AA" alkaline batteries into the battery compartment located on the bottom of the Winged Watcher™.
3. Place the switch on the Winged Watcher™ to the "Sensor" position.
4. Wave hand in front of item to activate scary sequence.

NOTE: Keep the switch in the "Try Me/Off" position when not in use.

Requires 3 "AA" batteries  
(included for demo purposes only)

All new materials: plastic/wire

**Surface washable only.**



**WARNING!**  
**CHOKING HAZARD**—Small parts.

This item is not a toy.

 
For decoration only.

This product is intended for use by  
persons 15 years of age and older.

Not intended for use by children 14  
years of age and younger.

## BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.



Item #58419

Winged Watcher™ is a trademark of Tekky.  
Copyright © 2018 Tekky. All Rights Reserved.

MADE IN CHINA

Manufactured for and distributed by:  
Tekky, Orland Park, IL 60467 USA

**TekkyDesign.com**