

# GRAVE BUSTIN' PUMPKIN™

## Installation and Operating Instructions

REMOVE ALL PARTS FROM PACKAGING.  
KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Assemble POLES LABELED A together.  
Twist to lock.
2. Insert STAKE into bottom of POLE LABELED A  
Twist to lock.
3. Mount assembled POLE LABELED A on black box  
located under the pumpkin head. Twist to lock.
4. Carefully insert STAKE into soft ground far enough  
to keep item stable when standing.  
Note: Pole/stake may break if too much pressure  
is applied when inserting into ground. Be careful.
5. Insert brand new, fresh alkaline batteries (3 "AA")  
into the battery compartment or connect 4.5V 1A  
DC adapter (optional).  
Note: Battery compartment is located on the black box right  
below the pumpkin head.
6. Turn switch located on the black box to "ON" to  
operate in Timer/Sound mode. Item will function with 2  
minute breaks between cycles.  
Note: Clap or make a loud sound to activate the item  
during breaks between cycles.  
Note: Leave switch in the "OFF" position when not in use.

**PARTS INCLUDED:**  
BODY (1)  
STAKE (1)  
POLE LABELED A (2)



For Indoor  
Or  
Sheltered  
Outdoor Use



### Optional Footpad Setup

#### Follow Initial Installation Instructions First.

1. Connect the wire from the optional footpad  
to the jack labeled FOOTPAD located on black box.
2. Place the switch on the box into the "FOOTPAD"  
position to enable FOOTPAD activation.
3. Step on Footpad to activate the scary sequence.

\*footpads are sold separately and can be  
purchased at [www.tekkytoys.com](http://www.tekkytoys.com)

**⚠ WARNING**  
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

**STOP** DO NOT RETURN THIS ITEM TO THE STORE!  
If experiencing technical difficulties, please go to  
[www.tekkytoys.com](http://www.tekkytoys.com) for assistance.



Create your own Halloween scene with all of  
Tekky Toys' animated products!  
visit: [www.tekkytoys.com](http://www.tekkytoys.com)

#### Outdoor Warnings:

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

Warning: This item is not a toy. For decoration purposes only. Small parts, choking hazard.  
This product is intended for use by persons 14 years of age and older. NOT intended for use  
by children 13 years of age and younger.



Item #56519  
Grave Bustin' Pumpkin™

Powered by Battery (3 "AA") or 4.5V 1A DC Adapter (optional).  
Optional footpad and/or DC Adapter are sold separately  
and can be purchased at [www.tekkytoys.com](http://www.tekkytoys.com)

Requires 3 'AA' Batteries

GRAVE BUSTIN' PUMPKIN  
is a trademark of Tekky Toys.  
Copyright © 2009 Tekky Toys.  
All Rights Reserved.

FILLING: ALL NEW MATERIALS  
PLASTIC, POLYESTER  
SURFACE WASHABLE ONLY.

MADE IN CHINA

Manufactured for and distributed by  
Tekky Toys, Orland Park, IL 60467