

ROCKING BAT™

Operating Instructions

1. Carefully disconnect the “TRY ME” wire from the module at the top of the bat.
2. Replace the batteries with brand new fresh alkaline batteries. (this item is shipped with 3 light duty “AA” batteries for demo purposes only)
3. Place foam piece on top of module against object you are mounting to (mounting object).
4. Wrap velcro strap over the top of the mounting object, down through the metal loop in front of the module, back up over the mounting object and adhere to the velcro strip on the back of the module. (see illustration A)
5. Bat needs to be tightly secured to mounting object, or swinging motion will not work properly!
Bat must be level when hung or it will not swing.
Hint: Hide or cut excess velcro strap for a more realistic look.
6. Turn the switch located on the black module box to the “ON” position.
7. Clap or make a loud sound to activate the item.
8. Leave the switch in the “OFF” position when not in use to preserve the life of the batteries.

Rocking Bat™
Item #56305

SURFACE WASHABLE ONLY


OUTDOOR WARNING

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using brand new, fresh alkaline batteries for best operating performance.

WARNING

This item is not a toy. For decoration purposes only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. Not intended for use by children 13 years of age and younger.

STRANGULATION RISK! Keep cables, straps and/or wires away from children.

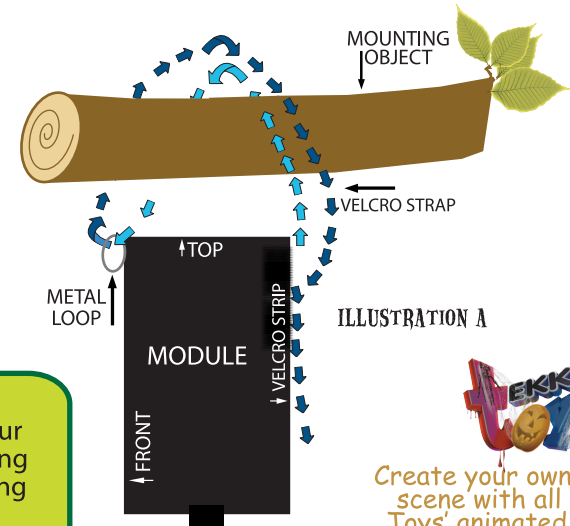

Requires 3 'AA' Batteries
(included for demo purposes only)

Rocking Bat™ is a trademark of Tekky Toys.
Copyright © 2009 Tekky Toys
All Rights Reserved.

MADE IN CHINA