




A Keep cable as tight and horizontal as possible.

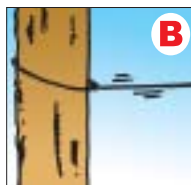

B Hook cable around tree.



C Wind cable around object. Tighten cable before winding.



D Ghost will STOP at cable clip and reverse direction. One clip on each end. Position clips along cable to stop ghost where desired.


SETTING UP YOUR FLYING GHOST

For the best performance, we highly recommend keeping the cable **perfectly horizontal** (illus. **A**). **Any incline or decline in the cable may cause the Flying Ghost to run poorly or stop!**

- Be sure cable is pulled **as tight as possible!!**
- Refer to illustrations **B** and **C** above for tips on fastening cable ends so there is **no slack in the line**.

OPERATING INSTRUCTIONS

A 3-way switch is located near the battery compartment at the bottom of the plastic module. The Flying Ghost has 3 operating modes:

OFF, **ON** (with creepy sounds), and  (ON with NO sounds).

Flying Ghost is sound activated. Clap your hands or make a loud noise to begin the 'flying' action. The ghost will travel back and forth along the cable, automatically reversing directions when reaching the cable end (or cable clips).

OPERATING TIPS

- Keep the cable free of debris, leaves, twigs, ice, etc.
- Keep ghost away from tree branches or other obstructions, which may hinder movement.
- Position the two clips along cable to STOP the ghost where desired (illus. **D**).

OPERATING YOUR GHOST OUTDOORS

For best overall performance, we recommend you bring your flying ghost indoors during adverse weather conditions (extreme cold, strong winds and/or rain). The flying ghost operates best outdoors in temperatures above freezing (32° F). Tekky Toys recommends using heavy-duty, alkaline batteries for best operating performance.

Warning: This item is not a toy. For Decoration only. Small parts, choking hazard.
This product is intended for use by persons 14 years of age and older.
Not intended for use by children 13 years of age and younger.

FILLING: ALL NEW MATERIALS.
POLYESTER/POLYESTER FIBER FILL.
Surface washable only.
Requires 3 "AA" batteries, Not Included.

SCARY FLYING GHOST and SCARY FLYING MONSTERS are trademarks of Tekky Toys.
Copyright © 2004-2006 Tekky Toys. All Rights Reserved.
Protected by U.S. and International Patents.

MADE IN CHINA.



Visit us:
www.tekkytoys.com

