



# TOMBSTONE LIFTER™



## Setup instructions:



### PARTS:

1. HEAD & CLOTHING
2. BASE
3. FEET (2)
4. TOMBSTONE (2 Halves)
5. ARMS (2)
6. POLE
7. SNAPS (2)
8. SPIKES (2)

1. Insert Feet into bottom of BASE (Match up E to E).
2. Insert POLE into top of BASE (Match up A to A). Twist to lock.
3. Attach HEAD & CLOTHING into POLE (Match up B to B). Twist to lock.



4. Insert ARM into arm socket under HEAD (Match up C to C). Press until you hear a "click".
5. Repeat for other ARM labeled D.
6. Insert cable labeled F into jack labeled F on BASE.

### TOMBSTONE ASSEMBLY



7. Insert SPIKES into bottom 1/2 of TOMBSTONE. Then, attach top 1/2 of TOMBSTONE.
8. Insert 4 SNAPS into premade holes in front of TOMBSTONE.
9. Place SNAPS seated in TOMBSTONE into holes on ARMS.
10. Holding SNAPS in place, firmly press ARMS onto SNAPS until they "click" and will not pull off easily.

11. Attach Velcro on sleeves to Velcro on sides of TOMBSTONE.
12. Attach Velcro under sleeves to Velcro on lower part of ARMS.
13. Attach Velcro on back of BASE to Velcro under clothing.



14. Locate fabric pockets on bottom of clothing and open.
15. Slide both feet into pockets
16. Spread out clothing on bottom as shown.

**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkytoys.com](http://www.tekkytoys.com).



# TOMBSTONE LIFTER™



## Setup instructions:

### Continued



17. Insert batteries (3 "AA") into battery compartment located on BASE, or
18. connect DC 4.5 V 1.5 A adapter.

**Turn switch on top of BASE to ON to operate in Timer/Sound mode (Lifter will function with 2 minute breaks between cycles - or, clap during 2 minute break to instantly start Lifter playing again). Leave switch in OFF position when not in use.**

### Optional Footpad Setup

#### Follow initial installation instructions first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the "FOOTPAD" position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence.

\*footpads are sold separately and can be purchased at [www.tekkytoys.com](http://www.tekkytoys.com)

#### Hints for better performance:

- Make sure to place the TOMBSTONE LIFTER on level ground to ensure best operation.
- Place weight on module or feet to increase stability.
- Keep area around TOMBSTONE LIFTER clear of obstructions.

**\*\*\* No weight should be placed on the item. \*\*\***

#### Caution:

- Do not touch cords, or any part connected when plugged in.
- Do not operate in wind/rain.
- Do not operate until you have completely finished assembly.
- For best overall performance, please shut off when not in use.

TOMBSTONE LIFTER is a trademark of Tekky Toys.  
Copyright © 2008 Tekky Toys. All Rights Reserved.  
**MADE IN CHINA**

Create your own Halloween scene with all of Tekky Toys' animated products!  
[www.tekkytoys.com](http://www.tekkytoys.com)



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkytoys.com](http://www.tekkytoys.com).