



INDOOR
USE

HAUNTED LIVING™

#5269288

Model #61081



MOTION
AND SOUND
ACTIVATED

15.5-IN ANIMATED PORTRAIT THIS POP-OUT PORTRAIT PROMISES TO SHOCK!



LED
LIGHTS



SOUND
EFFECTS

Includes: (1) 15.5-IN ANIMATED PORTRAIT decoration.

10.24 in x 4.53 in x 15.55 in

All new materials: plastic. Surface washable only.




BATTERIES
INCLUDED

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Carefully remove and discard "Try Me" wire and packaging.
2. Use a small Phillips/crosshead screwdriver to open the battery compartment located on back of 15.5-IN ANIMATED PORTRAIT.
3. Place 3 brand new AA alkaline batteries into the battery compartment and replace cover.
4. Place power switch located on back of item to the "ON" position to operate in sound and motion activation mode.
5. Make a loud sound (clap), or wave hand in front of the 15.5-IN ANIMATED PORTRAIT to activate the scary sequence!

NOTE: Leave switch in the "OFF" position when not in use.

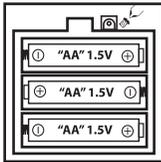

BATTERY INSTRUCTIONS AND CAUTIONS

- Contains (3) AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
- Battery installation and removal should be performed by an adult. Batteries are harmful if swallowed. Keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

**⚠ WARNING!
CHOKING HAZARD -
SMALL PARTS.**
This item is not a toy.
For decoration only.
This product is intended
for use by persons 15
years of age and older.
Not intended for use by
children 14 years of age
and younger.

HAUNTED LIVING
and logo design are
trademarks or
registered trademarks
of LF, LLC.
All rights reserved.

AGES 15+

MADE IN CHINA

SS22396



**If you
have any
questions or
problems,**

please call our customer
service department at
888-251-1006, 8 a.m. -
8 p.m., EST, Monday -
Sunday. You could also
contact us at
partsplus@lowes.com.



PARA USO EN
INTERIORES

HAUNTED LIVING™

#5269288

Modelo #61081



MOVIMIENTO
Y SONIDO
ACTIVADO

RETRATO ANIMADO DE 39,37 CM ESTE RETRATO EMERGENTE PROMETE IMPRESIONAR.



LUCES
LED



EFFECTOS
DE SONIDO

Incluye: (1) decoración de RETRATO ANIMADO DE 39,37 CM.

26 cm x 11,5 cm x 39,49 cm

Todos los materiales nuevos: plástico.

Solo se puede lavar en la superficie.




INCLUYE
BATERÍAS

INSTRUCCIONES DE FUNCIONAMIENTO

MANTENGA TODAS LAS PIEZAS DE PLÁSTICO Y
ALAMBRE FUERA DEL ALCANCE DE LOS NIÑOS.

1. Retire con cuidado y deseche el cable y el embalaje “Pruébeme”.
2. Utilice un destornillador Phillips/de cabeza en forma de cruz pequeño para abrir el compartimiento de la batería ubicado en la parte posterior del RETRATO ANIMADO DE 39,37 CM.
3. Coloque 3 baterías alcalinas AA nuevas en el compartimiento de las baterías y vuelva a colocar la tapa.
4. Coloque el interruptor de encendido situado en la parte posterior del artículo en la posición de encendido para que funcione en modo de activación por sonido y movimiento.
5. Haga un sonido fuerte (aplausos) o agite la mano en frente del RETRATO ANIMADO DE 39,37 CM para activar la secuencia aterradora.

NOTA: deje el interruptor en la posición de apagado cuando no esté en uso.

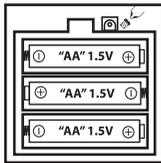

INSTRUCCIONES DE LA BATERÍA

- Contiene (3) baterías alcalinas AA de 1.5 voltios. Las baterías no son recargables.
- La instalación y el retiro de las baterías deben estar a cargo de un adulto. Las baterías son dañinas si se tragan. Mantenga las baterías alejadas de los niños.
- Retire las baterías cuando la bombilla no esté en uso.
- Utilice únicamente las baterías recomendadas en las instrucciones.
- No mezcle baterías nuevas con baterías usadas.
- No mezcle batería alcalinas, cinc-carbono, níquel cadmio, recargables o diferentes tipos de baterías.
- Tenga cuidado de insertar las baterías con la polaridad correcta (+/-) como se indica.
- Retire todas las baterías agotadas.
- Las baterías recargables se deben recargar solo con la supervisión de un adulto.
- Las baterías recargables deben retirarse del artículo antes de cargarlas.
- Las baterías que no son recargables no deben recargarse.
- Los terminales de alimentación no deben hacer corto circuito.
- Deseche siempre las baterías agotadas de forma adecuada.
- NO incinere las baterías, ya que podrían filtrarse o explotar.
- NO incinere las baterías, ya que podrían filtrarse o explotar.

⚠️ ADVERTENCIA!
**RIESGO DE ASFIXIA –
PIEZAS PEQUEÑAS.**
Este artículo no es un juguete. Solo para decoración. Este producto está diseñado para personas mayores de 15 años. No está diseñado para niños de 14 años o menores.



**Si tiene
alguna
pregunta o
problema,**

llame a nuestro Departamento de Servicio al Cliente al 888-251-1006, de lunes a domingo de 8 a.m. a 8 p.m., hora estándar del Este. También puede ponerse en contacto con nosotros en partsplus@lowes.com.

HAUNTED LIVING y el diseño del logotipo son marcas comerciales o marcas registradas de LF, LLC. Todos los derechos reservados.

**MAYORES DE
15 AÑOS**

HECHO EN CHINA

SS22396